

Warning:

The following work must only be carried out by a qualified electrician. Use only original spare parts.

Maintenance after 1440 operating hours or 6 months

1. Safety instructions

- **Disconnect the power supply:** Switch off the appliance and unplug it before starting any maintenance work.
- **Allow to cool:** Ensure that the roller's grille has cooled down completely to avoid burns.
- **Wear protective equipment:** Wear suitable protective gloves and, if necessary, safety goggles.

2. Materials required

- Food-safe cleaning product
- Soft cloths or sponges
- Food-safe grease
- Tools for checking chain tension (e.g. spanner)

3. Cleaning the chains

- Gain access to the chains: Remove the housing cover to expose the chains.
- Carry out cleaning:
- Remove grease and food residues from the chains using a soft cloth and a food-safe cleaning agent.
- Then wipe with clean water to remove any cleaning agent residue.
- Leave to dry: Allow the chain to dry completely in the open air to prevent corrosion.

4. Re-lubricating the chains

- Apply lubricant: Apply a thin layer of food-grade grease evenly along the entire length of the chains.
- Removing excess grease: Wipe off any excess lubricant with a clean cloth to prevent build-up.

5. Checking and adjusting the chain tension

- Checking chain tension: Check the tension of the chain by applying light pressure; it should be taut but not overstretched.
- Adjusting the tension:
- If the chain is too loose, tighten the tensioning screws in accordance with the manufacturer's instructions.
- If the chain is too tight, loosen the tension accordingly.
- Carry out a functional test: After adjusting the chain tension, switch the appliance on briefly to check that the chain runs smoothly.

Care instructions for the sausage grill



Item number 104922



6. Final notes

- Reassemble the housing: Fit the covers and housing parts correctly.
- Cleaning the outer casing: Clean the outer surfaces with a damp cloth and a mild detergent.
- Putting the appliance into operation: Plug in the power cord and switch on the scooter grill in accordance with the operating instructions.

Chain tensioner

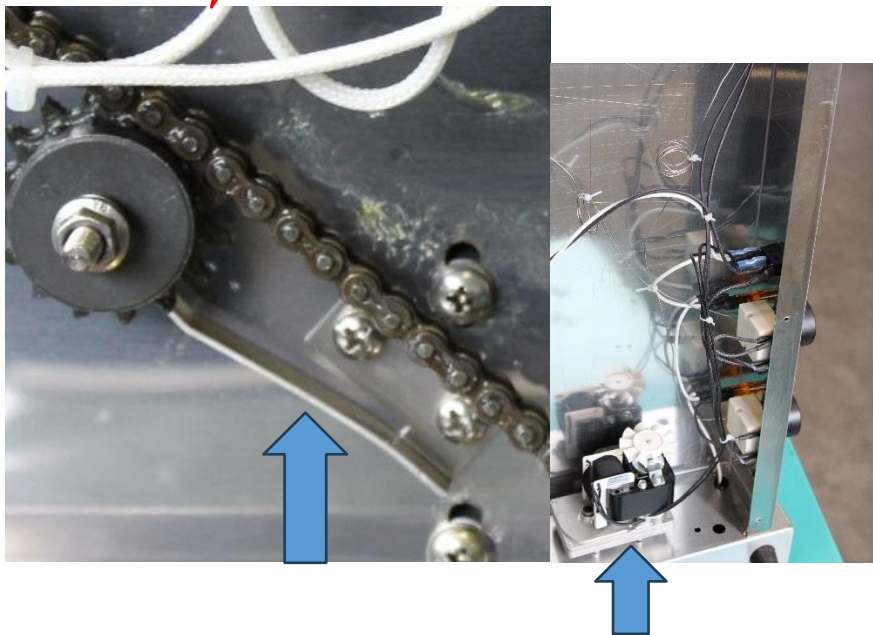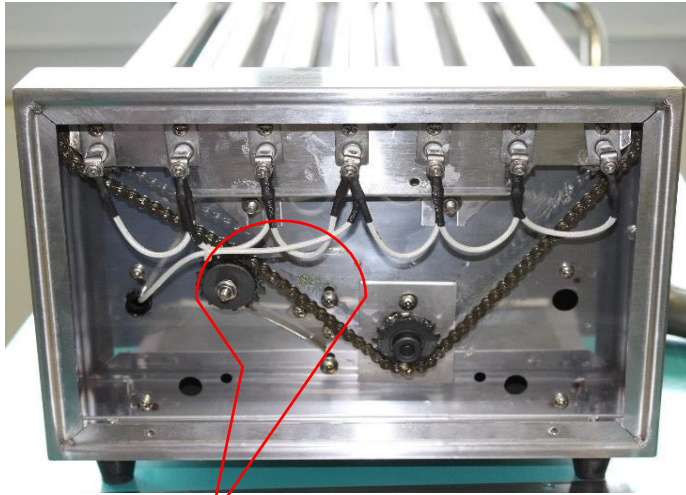

Check the motor every 5,840 operating hours and replace it if there are signs of wear.