

Easy T2 - T3 - T4 - S4-1501 - S4-1501 - S4T1-1501



**110895 - 110906 - 110897
110907 - 110899 - 110898**

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 2.0

Date of preparation: 2026-04-29

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions	3
1.3	Intended Use	6
1.4	Unintended Use	6
2	General information	7
2.1	Liability and Warranty	7
2.2	Copyright Protection	7
2.3	Declaration of Conformity	7
3	Transport, Packaging and Storage	8
3.1	Delivery Check	8
3.2	Packaging	8
3.3	Storage	8
4	Technical Data	9
4.1	Technical Specifications	9
4.2	List of Components of the Appliance	13
4.3	Functions of the Appliance	14
5	Installation and operation	14
5.1	Installation	14
5.2	Operation	16
6	Cleaning and Maintenance	20
6.1	Safety Instructions for Cleaning	21
6.2	Cleaning	21
6.3	Maintenance	22
7	Possible Malfunctions	22
8	Disposal	24



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

EN

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- Ensure that no liquids come into contact with the device's connectors or the mains plug. Moisture can lead to electrical hazards or damage to the device.
- Always disconnect the device from the mains supply before carrying out any installation or dismantling work, cleaning, maintenance, or if the device is not going to be used for an extended period. To do this, pull the mains plug fully out of the socket.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.

- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Fire hazard / flammable materials hazard / explosion hazard!

- Do not use any electric devices in the appliance.
- Do not store nor use petrol or other flammable liquids and gases in the vicinity of this or any other appliance. Those gases may cause fire or explosion hazard.
- Do not put into the appliance any explosive materials, like sprays filled with flammable propellants. Contents of containers filled with flammable gases and liquids may leak in low temperatures, and the contents may catch fire from sparks generated by an electric appliance. Explosion hazard!
- In the case of coolant leakage, pull the plug from the socket. Remove all sources of ignition in the vicinity, ventilate room and contact technical service. Avoid coolant getting in contact with eyes, as it may cause serious eye damage.
- Never use any flammable liquids for cleaning the appliance or its parts. Gases released may cause fire or explosion hazard.
- In the case of fire, disconnect the appliance from the power supply before attempting adequate fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.
- Defrosting process may not be sped up with mechanical means or heat energy sources (candles or heaters) nor with any other means. Vapour produced may cause short-circuit and too high temperatures may damage the appliance.
- All ventilation slots should not be obstructed during operation.
- Never attempt to damage cooling installation of the appliance.

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

EN

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

- Do not drill hole in the appliance nor install any objects on it.
- Do not place any heavy objects on the appliance.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Cooling of suitable food products.

This appliance is intended for use in ambient temperatures up to 40 °C.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

EN

The following is an unintended use:

- Storing flammable or explosive objects and liquids, such as ether, petroleum or adhesives;
- Storing explosive materials, like sprays filled with flammable propellants;
- Storing pharmaceutical products or preserved blood;
- Storing live pets.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Version / Characteristics of Refrigerated Counters

- Cooling unit type: industrial refrigerated counter
- Design: horizontal
- Material: stainless steel
- Work surface material: stainless steel
- Rim: no
- Cooling: circulating air
- Cooling cabinets and drawers
- Cabinets/drawers in standard format: 1/1 GN
- Climate class: 5
- GWP index: 3
- Temperature range: 0–8°C
- Temperature control: electronic, in 0.1°C increments
- Control: electronic, key
- Thermostat: yes
- Digital display: yes
- ON/OFF switch: yes
- Indicator light: ON/OFF
- Evaporation of condensed water: yes
- Door type: leaf door
- Door hinge: right/left
- Possibility of changing door hinge side: no
- Distance between guide rail pairs: 55 mm
- Height adjustment of guide rails: yes
- Load-bearing capacity per guide rails pair, max.: 30 kg
- Height adjustable feet: no
- Swivel castors: 4 or 6 castors, 2 with brakes

Name:	Refrigerated counter Easy T2
Art. No.:	110895
Number of cabinets:	1
Cabinet dimensions (W x D x H), in mm:	810 x 570 x 565
Number of doors:	2
Number of guide rail pairs:	2
Number of grates:	2
Grate dimensions (W x D x H), in mm:	325 x 530 x 45
EEI:	32,96
Energy efficiency class:	B (EU Nr. 2015 / 1094)
Energy consumption, kWh/24 hours:	2,05
Energy consumption, kWh/year:	748
Coolant / amount, in kg:	R290 0,042
Connected load:	0,25 kW 220-240 V 50 Hz
Dimensions (W x D x H), in mm:	1350 x 700 x 850
Weight, in kg:	71,8

Name:	Refrigerated counter Easy T3
Art. No.:	110906
Number of cabinets:	1
Cabinet dimensions (W x D x H), in mm:	810 x 570 x 565
Number of doors:	3
Number of guide rail pairs:	3
Number of grates:	3
Grate dimensions (W x D x H), in mm:	325 x 530 x 45
EEI:	31,26
Energy efficiency class:	B (EU Nr. 2015 / 1094)
Energy consumption, kWh/24 hours:	2,15
Energy consumption, kWh/year:	785
Coolant / amount, in kg:	R290 0,042
Connected load:	0,25 kW 220-240 V 50 Hz
Dimensions (W x D x H), in mm:	1800 x 700 x 910
Weight, in kg:	88,4

Technical Data

Name:	Refrigerated counter Easy T4
Art. No.:	110897
Number of cabinets:	1
Cabinet dimensions (W x D x H), in mm:	1900 x 570 x 565
Number of doors:	4
Number of guide rail pairs:	4
Number of grates:	4
Grate dimensions (W x D x H), in mm:	325 x 530 x 45
EEL:	48,43
Energy efficiency class:	C (EU Nr. 2015 / 1094)
Energy consumption, kWh/24 hours:	3,65
Energy consumption, kWh/year:	1.332
Coolant / amount, in kg:	R290 0,06
Connected load:	0,34 kW 220-240 V 50 Hz
Dimensions (W x D x H), in mm:	2250 x 700 x 850
Weight, in kg:	110,4

EN

Name:	Refrigerated counter Easy S4-1501
Art. No.:	110907
Number of drawers:	4
Drawer dimensions (W x D x H), in mm:	300 x 530 x 160
EEL:	37,0
Energy efficiency class:	C (EU Nr. 2015 / 1094)
Energy consumption, kWh/24 hours:	2,05
Energy consumption, kWh/year:	840
Coolant / amount, in kg:	R290 0,042
Connected load:	0,25 kW 220-240 V 50 Hz
Dimensions (W x D x H), in mm:	1345 x 700 x 850
Weight, in kg:	90,4

Name:	Refrigerated counter Easy S6-1501
Art. No.:	110899
Number of drawers:	6
Drawer dimensions (W x D x H), in mm:	300 x 530 x 160
EEL:	36,8
Energy efficiency class:	C (EU Nr. 2015 / 1094)
Energy consumption, kWh/24 hours:	2,53
Energy consumption, kWh/year:	923
Coolant / amount, in kg:	R290 0,042
Connected load:	0,25 kW 220-240 V 50 Hz
Dimensions (W x D x H), in mm:	1800 x 700 x 850
Weight, in kg:	119,6

EN

Name:	Refrigerated counter Easy S4T1-1501
Art. No.:	110898
Number of cabinets:	1
Cabinet dimensions (W x D x H), in mm:	335 x 570 x 565
Number of doors:	1
Number of guide rail pairs:	1
Number of grates:	1
Grate dimensions (W x D x H), in mm:	325 x 530 x 45
Number of drawers:	4
Drawer dimensions (W x D x H), in mm:	300 x 530 x 160
EEL:	36,8
Energy efficiency class:	B (EU Nr. 2015 / 1094)
Energy consumption, kWh/24 hours:	2,53
Energy consumption, kWh/year:	923
Coolant / amount, in kg:	R290 0,042
Connected load:	0,25 kW 220-240 V 50 Hz
Dimensions (W x D x H), in mm:	1800 x 700 x 855
Weight, in kg:	107,6

Technical Data

More information on the appliance is available in our website www.bartscher.com or, pursuant to the Regulation (EU) 2015/1094, in our product data base at <https://energy-label.ec.europa.eu/>. Enter article number for a model.

4.2 List of Components of the Appliance

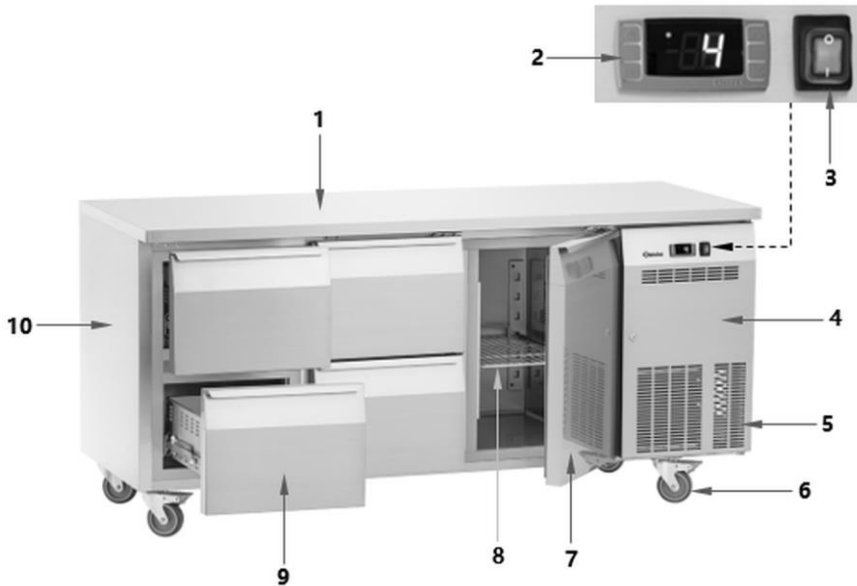


Fig. 1

- | | |
|--|-------------------------|
| 1. Worktop surface | 5. Ventilation openings |
| 2. Digital temperature controller | 6. Swivel castors |
| 3. ON/OFF switch with integrated power indicator light (green) | 7. Door |
| 4. Technical cabinet | 8. Grate |
| 9. Drawer | 10. Housing |

EN

4.3 Functions of the Appliance

Food products or meals prepared in suitable containers may be cooled and stored through a specified time with suitable temperature settings.

5 Installation and operation

5.1 Installation



CAUTION!

Incorrect installation, positioning, operation, maintenance or misuse of the appliance may lead to personal injury or property damage.

Positioning and installation, as well as repairs may be performed by authorised technical service only and in compliance with the applicable national law.

EN

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.

Installation and operation

- Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Do not place the appliance in direct sunlight or in the vicinity of heat sources (cooker, radiator, heating devices, etc.). Heat sources may negatively affect power consumption, and restrict functions of the appliance, too.
- Place the appliance so that sufficient air circulation is ensured. Do not block nor cover ventilation openings in the rear wall of the appliance.
- Leave at least 10 cm clearance from walls and other objects.
- In order to avoid damage to the compressor, do not tilt the appliance more than 45° when positioning or transporting it.
- To install the appliance, perform the following steps:
 - Remove the packaging of the appliance, except for the pallet.
 - Lift the appliance with the lift truck and move it to the planned installation location. Be careful not to damage the appliance. Control the stability in order not to lose the balance of the appliance.
 - Do not drag nor push the appliance, as it may fall down. This may also cause the damage to external elements or swivel castors.
 - as soon as the appliance is in the planned location, remove the pallet.
 - attach the swivel castors with brakes
 - Remove the protective film from the appliance at the end.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- Prior to first use, the appliance should be installed and left standing upright for at least 2 hours, before it is connected to power supply.
- After a power failure or when the plug is removed from the socket, do not reconnect the appliance to power supply for at least 5 minutes.

5.2 Operation

Tips for the User

EN

- Fill the refrigerated counter only when the digital display shows that the required temperature has been reached.
- Do not fill the refrigerated counter with warm food products nor liquids, as well as uncovered food products.
- Use seal-tight containers for storing food products and beverages, to protect the aromas of the food products and beverages and avoid mixing the aromas inside the refrigerated counter.
- During the first filing or full filling of refrigerated counter always open and fill only one cabinet to avoid tilting of the appliance.
- While placing food products in the refrigerated counter keep in mind that sufficient space must be maintained between the internal walls of the device and stored food products to assure free circulation of air inside the appliance.
- The more items in the refrigerated counter, and the longer the doors/drawers are kept open, the higher the energy consumption.
- To limit loss of cold air minimize the opening time of doors/drawers. Moreover, the doors/drawers should not be opened too often.
- To avoid occurrence of unpleasant odour in the device follow the recommended storage periods of food products.

Appliance Preparation

1. Before the first use, clean the appliance and its accessories observing instructions in section 6 'Cleaning'.
2. To end with, thoroughly dry the appliance and accessories.
3. Connect the appliance into a suitable single socket.
4. Press the ON/OFF switch to 'I' position, to switch the appliance on.

The green power indicator light in the ON/OFF switch lights up.

After switching on, the ❄️ and 🌀 LEDs are lit in the digital display. Then the factory set temperature of is shown in the digital display.

5. Let the appliance reach the required operating temperature before you place food products in the refrigerated counter.

Control elements and displayed messages



EN

Button	Functions
SET	Showing the set value, selection of parameters in the programming mode or confirmation of the process
❄️	Manual starting of the defrosting
▲	Selection of the parameter code in the programming mode, increase of the displayed value
▼ AUX	Selection of the parameter code in the programming mode, decrease of the displayed value

LED indicators

The LED indicators in the digital display show the status of the active function:

LED	Status of the active function	Meaning
	illuminates	activated compressor
	flashes	in delay
	illuminates	defrosting in progress
	flashes	defrosting delay
	illuminates	fan activated
	flashes	delay after defrosting
	illuminates	degrees Celsius temperature unit indicator
	flashes	in the programming mode
	illuminates	degrees Fahrenheit temperature unit indicator
	flashes	in the programming mode

EN

Displaying the set value

1. Press the **SET** button shortly, to display the set value.
2. Press the **SET** button again or wait 5 seconds, to return to the previous message.

Changing the set value (i.e. the required temperature)

1. Press the **SET** button and hold it pressed for at least 3 seconds.

The set value is displayed and the  or  LED indicator flashes on the digital display.

2. The value may be increased or decreased with  or  button until the digital display shows the required value.
3. Confirm the new value with the **SET** button or wait 10 seconds — then, the value will be stored automatically.

Automatic defrosting

The appliance defrosts automatically 4 times over 24-hour period. The timer initiates with the first activation.

1. If there is a need for the change of automatic defrosting phases, press the  button and hold it for more than 2 seconds.

The digital display shows the  symbol.

The defrosting cycle is immediately initiated; in such a case, the subsequent defrosting cycle is executed after 6 hours.

Manual defrosting

Additionally, aside of the automatic defrosting, manual defrosting may be activated any time.

1. Press the  button and hold it pressed for more than 2 seconds.

The manual defrosting is initiated.

The digital display shows the  symbol.

NOTE!

 
Water generated during defrosting evaporates automatically.

NOTE!

Subsequent settings or parameter changes should be introduced by service personnel only.


Button combinations

Concurrent pressing of two buttons enable activation/deactivation of a number of functions.

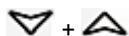


Button locking or unlocking:

 - to lock, press both buttons concurrently and hold them pressed for more than 3 seconds, until the digital display shows the "OFF" message
- to unlock, press these buttons and hold them pressed for more than 3 seconds, until the digital display shows the "ON" message

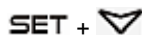

Moving to the programming mode:

 - press both buttons concurrently and hold them pressed for more than 3 seconds; when the °C or °F LED indicators flash, subsequent settings may be introduced

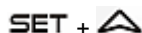

Return to the previously displayed message:

- press these buttons, to leave the programming mode and return to the previously displayed message (value of temperature inside the appliance)

EN

Switching the appliance off

1. If the appliance is not to be used for a longer period of time, set the ON/OFF switch to the "O" (OFF) position.
2. Disconnect the appliance from the mains socket (pull the plug out).

6 Cleaning and Maintenance

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Clean the appliance regularly.
2. Remove all objects from the appliance and store them temporarily in a cool room or in a refrigerator.
3. Remove all shelves from the appliance (if the appliance is equipped with them).
4. Clean the shelves with mild washing agent and soft cloth or sponge in warm water.
5. Rinse the shelves with clean water and dry thoroughly with soft cloth.
6. Clean the door shelves and drawers regularly from the inside with a food-grade cleaning disinfectant.
7. Clean the appliance from the outside with a soft, damp cloth.
8. Finally, dry thoroughly all washed surfaces.
9. After cleaning, leave the doors/drawers open for the appliance to dry completely.
10. Regularly remove dust and fibres from the rear wall of the appliance with a soft brush or dust brush.
11. If the appliance is not to be used for a longer period of time, clean it according to the instructions above. Leave the appliance open to prevent generation of unpleasant odours inside.

6.3 Maintenance

The following operations should be regularly performed by a qualified specialist, to provide for prolonged and correct operation of the refrigerating unit:

- cleaning the condenser (front right compartment) with a suitable tool (vacuum cleaner or a soft brush);
- checking of electrical connections;
- checking of the thermostat and the sensor.

7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. The works may only be performed by suitably qualified technical personnel.

When malfunction cannot be removed, contact the technical service. In such a case, provide article number, model and serial number. You will find this information on the rating plate.

EN

Problem	Possible cause	Solution
Appliance does not work	Incorrectly connected plug	Remove the plug and insert it properly into a socket
	Electric power supply safety fuse damaged	Check the fuse, connect the appliance to another socket and check it
	No electric power supply	Check the electric power supply
	ON/OFF switch has not been operated	Switch the appliance on

Possible Malfunctions

Problem	Possible cause	Solution
Insufficient cooling efficiency	Incorrect setting temperature	Check the temperature setting, change if needed
	Evaporator blocked due to ice formation	Defrost the appliance
	Condenser obstructed with dust	Clean the condenser thoroughly
	Incorrectly closed doors/drawers	Close doors/drawers tightly, check the seals
	Direct sunlight or heat sources in immediate vicinity	Move the appliance away from heat sources, or install the appliance in a different location
	Poor air circulation around the appliance	Keep sufficient clearance from walls or other objects
	Operating temperature too high	Provide for sufficient ventilation at the installation site or install the appliance in a place with lower ambient temperature
	Products placed inside the appliance are too hot	Leave food products to cool down before you place them inside the appliance
	Products incorrectly arranged in the appliance	Provide for sufficient clearance between objects stored inside the appliance; do not cover ventilation openings
	Appliance is overfilled	Avoid overfilling of the appliance, remove the excess of food product
Leak from the appliance	Appliance is not placed on even surface	Place the appliance on even surface
	Clogged drain pipe	Clean drain pipe
	Water tray is damaged	Contact the service company

Problem	Possible cause	Solution
Strange or loud noises	Appliance is not placed on even surface	Place the appliance on even surface
	Doors/drawers are not closed	Close doors/drawers tightly
	Loose screws or nuts	Check and tighten all screws and nuts
	Appliance touches walls or other objects	Keep sufficient distance from walls/other objects

8 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

EN

Electrical appliances should be returned to designated collection points.

Coolant

The propellant used in the appliance is flammable. It should be utilised pursuant to national regulations in force.