

WB1001



120417

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 2.0

Date of preparation: 2026-04-20

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions	3
1.3	Intended Use	6
1.4	Unintended Use	6
2	General information	7
2.1	Liability and Warranty	7
2.2	Copyright Protection	7
2.3	Declaration of Conformity	7
3	Transport, Packaging and Storage	8
3.1	Delivery Check	8
3.2	Packaging	8
3.3	Storage	8
4	Technical Data	9
4.1	Technical Specifications	9
4.2	Functions of the Appliance	10
4.3	List of Components of the Appliance	11
5	Installation and operation	12
5.1	Installation	12
5.2	Operation	13
6	Cleaning and Descaling	16
6.1	Safety Instructions for Cleaning	16
6.2	Cleaning	16
6.3	Descaling	17
7	Possible Malfunctions	18
8	Disposal	18



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

EN

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- Ensure that no liquids come into contact with the device's connectors or the mains plug. Moisture can lead to electrical hazards or damage to the device.
- Always disconnect the device from the mains supply before carrying out any installation or dismantling work, cleaning, maintenance, or if the device is not going to be used for an extended period. To do this, pull the mains plug fully out of the socket.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.

- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

Hot Surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

EN

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Gentle heating of rolls and sausages using steam

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- heating-up unsuitable food products.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Hot Dog Steamer WB1001
Art. No.:	120417
Material:	stainless steel
Volume:	up to 100 hot dog sausages up to 15 hot dog rolls
Water tank volume, in L:	4,4 - 9,2
Heating-up time when filled with 60°C water 9.2 L, in minutes approx.:	45
Temperature range, min.-max., in °C:	25 - 100
Top shelf dimensions (W x D), in mm:	300 x 300
Bottom shelf dimensions (W x D), in mm:	2x160 x 2x205
Degree of protection:	1
Degree of protection:	IPX0
Power supply:	1,2 kW 220-240 V 50/60 Hz
Dimensions (W x D x H), in mm:	400 x 430 x 505
Weight, in kg:	10,5

We reserve the right to implement technical modifications.

Version / characteristics


- Control: rotary control knob
- Temperature control: thermostatic | stepless
- ON/OFF switch
- Door type: sliding door
- Door material: glass
- Water tray for air humidification
- Indicator lights:
 - adding water
 - ON/OFF
- The set includes:
 - 1x metal sheet insert with grate
 - 2x perforated plates

4.2 Functions of the Appliance

EN

With the appropriate temperature setting of the hot-dog steamer, water in the water tray is heated up. The resulting steam can heat up and keep warm up to 100 sausages and 15 hot-dog rolls.

4.3 List of Components of the Appliance

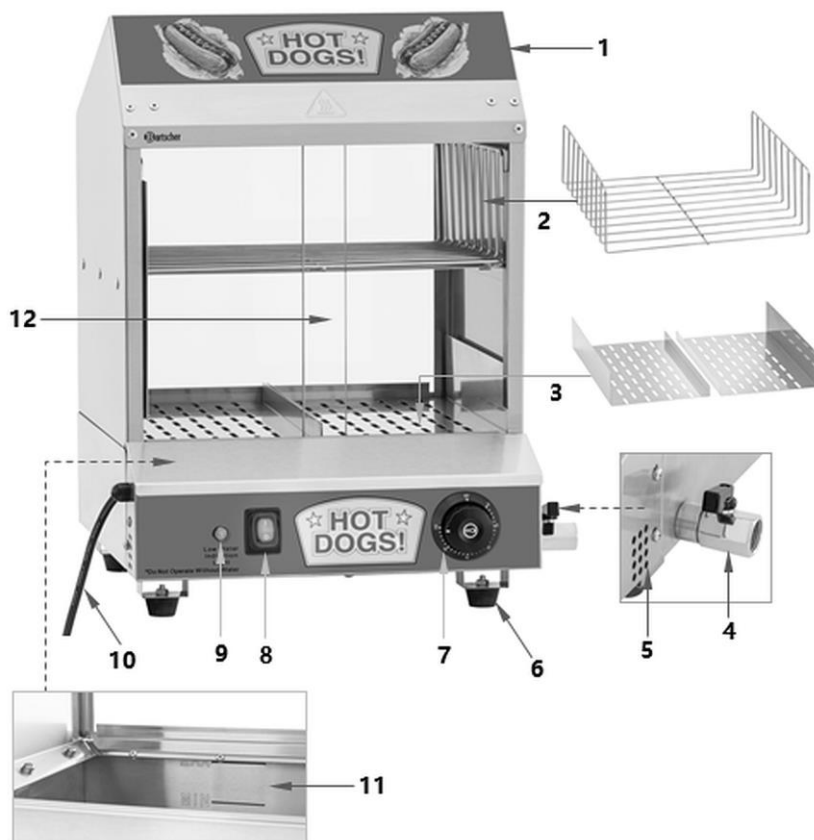

EN

Fig. 1

- | | |
|---------------------------------------|--|
| 1. Housing | 2. Grate |
| 3. Perforated plates (2x) | 4. Water drain tap |
| 5. Ventilation openings | 6. Feet (4x) |
| 7. Temperature controller | 8. ON/OFF switch with integrated power indicator light (green) |
| 9. No water indicator light (orange) | 10. Power cord |
| 11. Water tray for air humidification | 12. Glass sliding doors (2x) |

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Leave at least 10 cm clearance from flammable walls and items.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- Do not use the appliance with an external timer or remote control.

5.2 Operation

Before use

1. Prior to first use, thoroughly clean the appliance and equipment (grate, perforated plate) according to instructions in section 6 'Cleaning'.
2. Dry all the cleaned parts and surfaces with a soft, lint-free cloth.
3. Pour approx. 7.5 litres of water into the water tray.



Fig. 2

ATTENTION!

Water level should always be between MIN and MAX marking on the water tray.

HINT!

To reduce the heating-up phase, pour warm water.

EN

4. Place the perforated plate on the water tray.
5. Place the grate on the upper metal sheet insert.
6. Close the sliding glass door of the appliance.

No water indicator light

ATTENTION!

During operation regularly check water level in the water tray. Always pour the appropriate volume of water to maintain the required water level.

The appliance should not run dry.

In the water tray there is a float switch in a pipe. When the water level is too low, the no water indicator light is lit solid. It is necessary to add water.

In such a case heating up is not possible.

While adding water, the float switch in the pipe goes up. After reaching the required water level the float switch opens the electric circuit and the no water indicator light goes off.

The appliance is heating up again.

ATTENTION!

If the appliance was running dry, you should turn it off and leave it to cool down completely before refilling with water. If you add water to the appliance running dry and it is still hot you can cause damage to the heating coil.

EN

Switching-On

1. Plug the device into a suitable single socket.
2. Switch the appliance on by setting the ON/OFF switch to 'I' position.

The green power indicator light in the ON/OFF switch lights up.

3. Set the temperature controller to the highest temperature 100°C to pre-heat the appliance.

The heater turns on and heats up water in the water tray.

Water heating-up time is approximately 45 minutes (if filling with 60°C water | 9.2 L).

The appliance is being preheated until steam is produced.

HINT!

The heating-up time can be different depending on the number and size of hot-dogs.

4. Rotate the temperature controller to the lower temperature setting.

5. Place the required number of hot-dog sausages. Arrange them on the perforated plates in the bottom part of the appliance.
6. Place the required number of hot-dog rolls on the grill grate in the top part of the hot-dog steamer.

HINT!

If you leave hot-dog rolls in the steamer for too long it may soak the rolls.



Fig. 3

7. When the rolls and sausages are warm, take them out of the steamer with the use of tongs.
8. Fill the hot-dogs according to taste.

EN

Switching the appliance off

1. If the appliance is not used, rotate the temperature control knob to '0' position.
2. Switch the ON/OFF switch to 'O' position.
3. Disconnect the appliance from the mains socket (pull the plug out).

6 Cleaning and Descaling

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

NOTE!

For cleaning and operating the device, use only water with a hardness of less than 5 °dH.

6.2 Cleaning

1. Clean the appliance regularly at the end of each working day, or more frequently, if needed.
2. Take the grate and perforated sheets out of the appliance.
3. Clean them with warm water, mild cleaning agent and a soft cloth or sponge.
4. Rinse cleaned elements in fresh water.
5. Those parts should be regularly sanitized with suitable food grade sanitizer.

Cleaning and Descaling

6. Drain the water from the water tray to a suitable container using the water drain tap.
7. Clean the water tray with warm water and a soft cloth.
8. Wipe the water tray with a clean cloth.
9. Use a soft, damp cloth to wipe the inside and the outside surface of the appliance. Use a mild cleaning agent if required.
10. Rinse the cleaned surfaces thoroughly with clean water to remove all traces of the cleaning agent.
11. Thoroughly dry the cleaned surfaces and elements with a soft cloth.

6.3 Descaling

1. Descale the **water tray** regularly, **including the heating element and float switch**.
2. Use only a **citric acid-based descaler** for this purpose. Follow the manufacturer's instructions for the descaler used.
3. Carry out the following steps in sequence:
 - dissolve the descaler in water according to the manufacturer's instructions;
 - pour the solution into the water tray/Tub.
 - Leave the descaler to work for approx. 20 minutes.
 - Heat the tub whilst the solution is taking effect.
 - Then empty the tub completely.
 - Rinse the tub thoroughly with fresh water to remove all descaling agent residue.

IMPORTANT!

Regular descaling extends the service life of the appliance and ensures that the heating element and float switch function correctly. Damage caused by limescale-clogged components is not covered by the warranty.

7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. The works may only be performed by suitably qualified technical personnel.

When malfunction cannot be removed, contact the technical service. In such a case, provide article number, model and serial number. You will find this information on the rating plate.

Malfunction	Possible cause	Solution
Appliance does not heat up	Plug not connected properly	Insert the plug correctly
	Electric power safety fuse tripped	Check the fuse, connect the appliance to another socket and check it
	Damaged power cable	Contact the service company
	Temperature is not set	Set the required temperature
The appliance does not produce steam	The set temperature is too low	Correct the temperature setting
	Insufficient water level in the water tray	Check the water level, refill with water, if required.

EN

8 Disposal

Electrical Appliance

	Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.
---	---

Electrical appliances should be returned to designated collection points.