

700



150184

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 4.0

Date of preparation: 2026-02-24

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions	3
1.3	Intended Use	6
1.4	Unintended Use	6
2	General information	7
2.1	Liability and Warranty	7
2.2	Copyright Protection	7
2.3	Declaration of Conformity	7
3	Transport, Packaging and Storage	8
3.1	Delivery Check	8
3.2	Packaging	8
3.3	Storage	8
4	Technical Data	9
4.1	Technical Specifications	9
4.2	List of Components of the Appliance	10
4.3	Functions of the Appliance	10
5	Installation and operation	11
5.1	Installation	11
5.2	Operation	12
6	Cleaning	16
6.1	Safety Instructions for Cleaning	16
6.2	Cleaning	17
7	Disposal	18



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.

- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

Safety

Operating personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Making fruit and vegetable juices.

The appliance is not designed for continuous operation in industrial applications.

This appliance is intended for use in households and similar places, e.g.:

- in employee canteens in shops, offices, and similar areas;
- on farms;
- by customers in hotels, motels, and other typical accommodation establishments;
- in lodging-houses.

EN

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Processing of unsuitable food products.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Juicer 700
Item No.:	150184
Material:	stainless steel, plastic
Speed levels:	2
Rotational speed (RPMs), max.:	20.000
Diameter of filling shaft, in mm:	70
Volume of plastic beaker, in l:	1
Power supply:	0,8 kW 220-240 V 50/60 Hz
Dimensions (W x D x H) in mm:	300 x 240 x 430
Weight in kg:	4,3

We reserve the right to implement technical modifications!

EN

Version / Characteristics

- Designed for: soft and hard fruit or vegetables
- ON/OFF switch: yes
- Safety switch: yes
- Control: rocker switch
- Properties:
 - high-performance, low-noise motor
 - fine sieve made of stainless steel for perfect fruit enjoyment
 - individual parts are dishwasher-safe (except for base unit)
- The set includes:
 - 1 plastic beaker

4.2 List of Components of the Appliance



Fig. 1

- | | |
|--------------------|----------------------------|
| 1. Dregs container | 2. Pusher |
| 3. Lid with hopper | 4. Plastic beaker |
| 5. Motor drive | 6. Speed levels switch |
| 7. Feet (4x) | 8. Base unit / motor block |
| 9. Safety lever | 10. Sieve base |
| 11. Sieve basket | |

4.3 Functions of the Appliance

The high-performance juicer processes vegetables and fruit at 20,000 revolutions per minute into juice.

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Leave at least 20 cm clearance from flammable walls and items.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.

5.2 Operation

Tips for the User

Preparation of fruit and vegetables

- Before you proceed to squeeze the juice, wash the fruit and vegetables thoroughly. There is no need to peel off the vegetables with thin peel. You may rub it through with a sponge to remove possible soiling or wax films.
- Fruit and vegetables with hard peel, e.g. melons, pineapples or citrus fruit should be peeled off.
- To obtain better results and better taste, use only fresh fruit or fresh vegetables.
- Slice large fruit, like melons, in strips.
- Some stones of citrus fruit may be bitter. Remove the stones before you proceed to squeezing the juice.
- Remove the seeds and stones of stone fruit, like mango, papaya, etc., to avoid damaging the blades.

Indications and tips

- When squeezing juice from various fruit and vegetables, it may be helpful to create different variations/combinations, e.g. when squeezing apple and orange juice, it is best to start with soft fruit (oranges) and then proceed with the hard fruit (apples). Thus, the best juice yield will be obtained.
- When squeezing juice from fresh herbs, for example, mint or parsley, they should be processed in the so-called 'meantime', that is between squeezing juice from fruit and vegetables, to obtain the possibly best yield. If the amount of herbs is small, they should be squeezed together with a chunk of a fruit or vegetable.
- Fruit that contain starch (bananas, papaya, figs, avocado, mango, etc.) are difficult to squeeze juice (the produced mousse may lead to clogging of the sieve basket). It is best to prepare these types of fruit in a food processor or a blender. If, however, a juice needs the banana taste, banana should be squeezed first or second in the line. Thanks to blending with other juices, the banana nectar may drip a bit easier. Though, there may be frothing present in the process.
- When squeezing juice from small fruit, for example, grapes or strawberries, place them in the appliance in the handful size of portions and avoid throwing them in one by one. This helps to obtain better results.
- Please remember that red beets dye all other fruit and vegetables. When producing many different juices, the red beet juice should be squeezed at the end, to avoid dyeing all other juices.
- The apple juice will quickly acquire a bronze colour in the open air; thus, add a drop of lemon juice.
- The juice is best served directly after preparation, as with time in the open air juices lose their tastes and nutritional values.
- Never put ice cubes nor frozen fruit in the hopper.

Before the first use

1. Before the first use, thoroughly clean the detachable elements of the appliance (lid, pusher, sieve base, sieve basket, plastic beaker and dregs container), observing indication in section 6 "Cleaning".
2. Rinse the washed elements in clean water and then wipe with a linen-free cloth or leave to dry in open air.

Assembly

1. Place the motor block (8, Fig. 1) on a suitable surface.
2. Place the sieve base (10) on the motor block (8).
3. Place the sieve basket (11) in the sieve base (10), so that it is securely fitted on the motor drive (5).
4. Now place the lid (3) on the sieve basket (11).
5. Secure the lid with the two safety levers (9), by turning them up and latching them in the recesses provided to this end in the lid (3).

When the safety levers are correctly locked, the safety switch on the motor block will be activated. As soon as the safety levers are released, the safety switch is deactivated and the motor is off.

EN

6. Place the dregs container (1) under the lid (3).
7. Place the plastic beaker (4) under the outlet in the sieve base (10).

Appliance start-up

1. Make sure that the juicer is assembled completely and correctly.
2. Prepare the vegetables and fruit; if needed, slice them into suitable chunks that will fit the juicer's hopper better.
3. Plug the appliance into a suitable single socket.
4. Use the rocker switch to select one of the speed levels:
 - upper position '1' of the switch is for high speed;
 - lower position '2' of the switch is for low speed;
 - **OFF** position is for switching the appliance off.

To obtain better results, use the '2' position for processing fruit and vegetable into juice.

5. After selection of the speed level, fill the hopper with selected fruit or vegetables and push them down with the pusher (2, Fig. 1).

WARNING! Injury hazard!

Never push the fruit nor vegetables with your fingers nor kitchen utensils. To this end, always use the designated pusher!

6. To squeeze the juice better, press the pusher down slowly.
7. Make sure that during squeezing, the plastic beaker (4) or any other container is under the outlet.

The squeezed fruit or vegetable juice flows out of the outlet in the sieve base (10) and is collected in the juice container.

The left-overs are collected in the dregs container (1).

CAUTION!

If the dregs container is overfilled, it may damage the appliance.

Observe the condition of the dregs container and empty it regularly!

8. When the dregs container (1) is full, switch the appliance off with the rocker switch set to **OFF** position.
9. Empty the dregs container (1) in order not to block the motor.

CAUTION!

The appliance may not operate continuously more than 1 minute at a time.

10. If this is a too short a time to prepare the juice, switching the appliance off and leave it to cool down before you continue the squeezing process.

Overheating protection

The appliance is equipped with the **overheating protection**. In the event of overheating or too long an operation, this feature switches the appliance off automatically, and switches it back on after cooling down (approx. 15 minutes).

Switching the appliance off

1. To switch the appliance off, move the rocker switch to the **OFF** position.
2. Disconnect the appliance from power supply (pull the plug out).

6 Cleaning

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

EN

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Clean the appliance regularly after the end of each working day, or more frequently if needed.
2. Clean all the detachable elements of the appliance (lid, pusher, sieve base, sieve basket, plastic beaker and dregs container) with a mild washing agent and warm water.

WARNING! Injury hazard!

The blades of the appliance sieve are very sharp.

Use a dish-washing brush for cleaning the sieve basket.

3. All the cleaned parts should be rinsed thoroughly with clear water.
4. Leave the parts to dry in open air or dry with a linen-free cloth.

NOTE: All detachable elements of the appliance are dishwasher-safe.

5. Clean the motor block and power cord with a soft, damp cloth only.

CAUTION!

Never attempt to wash the motor block under running water nor in the dishwasher.

EN

6. Wipe the motor block and power cord at the end with a soft cloth.
7. Assemble all the parts prior to subsequent use or storing the appliance.

7 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.