

Powerfresh



152002

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 1.0

Date of preparation: 2025-11-04

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions	3
1.3	Intended Use	5
1.4	Unintended Use	5
2	General information	6
2.1	Liability and Warranty	6
2.2	Copyright Protection	6
2.3	Declaration of Conformity	6
3	Transport, Packaging and Storage	7
3.1	Delivery Check	7
3.2	Packaging	7
3.3	Storage	7
4	Technical Data	8
4.1	Technical Specifications	8
4.2	List of Components of the Appliance	9
4.3	Functions of the Appliance	9
5	Installation and operation	10
5.1	Installation	10
5.2	Operation	11
6	Cleaning	18
6.1	Safety Instructions for Cleaning	18
6.2	Cleaning	19
7	Disposal	20



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.

- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

EN

Operating personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Making fruit and vegetable juices.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Processing of unsuitable food products.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

EN

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Juicer Powerfresh
Art. No.:	152002
Material:	plastic, stainless steel
Speed levels:	1
Rotational speed (RPMs), max.:	3.000
Volume of pulp container, in l:	7
Diameter of filling shaft, in mm:	80
Spout height, in mm:	210
Power supply:	0,7 kW 220-240 V 50/60 Hz
Dimensions (W x D x H), in mm:	245 x 450 x 535
Weight, in kg:	13,1

EN

We reserve the right to implement technical modifications.

Version / Characteristics

- Equipment connection: pluggable
- Designed for both hard and soft fruit and vegetables
- ON/OFF button: yes
- Safety switch: yes
- Control unit: button
- Properties:
 - XXL filling shaft for whole fruits (e.g. apples) or vegetables
 - Closed spout
 - High-performance, low-noise motor
 - Fine stainless steel sieve
 - Individual parts are dishwasher-safe (except for base unit)
- The set includes:
 - cleaning brush

4.2 List of Components of the Appliance



EN

- | | |
|----------------------------|----------------------------------|
| 1. Pulp container | 2. Operating elements |
| 3. Motor drive | 4. Locking bracket |
| 5. Base unit / motor block | 6. Base with rubber feet (5 pcs) |
| 7. Filling shaft | 8. Lid |
| 9. Cleaning brush | 10. Closable juice spout pipe |
| 11. Juice bowl | 12. Pusher |
| 13. Sieve basket | 14. Middle ring |

4.3 Functions of the Appliance

The appliance is designed for professional and efficient juice production. Powerful motor — in connection with large filling shaft and pulp container — makes it possible to effortlessly squeeze juice from whole fruit or vegetables.

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Leave at least 20 cm clearance from flammable walls and items.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.

5.2 Operation

Preparation of Fruit and Vegetables

- When preparing fruit and vegetables, observe the following indications and data in the below table.
- Before squeezing juice, fruit and vegetables should be washed thoroughly, to remove any traces of contamination and plant protective agents (pesticides).
- To obtain better results and better taste, use only fresh fruit or fresh vegetables.
- For processing with juicer, particularly suitable are: apples, pineapples, oranges, grapes, melons, carrots, celery roots, beets and tomatoes.
- Some food products, due to their compact texture, are not suitable for processing with the juicer (e.g. coconuts).
- There is no need to peel off the vegetables with thin peel. You may rub it through with a sponge to remove possible soiling or wax films.
- Fruit and vegetables with hard peel, e.g. melons, pineapples or citrus fruit should be peeled off.
- Remove thick skin off of, for example, lemons, oranges or pineapples.
- Remove seeds and stones of stone fruit, like mango, papaya, etc., to avoid damaging the blades in the sieve basket.
- Some stones of citrus fruit may be bitter. Remove the stones in such fruit before you proceed to squeezing the juice.
- Cut the fruit and vegetables that are too large into smaller pieces. Conical vegetables and fruits, such as carrots, introduce with a thin end first.

Fruit/Vegetables	Preparation
Carrots	Peel and leave in whole, introduce 2–3 pieces a time
Apples	Wash and leave in whole (remove leaf stalks and labels)
Beets	Wash, cut into suitable pieces
Strawberries	Remove leaf stalks
Grapes	Remove leaf stalks
Bananas	Remove skin
Mangos	Remove skin and stones
Pineapples	Remove skin and cut into pieces
Citrus fruit (oranges, lemons, mandarins, grapefruit)	Peel the skin off of all citrus fruit. Oranges and lemons may be left in whole
Melons	Remove skin and cut into pieces
Celery roots	Cut into 6–7 cm pieces
Cucumbers	Remove skin, cut into approx. 15 cm pieces
Tomatoes	-
Fennel	Cut into 6–7 cm pieces
Cherries	Remove stones
Apricots	Remove stones
Peaches	Remove stones
Plums/European plums	Remove stones

Indications and tips

- When squeezing juice from various fruit and vegetables, it may be helpful to create different variations/combinations, e.g. when squeezing apple and orange juice, it is best to start with soft fruit (oranges) and then proceed with the hard fruit (apples). Thus, the best juice yield will be obtained.
- When squeezing juice from fresh herbs, for example, mint or parsley, they should be processed in the so-called 'meantime', that is between squeezing juice from fruit and vegetables, to obtain the possibly best yield. If the amount of herbs is small, they should be squeezed together with a chunk of a fruit or vegetable.
- Fruit that contain starch (bananas, papaya, figs, avocado, mango, etc.) are difficult to squeeze juice (the produced mousse may lead to clogging of the sieve basket). It is best to prepare these types of fruit in a food processor or a blender. If, however, a juice needs the banana taste, banana should be squeezed first or second in the line. Thanks to blending with other juices, the banana nectar may drip a bit easier. Though, there may be frothing present in the process.
- When squeezing juice from small fruit, for example, grapes or strawberries, place them in the appliance in the handful size of portions and avoid throwing them in one by one. This helps to obtain better results.
- Please remember that red beets dye all other fruit and vegetables. When producing many different juices, the red beet juice should be squeezed at the end, to avoid dying all other juices.
- The apple juice will quickly acquire a bronze colour in the open air; thus, add a drop of lemon juice.
- The juice is best served directly after preparation, as with time in the open air juices lose their tastes and nutritional values.
- Never put ice cubes nor frozen fruit in the hopper.

Before First Use

 
1. Prior to first use, clean all the removable components of the appliance thoroughly, observing instructions in section **6 'Cleaning'**.
2. Rinse the washed elements in clean water.
3. Wipe the washed elements with a linen-free cloth or leave to dry in open air.
4. Wipe the motor block, base unit and supply cord with a soft, moistened cloth.

Assembly

1




2

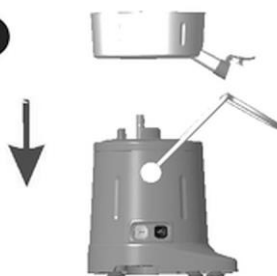

EN

 1. Set the motor block on a dry, even surface, so that operating elements are easily accessible.
Press the motor block well to the surface, so that base unit rubber feet are well fitted.
2. Place a juice bowl onto the motor block, so that juice spout pipe with the closure is found over the hollow in the appliance base unit.

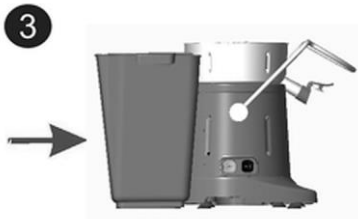

3. Place the pulp container on the motor block.



4. Place the middle ring on the edge of the juice bowl.

With it, make sure that the hollow for pulp discharge is located opposite to the juice spout pipe with a locking.

 


5. Insert the sieve basket into the juice bowl and fit it through slight rotation on the motor drive.



ATTENTION!

Make sure that the pin on motor drive enters the hollow in the bottom of the sieve basket.

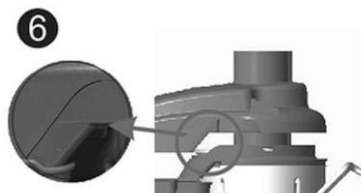

6. Then, place the lid, making sure that the ribbing on the lid are correctly aligned with recesses in the middle ring.
7. To end with, pull the locking bracket over the lid until it snaps in place. Thus the connection with safety switch is established.

ATTENTION!

The appliance operates only when all components are correctly fitted, and the locking bracket with safety switch is engaged with the lid.

Squeezing Fruit and Vegetable Juice

EN



WARNING!

Risk of injury caused by rotating components

Never introduce hands into the filling shaft. Always use the enclosed pusher to press food products towards the sieve basket.

During operation, hair, hands, clothing and kitchens utensils should be kept away of rotating elements.

Never remove the lid until the motor and sieve basket are not stopped completely.

1. Place a suitable container under the juice spout pipe.
2. Plug the appliance into a suitable single socket.



3. Press the black 'ON' button to start to switch the appliance on.

4. Fill the filling shaft with the prepared fruit and vegetables.

WARNING! Risk of injury!

When placing fruit or vegetables into the filling shaft, fingers or improperly used objects may be caught by the blades of the sieve basket.

Never push fruit and vegetables with your fingers or kitchen utensils. Always use the tamper provided for this purpose!

5. Introduce the pusher into the filling shaft, pressing it lightly. To obtain the maximum amount of juice, press the pusher down slowly.

ATTENTION!

When pressed too hard, the amount of the obtained juice is reduced, and the appliance may be damaged.

The juice squeezed out of fruit or vegetables flows out of the juice spout pipe and is collected in a container that is provided underneath. The pulp is separated and collected in the pulp container.

Fruit or vegetables may be added provided that the juice container or the pulp container are not full.

6. During juice squeezing, always remember to put a container underneath the juice spout pipe locate in the juice bowl.
7. If the juice container is filled, it must be replaced; to this end, close the juice spout pipe using the locking and open it anew, when a new container is placed underneath it.



EN

8. Observe the filling level of the pulp container during operation. As soon as it is filled up, switch the appliance off with the use of the orange 'OFF' button and empty the pulp container.

CAUTION!

Overfilled pulp container may cause that the appliance will cease to operate correctly. The pulp excess that gets into the motor housing may be the cause of damage. Observe the condition of the pulp container and empty it regularly!

9. When the juice is squeezed from the prepared fruit and vegetables, leave the appliance operating for a couple of seconds, so that the last drops of juice flow out.
10. When the juice squeezing is finished, switch the appliance off with the 'OFF' button.
11. Wait a couple of second until the motor stops completely and then disconnect the appliance from the mains socket (pull the plug out).

6 Cleaning

EN

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.

- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Clean the appliance after each use.
2. Immediately after use, disassemble the removable components for cleaning purposes, observing the order of disassembly:
 - release the locking bracket of the lid,
 - remove the lid by lifting it from the middle ring,
 - remove the sieve basket carefully from the juice bowl,
 - remove the middle ring from the juice bowl,
 - remove the juice bowl from the motor block,
 - remove the pulp container and remove the pulp.

3. Clean all the removed elements of the appliance under warm, running water, using a gentle washing agent.

WARNING! Injury hazard!

The blades of the appliance sieve are very sharp.

Use the enclosed dish-washing brush for cleaning the sieve basket.

4. All the cleaned parts should be rinsed thoroughly with fresh water.
5. Leave the parts to dry in open air or dry with a linen-free cloth.

NOTE!

All detachable elements of the appliance are dishwasher-safe.

WARNING!

Never attempt to immerse the motor block in water, neither wash it under running water, nor in a dishwasher.

6. Clean the motor block and power cord with a soft, damp cloth only.
7. Wipe the motor block and power cord at the end with a soft cloth.
8. Assemble all the parts after drying, and prior to subsequent use or storage of the appliance.

7 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.