

PRO II 40 S - PRO II 60 S - PRO II 100 S



190248 - 190239 - 190238

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 1.0

Date of preparation: 2025-08-14

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions	3
1.3	Intended Use	6
1.4	Unintended Use	6
2	General information	7
2.1	Liability and Warranty	7
2.2	Copyright Protection	7
2.3	Declaration of Conformity	7
3	Transport, Packaging and Storage	8
3.1	Delivery Check	8
3.2	Packaging	8
3.3	Storage	8
4	Technical Data	9
4.1	Technical Specifications	9
4.2	Functions of the Appliance	13
4.3	List of Components of the Appliance	14
5	Installation and operation	15
5.1	Installation	15
5.2	Operation	17
6	Cleaning and Descaling	22
6.1	Safety Instructions for Cleaning	22
6.2	Cleaning	22
6.3	Descaling	25
7	Possible Malfunctions	26
8	Disposal	28



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

EN

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.

- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

EN

Hot Surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

Health hazard due to germs!

- The tank must be regularly emptied and disinfected to eliminate the possibility of accumulation of harmful and dangerous germs.

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

EN

Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

Improper use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used in a technically flawless condition, providing for safe use.
- The appliance may only be used with connections in a technically flawless condition, providing for safe use.
- The appliance may only be used clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not attempt to modify nor alter the appliance.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Brewing coffee with the use of ground coffee and cold water.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Preparing other beverages.
- Brewing liquids containing sugar, sweeteners, acids, lyes, or alcohols.
- Storing and heating up flammable, harmful, and quickly evaporating liquids or materials, etc.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Version / Characteristics 190248 | 190239 | 190238

- Device connection: plug-in ready
- Version: round filter
- Colour: black, matt
- Material filter: stainless steel
- Material heating system: stainless steel
- Warm-keeping function: yes
- Fill level indicator: yes
- Descaling signal: yes
- ON/OFF switch: yes
- Indicator light:
 - ON/OFF
 - Descaling
 - Warm-keeping
- Properties:
 - 2 separate heating systems for brewing and keeping warm
 - coffee machine can also be used without filter paper
 - stainless steel heating tray
 - removable drain tray
- Including: Scale deposit scraper

Subject to technical changes and alterations!

Name:	Coffee machine Bartscher PRO II 40 S
Item No.:	190248
Material:	stainless steel, coated plastic
Volume, in l:	6
Max. output, number of cups:	40 - 48
Brewing time of 6 l, in min.:	40
Minimum brewing volume, l cups:	3 20
Power supply:	1,2 kW 220-240 V 50/60 Hz
Dimensions (W x D x H) in mm:	310 x 320 x 480
Weight in kg:	3,2

EN

Name:	Coffee machine Bartscher PRO II 60 S
Item No.:	190239
Material:	stainless steel, coated plastic
Volume, in l:	9
Max. output, number of cups:	60 - 72
Brewing time of 9 l, in min.:	50
Minimum brewing volume, l cups:	4,5 30
Power supply:	1,2 kW 220-240 V 50/60 Hz
Dimensions (W x D x H) in mm:	310 x 320 x 540
Weight in kg:	3,8

Technical Data

Name:	Coffee machine Bartscher PRO II 100 S
Item No.:	190238
Material:	stainless steel, coated plastic
Volume, in l:	13,2
Max. output, number of cups:	90 - 100
Brewing time of 13.2 l, in min.:	55
Minimum brewing volume, l cups:	6 40
Power supply:	1,45 kW 220-240 V 50/60 Hz
Dimensions (W x D x H) in mm:	350 x 375 x 540
Weight in kg:	4,6

Auxiliary equipment (not included in the delivery!)

	Descaler B15-30 Order quantity unit: 1 box (30 bags à 15 g) Model: powder, high concentrate Dimensions: W 68 x D 4 x H 100 mm Weight: 0,45 kg Code-no.: 190065
--	--

EN



Round paper filter, 195mm, 250pcs

Designed for coffee maker:

Regina Plus 40

Bartscher PRO II 40 / Bartscher PRO II 60

Bartscher PRO II 40 S / Bartscher PRO II 60 S

Order quantity unit: 1 box (250 round filters)

Diameter: 195 mm

Dimensions: W 195 x D 195 x H 1 mm

Weight: 0.3 kg

Code-No.: A190009250



Round paper filter, 195mm, 1000pcs

Designed for coffee maker:

Regina Plus 40

Bartscher PRO II 40 / Bartscher PRO II 60

Bartscher PRO II 40 S / Bartscher PRO II 60 S

Order quantity unit: 1 box (1000 round filters)

Diameter: 195 mm

Dimensions: W 195 x D 195 x H 1 mm

Weight: 1.4 kg

Code-No.: A190009

EN



Round paper filter, 245mm, 250pcs

Designed for coffee machine:

Regina Plus 90

Bartscher PRO II 100 / Bartscher PRO II 100 S

Coffee machine Silver 1300

Order unit: 1 box (250 round filters)

Diameter: 245 mm

Dimensions: W 245 x D 245 x H 1 mm

Weight: 0,55 kg

Code-No.: A190011250

Technical Data



Round paper filter 245mm, 1000pcs

Designed for coffee machine:

Regina Plus 90 /

Bartscher PRO II 100 / Bartscher PRO II 100 S

Coffee machine Silver 1300

Order unit: 1 box (1000 round filters)

Diameter: 245 mm

Dimensions: W 245 x D 245 x H 1 mm

Weight: 2,1 kg

Code-No.: A190011

4.2 Functions of the Appliance

Water in the water tank circulates in the riser pipe as long as the water temperature reaches 89°C. Then the brewing heating element switches off and the warm-keeping heating element switches on. The green warm-keeping indicator light comes on. The coffee is kept warm for the required period.

EN

4.3 List of Components of the Appliance

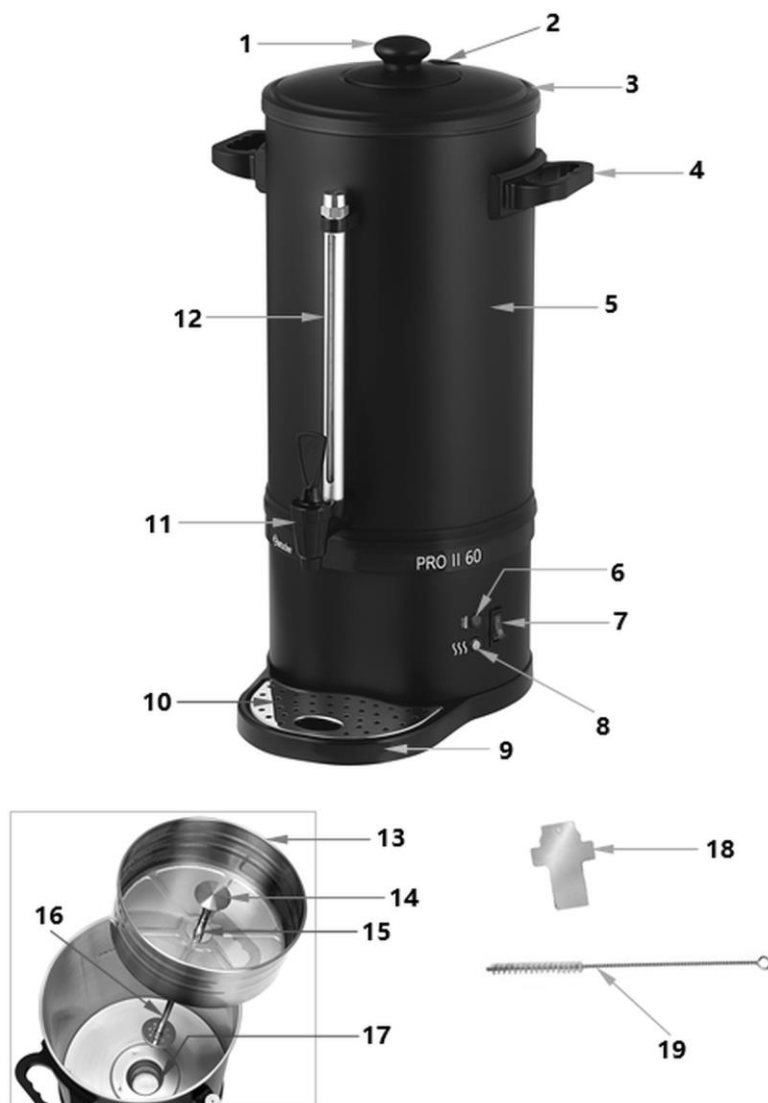


Fig. 1

Description to Fig. 1

- | | |
|--|---|
| 1. Lid handle | 2. Steam outlet hole |
| 3. Lid | 4. Water tank handle |
| 5. Water tank | 6. Descaling indicator (red) |
| 7. On/off switch with integrated operation indicator light (red) | 8. Warm-keeping indicator light (green) |
| 9. Base plate | 10. Drain tray |
| 11. Dispensing tap | 12. Fill level indicator |
| 13. Filter basket | 14. Water distributor Riser pipe |
| 15. Riser pipe stub | 16. Riser pipe |
| 17. Heating bowl | 18. Cleaning scraper |
| 19. Cleaning brush | |

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.

- Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Leave at least 10 cm clearance from flammable walls and items.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- Do not use the appliance with an external timer or remote control.

5.2 Operation

Safety warnings



WARNING!

Risk of scalding!

The water tank and the lid heat up considerably during operation.

Do not touch the hot appliance.

Parts of the filter basket and coffee dregs are becoming very hot.

When removing the filter basket assembly after the end of the brewing process, use safety gloves.

Risk of burns!

Hot steam coming out when the lid is removed may cause scalding of hands, arms and face.

Never remove the lid when the appliance is operating.

Use the lid handle and safety gloves when removing the lid.

Overfilling may lead to hot water leaks and scalding!

Observe the maximum filling volume!

EN

Before Use

1. Remove the lid from the water tank and remove the filter basket and riser pipe from the water tank.
2. Before use, clean the appliance, observing instructions in section “**Cleaning and Descaling**”.

ATTENTION!

Never immerse the device base in water.

Coffee preparation

1. Fill the tank with cold, potable water.

The required fill level can be read on the fill level indicator.

WARNING!

Do not fill the water tank with water over the maximum indication on the fill level indicator!

Never use warm water for coffee preparation in this appliance!

Never use the appliance without water!

2. Pay attention to the minimum required amount for brewing during coffee preparation. It is:

in 190248: 20 cups – 3.0 litres

in 190239: 30 cups – 4.5 litres

in 190238: 40 cups - 6.0 litres

3. To assemble the filter basket assembly, insert the riser pipe into the filter basket opening and place both elements together in the tank.
4. Make sure that the riser pipe is placed in the centre of the heating bowl in the tank bottom.

NOTE!

The optimum filter from high-grade stainless steel allows for coffee preparation either with or without a paper filter.



Fig. 2

We recommend the right round paper filter BARTSCHER A190009 or A190009250 for model PRO II 40 S (190248) + PRO II 60 S (190239) and paper round filter A190011 or A190011250 for model PRO II 100 S (190238).

5. Depending on individual preferences, you can place a suitable paper filter in the filter basket or prepare coffee without it.

6. Pour coarsely ground coffee to the filter basket (approx. 5 g per cup).

HINT!

The recommended coffee amount may be larger or smaller, according to individual preferences.

7. Select water distributor depending on the amount of coffee. Twist it slightly when placing it on the riser pipe stub in the filter basket so that it is securely attached.
8. To ensure optimal water distribution, use 12 mm water distributor for half or full brewing volume, in other cases use 6 mm water distributor.
9. Put the lid on the coffee brewer and lock it with the bayonet lock.
10. Start the coffee machine by switching the On/Off switch to "I" position.

The red operation control light in the switch will come on to signal that the appliance is operating and the brewing process is in progress.

WARNING!

Risk of scalding!

During the brewing process hot steam is released from the steam release opening in the lid. The released hot steam may cause scalding of hands, arms, and face.

Avoid contact with this area of the lid.

During operation of the appliance never remove the lid.

EN

When the brewing process is complete, the green warm-keeping indicator light  will come on, and power will be automatically reduced.

Coffee will be kept at a serving temperature, until the on/off switch is switched to "O" position or the plug is removed from the mains socket.

Coffee Serving

1. Place a cup or glass under the dispensing tap
2. Press the dispensing tap slightly down until the required amount of coffee is poured in the cup.
3. Release the dispensing tap – it closes automatically.
4. In order to obtain constant flow, press the dispensing tap lever fully down.

HINT!

The dispensing tap is located a little higher, therefore the coffee grounds remain on the water tank bottom and do not enter the served coffee.

Switching the appliance off

1. Switch the on/off switch to “O” position, when liquid stops flowing from the dispensing tap of a vertically positioned appliance.
2. Disconnect the appliance from the mains socket (pull the plug out!).
3. If needed, after cooling down, refill the coffee machine with fresh water and run anew the brewing process.

Instructions and advices

- Before brewing another coffee batch rinse the coffee machine thoroughly with cold water to cool it down.
- Any drops arising from removing the filter basket and the wet coffee grounds should be collected with use of coffee machine lid.
- The coffee machine allows also for water heating. Fill clean tank with cold water, install the riser pipe and clean filter basket. Turn the device on as for brewing coffee.
- Switch the device to “O” as soon as the brewing cycle is ended.
- Remove the plug when there are less than 4 cups in the water tank.
- When the coffee machine is no longer used, remove the riser pipe, otherwise it may become jammed in the heating bowl.

Safety thermostat

The appliance is equipped with a safety thermostat that is activated in case of overheating of the appliance.

The safety thermostat is engaged in the following cases:

1. There is no water in the water tank. Proceed the following way:

- switch the appliance off,
- allow the device to cool down,
- remove the base plate,
- press the RESET button at the bottom of the appliance,
- refill with fresh water,
- switch the appliance on as usual.



Fig. 3

2. The appliance is scaled. The red descaling light  comes on. In such a case proceed the following way:
 - switch the appliance off,
 - descale the appliance following the instructions in section “**Descaling**”,
 - after descaling, press the RESET button at the bottom of the appliance,
 - refill with fresh water.
 - switch the appliance on as usual.

EN

ATTENTION!

Dry operation or scaling of the appliance may lead to malfunction of the heating element. If the coffee machine does not work after dry operation or descaling, contact the service company.

6 Cleaning and Descaling

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

EN

6.2 Cleaning

Daily Cleaning

1. Clean the appliance after each use.
2. After use, clean the filter basket, riser pipe, and lid with warm water and mild, commercially available cleaning agent for professional coffee machines. Follow the manufacturer's instructions.
3. The water tank should be kept free from any deposits and coffee residuals. It may be easily cleaned with the use of mild scrubbing agent and a dishcloth.

Cleaning and Descaling

4. Before cleaning, remove the base and the drain tray, pulling the water tank up.
5. Wash the removed parts in warm water with mild cleaning agent.
6. All washed parts should be rinsed with clean water to remove the washing agents residuals.



Fig. 4

7. Wipe the exterior of the appliance with a moist cloth.
8. Dry the cleaned surfaces and elements with a soft cloth.
9. To clean the dispensing tap, fill the water tank with warm water and drain it through the dispensing tap.

ATTENTION!

After cleaning, check the gasket at the bottom end of the riser pipe. If it is not fitted correctly, is missing or is hard, maintaining the right position of the riser pipe in the heating bowl may be impossible, which in turn may negatively affect the operation of the appliance.

EN

Weekly Cleaning

Fill level indicator

Clean the glass pipe of the fill level indicator with included cleaning brush.

1. First, unscrew the cap (a) on the fill level indicator.
2. Then remove the glass pipe (b).
3. Remove bottom seal from the glass pipe (b).
4. Carefully clean the glass pipe (b) with the enclosed cleaning brush.
5. Then carefully re-attach the gasket to the lower end of the glass tube.



Fig. 5

6. Replace the glass pipe in the fill level indicator holder.
7. Re-attach the cap (a) to the fill level indicator.

WARNING!

Check if the glass pipe is correctly positioned in the holder.

Dispensing tap

If the device is used daily, it is necessary to thoroughly clean the tap mechanism once a week, or less frequently in case of less intensive use.

1. To clean the dispensing tap unscrew the upper part with holder (c).
2. Clean the tap and connection between the tap and the device with a small bottle brush.
3. Rinse the dismantled part of the dispensing tap.
4. Re-attach the element on the dispensing tap.



Fig. 6

Heating Bowl

The heating bowl in the bottom of the appliance must be thoroughly cleaned every week, especially in the case of daily use of the appliance.

EN

There is a scraper for cleaning the heating bowl in the package of the appliance.

NOTE!

Always use the enclosed cleaning scraper.

1. Put the steel wool cloth soaked in soap or thin scrubbing dishcloth on the heating bowl (e).
2. Then insert the narrow end of the cleaning scraper (d) into the heating bowl.
3. Clean the heating bowl (e) by turning the cleaning scraper (d) back and forth several times.
4. The heating bowl is clean, when the metal shines.



Fig. 7

5. After cleaning, rinse the water tank thoroughly to remove any residues of soap and cleaning agents.

6.3 Descaling

Depending on the water hardness level in the place of usage, limescale may be deposited in the water tank and the heating bowl during the operation of the coffee machine. In order to maintain the appliance in the best possible condition, and in order to be certain that every brewing process yields the best results, the appliance should be descaled regularly.

The appliance is equipped with **red descaling indicator** . Depending on the hardness of the water used, the indicator may be activated after a certain number of brewing cycles, which indicates that the appliance must be descaled. The thermostat is activated and thus it stops the operation of the appliance.

NOTE!

To reduce limescale deposits, it is recommended to use filtered water!

For descaling the appliance we recommend the tried and proven agent:

Descaling agent B15-30, 30 pcs., art. No. 190065

To descale the appliance, perform the following steps:

- Fill the water tank with at least 3, 4.5 or 6 litres (minimum brewing quantity) of fresh drinking water.
- Add the sufficient amount of descaling agent to water (follow indications on the packaging).
- Slide the riser pipe through the filter basket centre and place it in the heating bowl, in the bottom of the water tank. Pay attention to correct fitting of the riser pipe in the heating bowl.
- Place the lid on the water tank.
- Switch the appliance on with the ON/OFF switch.
- Perform the brewing cycle and leave the appliance on for approx. 15 minutes.
- Switch the appliance off.
- Use the drain tap to drain the descaling agent solution from the water tank.
- After descaling, perform at least two brewing cycles with the use of fresh water, without ground coffee, to remove all remains of the descaling solution.
- Rinse the tank, riser pipe and filter basket thoroughly with warm water, and drain the water through the drain tap.
- Wash your hands thoroughly after descaling.

After descaling, the appliance may be switched on only after pressing the **RESET** button, located at the bottom of the appliance.

During the subsequent start-up, the red descaling indicator light  will not come on.

7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. The works may only be performed by suitably qualified technical personnel.

When malfunction cannot be removed, contact the technical service. In such a case, provide article number, model and serial number. You will find this information on the rating plate.

Malfunction	Cause	Solution
The appliance is switched on, but the red operating indicator light in the on/off switch does not come on	The plug is not connected to the mains socket.	Insert the plug into the mains socket.
	The fuse of the power connection tripped.	Disconnect the appliance from the mains socket, reset the fuse Restart the appliance
	Operation indicator light failure	Contact the service company

Possible Malfunctions

Malfunction	Cause	Solution
During operation the red descaling indicator light  comes on, the appliance turns off.	The appliance is scaled.	Descale the appliance, following indications in section “ Descaling ”, press the RESET button, located at the bottom of the appliance, refill with fresh potable water Start the appliance
The appliance switches off	The safety thermostat tripped	Restart the appliance following indications in section “ Safety Thermostat ” Remember to use appropriate amount of liquid
The appliance is switched on, the red operation indicator light in the on/off switch is on but the appliance does not heat up.	Damaged heating element	Contact the service company
	Damaged thermostat	Contact the service company
The green warm-keeping indicator light  does not come on	The brewing/heating process is not complete yet	Wait for the brewing/heating process to end
	Damaged indicator light	Contact the service company
	Damaged thermostat	Contact the service company

8 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.