

Regina Plus 40 - Regina Plus 90



190250 - 190251

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 1.0

Date of preparation: 2025-08-14

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions	3
1.3	Intended Use	6
1.4	Unintended Use	6
2	General information	7
2.1	Liability and Warranty	7
2.2	Copyright Protection	7
2.3	Declaration of Conformity	7
3	Transport, Packaging and Storage	8
3.1	Delivery Check	8
3.2	Packaging	8
3.3	Storage	8
4	Technical Data	9
4.1	Technical Specifications	9
4.2	Functions of the Appliance	10
4.3	List of Components of the Appliance	11
5	Installation and operation	14
5.1	Installation	14
5.2	Operation	15
6	Cleaning and Descaling	20
6.1	Safety Instructions for Cleaning	20
6.2	Cleaning	21
6.3	Descaling	23
7	Possible Malfunctions	25
8	Disposal	26



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

EN

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.

- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

EN

Hot Surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

Health hazard due to germs!

- The tank must be regularly emptied and disinfected to eliminate the possibility of accumulation of harmful and dangerous germs.

Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

EN

Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

Improper use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used in a technically flawless condition, providing for safe use.
- The appliance may only be used with connections in a technically flawless condition, providing for safe use.
- The appliance may only be used clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not attempt to modify nor alter the appliance.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Brewing coffee with the use of ground coffee and cold water.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Preparing other beverages.
- Brewing liquids containing sugar, sweeteners, acids, lyes, or alcohols.
- Storing and heating up flammable, harmful, and quickly evaporating liquids or materials, etc.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Coffee machine Regina Plus 40
Item No.:	190250
Material:	stainless steel, plastic
Volume, in l:	7
Max. output, number of cups:	40
Brewing time of 7 l, in min.:	47
Minimum brewing volume, in l cups:	3 20
Power supply:	1,2 kW 220-240 V 50/60 Hz
Dimensions (W x D x H) in mm:	280 x 300 x 410
Weight in kg:	2,98

Name:	Coffee machine Regina Plus 90
Item No.:	190251
Material:	stainless steel, plastic
Volume, in l:	14
Max. output, number of cups:	90
Brewing time of 14 l, in min.:	90
Minimum brewing volume, in l cups:	4,5 30
Power supply:	1,45 kW 220-240 V 50/60 Hz
Dimensions (W x D x H) in mm:	340 x 345 x 470
Weight in kg:	3,8

Version / Characteristics 190250 | 190251

- Device connection: pluggable
- Version: round filter
- Colour: silver, black
- Material filter: stainless steel
- Material heating system: stainless steel
- Warm-keeping function: yes
- Decalcification signal: yes
- Fill level indicator: yes
- ON/OFF switch: yes
- Indicator lights:
 - ON/OFF
 - descaling
 - keeping warm
- Properties:
 - 2 separate heating systems for brewing and warm-keeping function
Stainless steel heating bowl
 - coffee machine can also be used without filter paper
 - stainless steel heating recess
- Including:
 - cleaning scraper
 - cleaning brush

Important note: We recommend using coarsely ground coffee powder

Subject to technical changes and alterations!

4.2 Functions of the Appliance

Water in the water tank circulates in the riser pipe as long as the water temperature reaches 89°C. Then the brewing heating element switches off and the warm-keeping heating element switches on. The green warm-keeping indicator light comes on. The coffee is kept warm for the required period.

4.3 List of Components of the Appliance



EN

Fig. 1

Description Fig. 1

- | | |
|--|---|
| 1. Lid handle | 2. Lid |
| 3. Water tank handle | 4. Water tank |
| 5. Connection cable | 6. Socle |
| 7. ON/OFF switch with integrated operation indicator light (red) | 8. Warm-keeping indicator light (green) |
| 9. Malfunction indicator light (red) | 10. Drain tap |
| 11. Fill level indicator | 12. Riser pipe elongation |
| 13. Filter basket | 14. Riser pipe |
| 15. Heating bowl | 16. Scale deposit scraper |
| 17. Cleaning brush | |

Auxiliary equipment (not included in the delivery!)

EN



Descaler B15-30

Order quantity unit: 1 box (30 bags à 15 g)

Model: powder, high concentrate

Dimensions: W 68 x D 4 x H 100 mm

Weight: 0,45 kg

Code-no.: 190065



Round paper filter, 195mm, 250pcs

Designed for coffee maker:

Regina Plus 40

Bartscher PRO II 40 / Bartscher PRO II 60

Bartscher PRO II 40 S / Bartscher PRO II 60 S

Order quantity unit: 1 box (250 round filters)

Diameter: 195 mm

Dimensions: W 195 x D 195 x H 1 mm

Weight: 0.3 kg

Code-No.: A190009250

	Round paper filter, 195mm, 1000pcs Designed for coffee maker: Regina Plus 40 Bartscher PRO II 40 / Bartscher PRO II 60 Bartscher PRO II 40 S / Bartscher PRO II 60 S Order quantity unit: 1 box (1000 round filters) Diameter: 195 mm Dimensions: W 195 x D 195 x H 1 mm Weight: 1.4 kg Code-No.: A190009
	Round paper filter, 245mm, 250pcs Designed for coffee machine: Regina Plus 90 Bartscher PRO II 100 / Bartscher PRO II 100 S Coffee machine Silver 1300 Order unit: 1 box (250 round filters) Diameter: 245 mm Dimensions: W 245 x D 245 x H 1 mm Weight: 0,55 kg Code-No.: A190011250
	Round paper filter 245mm, 1000pcs Designed for coffee machine: Regina Plus 90 / Bartscher PRO II 100 / Bartscher PRO II 100 S Coffee machine Silver 1300 Order unit: 1 box (1000 round filters) Diameter: 245 mm Dimensions: W 245 x D 245 x H 1 mm Weight: 2,1 kg Code-No.: A190011

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Leave at least 10 cm clearance from flammable walls and items.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- Do not use the appliance with an external timer or remote control.

5.2 Operation

Safety warnings



WARNING!

Risk of scalding!

The water tank and the lid heat up considerably during operation.

Do not touch the hot appliance.

Parts of the filter basket and coffee dregs are becoming very hot.

When removing the filter basket assembly after the end of the brewing process, use safety gloves.

Risk of burns!

Hot steam coming out when the lid is removed may cause scalding of hands, arms and face.

Never remove the lid when the appliance is operating.

Use the lid handle and safety gloves when removing the lid.

Overfilling may lead to hot water leaks and scalding!

Observe the maximum filling volume!

Prepare the device

1. Remove the lid, the filter basket and riser pipe from the water tank.
2. Before use, clean the appliance, observing instructions in section 6 “**Cleaning and descaling**”.

CAUTION!

Never immerse the device base in water!

Coffee preparation

1. Fill tank with **cold**, potable water.
- The required fill level may be read from fill level indicator.

ATTENTION!

Do not fill the water tank with water over the maximum indication on the fill level indicator!

Never use warm water for coffee preparation in this appliance!

Never use the appliance without water!

EN

2. Pay attention to the minimum required volume for brewing during the coffee preparation. It is:
 - for 190250: 20 cups - 3.0 litres
 - for 190251: 30 cups - 4.5 litres
3. To assemble the filter basket group put the riser pipe into the filter basket opening and place both elements together in the tank.
4. Make sure that the riser pipe is placed in the centre of the heating bowl in the tank bottom.

NOTE!

The optimum filter from the high-grade stainless steel allows for coffee preparation either with the paper filter or without it.



Fig. 2

We recommend suitable round paper filter: BARTSCHER A190009 or A190009250 for model Regina Plus 40 (190250) and round paper filter A190011 or A190011250 for model Regina Plus 90 (190251).

- Depending on preferences it is possible to place the suitable paper filter to the filter basket or to prepare coffee without it
- Pour coarsely ground coffee to the filter basket (approx. 6 g per cup).

NOTE!

The recommended coffee amount may be larger or smaller, depending on the preferences.

- Close the water tank with the lid. To lock it, follow the instructions given on the lid.

ATTENTION!

Before connecting the appliance to the mains supply, make sure the ON/OFF switch is in 'O' position.

- Plug the appliance into a suitable single socket.
- Start the coffee maker by switching the ON/OFF-switch to position 'I'. During the brewing process the red operation control light in the ON/OFF-switch will come on.

When the brewing process is finished, the green warm-keeping indicator light will come on additionally.

The temperature will be reduced automatically and coffee will be kept in the serving temperature, until the ON/OFF-switch is switched to 'O' position or the plug is removed from the mains socket.

Coffee serving



1. Place a cup under the drain tap, press the tap slightly down and hold until the cup is filled with required amount of coffee.
2. Release the drain tap - it closes automatically.
3. In order to obtain full flow press the tap lever fully down.

Fig. 3

Switching the appliance off

EN

1. Switch the ON/OFF-switch to 'O' position, when liquid stops flowing from the drain tap of a vertically positioned appliance.
2. Disconnect the appliance from mains power supply
3. If needed, after cooling down, refill the coffee machine with fresh water and run anew the brewing process.

Safety thermostat

The appliance is equipped with a safety thermostat that is activated in case of overheating of the appliance. The red malfunction indicator light comes on.

The safety thermostat is engaged in the following cases:

1. There is no water in the water tank. Proceed the following way:
 - Switch the appliance off.
 - After cooling down, press the RESET button at the bottom of the appliance.
 - Refill with fresh water.
 - Switch the appliance on as usual.
2. The appliance is scaled. In such a case proceed the following way:
 - Switch the appliance off.
 - Descale the appliance following the instructions in section “**Descaling**”.

Installation and operation

- After descaling, press the RESET button at the bottom of the appliance.
- Refill with fresh water.
- Switch the appliance on as usual.

ATTENTION!

Dry operation or scaling of the appliance may lead to malfunction of the heating element. If the coffee machine does not work after dry operation or descaling, contact the service company.

Instructions and advices

- Before brewing another coffee batch rinse the coffee machine thoroughly with cold water to cool it down.
- Any drops arising from removing the filter basket and the wet coffee grounds should be collected with use of coffee machine lid.
- The coffee machine allows also for water heating. Fill clean tank with cold water, install the riser pipe and clean filter basket. Turn the device on as for brewing coffee.
- Switch the device to “O” as soon as the brewing cycle is ended.
- Remove the plug when there are less than 4 cups in the water tank.
- When the coffee machine is no longer used, remove the riser pipe, otherwise it may become jammed in the heating bowl.

6 Cleaning and Descaling

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

EN

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

Daily cleaning

1. Clean the appliance after each use.
2. After use, clean the filter basket, riser pipe, and lid with warm water and gentle, commercially available cleaning agent for professional coffee machines. Follow the manufacturer's instructions.
3. The water tank should be kept free from any deposits and coffee dregs. It may be easily cleaned with the use of gentle scrubbing agent and a dishcloth.
4. Wipe the exterior of the appliance with a soft, moist cloth.
5. Dry the cleaned surfaces and elements with a soft cloth.
6. To clean the drain tap, fill the water tank with warm water and drain it through the drain tap.

ATTENTION!

After cleaning, check the gasket at the bottom end of the riser pipe. If it is not fitted correctly, is missing or is hard, maintaining the right position of the riser pipe in the heating bowl may be impossible, which in turn may negatively influence the operation of the appliance.

Weekly cleaning

Heating Bowl

The heating bowl in the bottom of the appliance must be thoroughly cleaned every week, especially in case of daily use of the appliance.

There is a scraper for cleaning the heating bowl in the package of the appliance.

NOTE!

Always use the enclosed cleaning scraper.

1. Put the steel wool cloth soaked in soap or thin dishcloth on the heating bowl.
2. Then introduce the narrow end of the cleaning scraper into the heating bowl.
3. Clean the heating bowl through repeatedly turning the cleaning scraper inside out and to the left and right.

The heating bowl is clean, when the metal shines.



Fig. 4

4. After cleaning, rinse the water tank thoroughly to remove all residuals of soap and cleaning agents.

Fill level indicator

If needed, the fill level indicator (a) may be cleaned from the inside using the enclosed cleaning brush.

1. Undo the screw (d) at the top next to the fill level indicator support.
2. Remove the glass pipe (b) and the top gasket (c).
3. Introduce the cleaning brush into the glass pipe (b) and clean it thoroughly, using warm water and a gentle washing agent.
4. Rinse thoroughly with clear water.
5. Then fit the level indicator onto the support. Pay attention at the right position of gaskets (c) at the bottom and at the top.

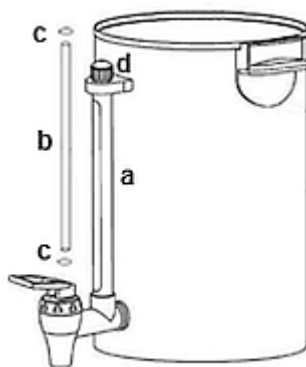


Fig. 5

ATTENTION!

Pay attention if the glass pipe is correctly positioned in the gasket.

Tighten the screw union gently, as the glass pipe may be broken.

EN

6. Tighten the fill level indicator screw (d).

6.3 Descaling

Depending on the water hardness level in the place of usage, limescale may be deposited in the water tank and the heating bowl during the operation of the coffee machine. In order to maintain the appliance in the best possible condition, and in order to be certain that every brewing process yields the best results, the appliance should be descaled regularly.

The appliance is equipped with **red malfunction indicator**. Depending on the hardness of the water used, the indicator may be activated after a certain number of brewing cycles, which indicates that the appliance must be descaled. The thermostat is activated and thus it stops the operation of the appliance.

NOTE!

To reduce limescale deposits, it is recommended to use filtered water!

For descaling the appliance we recommend the tried and proven agent:

Descaling agent B15-30, 30 pcs., art. No. 190065

To descale the appliance, perform the following steps:

- Fill the water tank with at least 3 or 4.5 l of fresh potable water.
- Add the sufficient amount of descaling agent to water (follow indications on the packaging).
- Slide the riser pipe through the filter basket centre and place it in the heating bowl, in the bottom of the water tank. Pay attention to correct fitting of the riser pipe in the heating bowl.
- Place the lid on the water tank.
- Switch the appliance on with the ON/OFF switch.
- Perform the brewing cycle and leave the appliance on for approx. 15 minutes.
- Switch the appliance off.
- Use the drain tap to drain the descaling agent solution from the water tank.
- After descaling, perform at least two brewing cycles with the use of fresh water, without ground coffee, to remove all remains of the descaling solution.
- Rinse the tank, riser pipe and filter basket thoroughly with warm water, and drain the water through the drain tap.

After descaling, the appliance may be switched on only after pressing the **RESET** button, located at the bottom of the appliance.

During the subsequent start-up, the red malfunction indicator light will not come on.

7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. The works may only be performed by suitably qualified technical personnel.

When malfunction cannot be removed, contact the technical service. In such a case, provide article number, model and serial number. You will find this information on the rating plate.

Problem	Cause	Solution
The red operation indicator light does not come on.	The plug is not connected to the mains socket.	Insert the plug into the mains socket.
	The premises connection fuse tripped.	Disconnect the appliance from mains supply, reset the fuse and re-connect the appliance.
	Damaged operation indicator light.	Contact the supplier.
	Damaged heating element.	Contact the supplier.
The red malfunction indicator light comes on and the appliance switches off.	No water in the water tank, the appliance was operating dry.	Leave the appliance to cool down, press the RESET button, located at the bottom of the appliance, refill with fresh potable water and switch the appliance on.
	The appliance is scaled.	Descale the appliance, following indications in section 6.3 "Descaling" , press the RESET button, located at the bottom of the appliance, refill with fresh potable water and switch the appliance on.

8 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.