

10L D



200029

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 1.0

Date of preparation: 2025-06-18

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words.....	2
1.2	Safety instructions.....	3
1.3	Intended Use	7
1.4	Unintended Use	7
2	General information	8
2.1	Liability and Warranty	8
2.2	Copyright Protection	8
2.3	Declaration of Conformity	8
3	Transport, Packaging and Storage	9
3.1	Delivery Check.....	9
3.2	Packaging	9
3.3	Storage	9
4	Technical Data.....	10
4.1	Technical Specifications	10
4.2	Functions of the Appliance.....	10
4.3	List of Components of the Appliance	11
5	Installation and operation	12
5.1	Installation.....	12
5.2	Operation	13
6	Cleaning and Descaling.....	17
6.1	Safety Instructions for Cleaning	18
6.2	Cleaning.....	18
6.3	Descaling	19
7	Disposal.....	20



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.

- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

Safety

Hot Surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

Health hazard due to germs!

- The tank must be regularly emptied and disinfected to eliminate the possibility of accumulation of harmful and dangerous germs.

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

Operating personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

Improper use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used in a technically flawless condition, providing for safe use.
- The appliance may only be used with connections in a technically flawless condition, providing for safe use.
- The appliance may only be used clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not attempt to modify nor alter the appliance.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- heating up and keeping mulled wine, punch and Jagertee warm.

This appliance is intended for use in households and similar places, e.g.:

- in employee canteens in shops, offices, and similar areas;
- on farms;
- by customers in hotels, motels, and other typical accommodation establishments;
- in lodging-houses.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Cooking food,
- Pouring and heating up flammable, harmful, and quickly evaporating liquids or materials, etc.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Mulled wine pot 10L D
Art. No.:	200029
Material:	stainless steel
Lid material:	stainless steel
Max. volume, in l:	12,5
Usable volume, in l:	10
Temperature range, min.–max., in °C:	30 - 90
Connected load:	1,6 kW 230 V 50/60 Hz
Dimensions (W x D x H), in mm:	305 x 335 x 550
Weight, in kg:	3,4

EN We reserve the right to implement technical modifications.

Version / Characteristics

- Colour: silver | black
- Hot water pot: no
- Double walls: yes
- Temperature control: stepless | thermostatic
- Control: electronic | rotary controller
- Indicator lamps: heating up | warm-keeping
- Features: removable drip tray

4.2 Functions of the Appliance

In the mulled wine pot, beverages like mulled wine, punch, Jagtertee, etc. are heated up to the set temperature and kept in this temperature for the pre-set time. The integrated dispensing tap ensures easy operation and makes dispensing particularly convenient.

4.3 List of Components of the Appliance



EN

Fig. 1

- | | |
|--|---|
| 1. Lid with holder | 2. Tank handle (2 pcs) |
| 3. Tank | 4. Temperature controller |
| 5. ON/OFF switch | 6. Warm-keeping indicator light (green) |
| 7. Heating-up indicator light (orange) | 8. Drain tray |
| 9. Drip grate | 10. Dispensing tap |
| 11. Steam outlet hole in the lid | |

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Leave at least 10 cm clearance from flammable walls and items.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.

5.2 Operation

Warning Indications



HAZARD!

Electric shock hazard!

In the event of overfilling of the pot, the liquid may overflow and thus cause short-circuit in electronic control circuit. This may result in bodily injuries through electric shock.

Do not overfill the pot with liquids. Mind the 'MAX' marking inside the pot.



WARNING

Risk of scalding!

The pot and lid heat up considerably during operation.

Do not touch the hot appliance.

Risk of scalding!

Hot steam coming out when the lid is removed may cause scalding of hands, arms and face.

Never remove the lid when the appliance is operating.

In order to add liquids, first switch the appliance off and then carefully remove the lid, using the lid handle.

Before Use

1. Before use clean the appliance observing instructions in section 6 “Cleaning”.

2. Attach the drip tray to the appliance by hooking it onto the base.
3. Place the drip grate on the drip tray.



Fig. 2

4. Before filling up with liquids and connecting the appliance, rotate the temperature controller counter-clockwise to the position marked with “O”.
5. Before filling the tank with a liquid, make sure the dispensing tap is closed.

CAUTION!

Non-potable liquids, such as acids, lyes, oils, nitrates, etc. pose hazard to health.

Before switching the appliance on, always fill the appliance with potable liquid first.

6. Pour required amount of potable liquids into the appliance — only up to “MAX” mark.

WARNING!

Make sure that during operation no liquid pours out; otherwise, it might cause shorting in the control electronics. This might result in bodily injuries.

Observe the maximum filling volume!

7. Put the lid on the tank, so that it catches on the tank handles by means of rotating it.
8. The lid must always be on the tank during operation.



Fig. 3

Heating-up Liquids

1. Connect the appliance to a suitable single socket.
2. Switch the appliance on with the ON/OFF switch.
3. Rotate the temperature controller clockwise, to set the required temperature in the range of 30–90°C.

The orange heating-up indicator light is on during the heating-up phase.

NOTE!

The heating-up time depends on the quantity and temperature of the liquid poured in.

EN

When the set temperature is reached, the thermostat automatically switches off, and the orange heating-up indicator light goes off.

The green warm-keeping indicator light comes on and the liquid in the tank is kept at the set temperature.

When the liquid temperature drops, the thermostat is on again and the orange heating-up indicator light is on again. The liquid is heated up to the set temperature.

Dispensing Liquids

1. In order to dispense liquid from the tank, place a suitable container (e.g., a mug, glass, cup, etc.) under the dispensing tap.
2. Press the dispensing tap lever down and hold it pressed until the right amount of liquid is dispensed.
3. After the dispensing process, release the dispensing tap lever, and it is going to close automatically.



Fig. 4

ATTENTION!

Periodically check the liquid fill level, and re-fill when required.

Never use the appliance without liquid!

Switching Appliance OFF / Emptying Tank

EN

1. If the appliance is not used, rotate the temperature controller to “O” position.
2. Switch the appliance off with the ON/OFF switch.
3. Disconnect the appliance from the socket (pull the plug out).
4. Leave the appliance and the liquid to cool off.
5. Use the dispensing tap to empty the tank by dispensing the liquid into a suitable container.

Overheating/Dry-Run Protection

The appliance is equipped with an overheating / dry-run protection.

In case of an accidental start-up without liquid or with its insufficient amount, the protection will be activated and the appliance will be automatically switched off.

In such a case proceed the following way:

1. Wait for the appliance to cool down.
2. Pour the liquid remaining in the tank into another container, using the dispensing tap.
3. Press the RESET button underneath the appliance.
4. Then, you may pour the required beverages and start the appliance as usual.

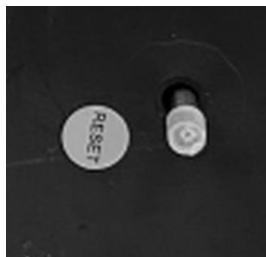


Fig. 5

6 Cleaning and Descaling

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Clean the appliance regularly at the end of each working day, or more frequently, if needed.
2. Remove the drip tray with the drip grate from the base of the appliance.
3. Empty the drip tray.
4. Wash the drip tray and drip grate under warm running water with a mild detergent.
5. Clean the inside of the tank thoroughly with warm water, a soft cloth or a sponge and a mild cleaning agent.
6. To clean the dispensing tap, pour water with a cleaning agent through it.
7. Rinse the tank thoroughly with fresh water.
8. Fresh water should be poured through the dispensing tap multiple times, so that cleaning agent residues are removed.
9. Wash the lid under warm running water.
10. Wipe the exterior of the tank with a soft, damp cloth.
11. After cleaning, use a soft, lint-free cloth to dry thoroughly the appliance and the removed parts.

6.3 Descaling

Inappropriate water may lead to limescale deposits building up. Limescale deposits result in longer heating time and might cause damage to the appliance.

NOTE!

To avoid limescale deposits, it is recommended to use filtered water!

ATTENTION!

Lack of regular descaling of the appliance, as set forth in the instruction manual, may constitute a ground for rejecting warranty claims. Such claims are not covered by the warranty!

Descal the appliance regularly!

We recommend ecological descaling with use of vinegar or citric acid.

1. Prepare water and vinegar solution (3:1 ratio) or water and citric acid solution (2 spoons per 1 litre of water).
2. Fill the tank with this solution.
3. We recommend leaving the descaling solution for approx. 1 hour.
4. Next, boil the descaling solution.
5. Leave the appliance to cool off for some time.
6. Drain the descaling solution to a suitable container via the drain tap.
7. Rinse the tank thoroughly and **multiple times** with fresh water.
8. To completely remove the descaling solution, pour fresh water through the drain tap, too.
9. When other commercially available descaling agents are used, observe manufacturer's instructions.

7 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.