

**EDD 2500**



**292058**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0  
Fax: +49 5258 971-120  
**Service hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)

Version: **1.0**

Creation date: 2025-06-27

## **Original operating instructions**

## Technical data

|                                          |                             |
|------------------------------------------|-----------------------------|
| <b>Designation:</b>                      | <b>Thermometer EDD 2500</b> |
| Article number:                          | <b>292058</b>               |
| Material:                                | Plastic                     |
| Size display field (W x D) in mm:        | 46 x 20                     |
| Core temperature sensor material:        | Stainless steel             |
| Diameter Core temperature sensor in mm:  | 4                           |
| Temperature range from - to in °C / ° F: | 0 - 250                     |
| Puncture depth in mm:                    | 100                         |
| Length cable in m:                       | 1,2                         |
| Size (W x D x H) in mm:                  | 65 x 72 x 23                |
| Weight in kg:                            | 0,065                       |

Subject to technical changes!

EN

## Model / Properties

- Colour: silver | black
- Model: digital
- Designed for:
  - Core temperature measurements
  - Temperature monitoring during transport and storage
- Temperature measurement units: °C / °F
- Operated via batteries (1 x AAA 1.5V), not included in delivery
- Timer: yes
- Stand/suspension device:
  - 1 magnet
  - Setting feet, fold-out
- Display: yes
- Application areas:
  - Commercial kitchens
  - cooking

- Properties:
  - Signal tone when the core temperature is reached
  - Timer with signal tone
  - with hanging device

## Overview of assemblies

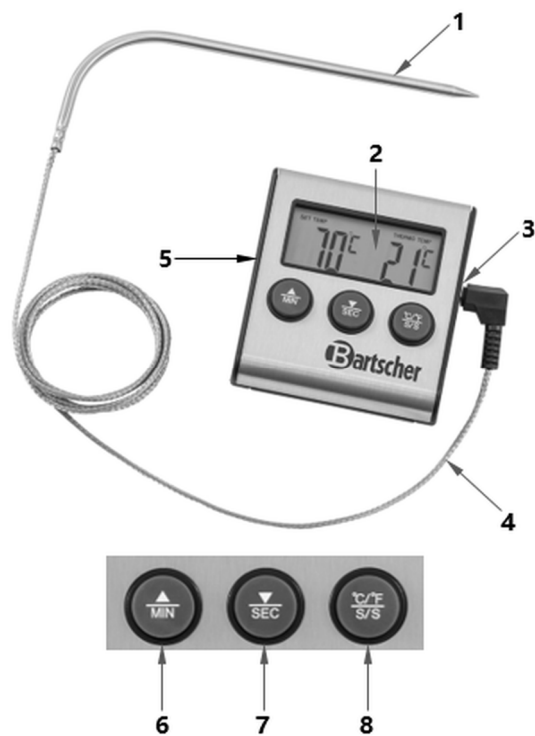


Fig. 1

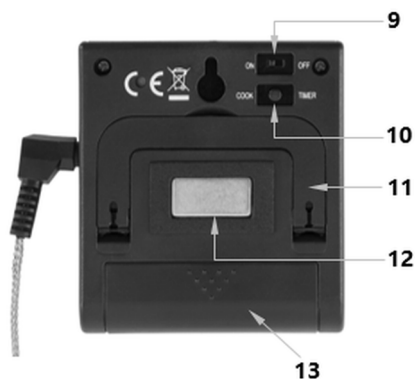


Fig. 2

## Description Fig. 1 + 2

- |                                  |                                                    |
|----------------------------------|----------------------------------------------------|
| 1. Core temperature sensor probe | 2. Digital display                                 |
| 3. Connection for Cable          | 4. Cable                                           |
| 5. Housing                       | 6. Minute setting button                           |
| 7. Seconds setting button        | 8. Button for setting the temperature unit °C / F° |
| 9. ON/OFF switch                 | 10. COOK/TIMER button                              |
| 11. Setting feet, fold-out       | 12. Magnetic suspension device                     |
| 13. Battery compartment          |                                                    |

EN

## Intended use

The Thermometer is intended for core temperature measurement and temperature monitoring in foodstuffs during transport and storage.

## Mounting / positioning

The Thermometer can be positioned flexibly:

- by magnetic suspension on the oven
- free-standing next to a pan, for example, with the help of the fold-out setting feet



Fig. 3



Fig. 4

EN

## Operation

1. Insert the probe of the temperature sensor into the food.
2. Slide the ON/OFF switch on the back of the appliance to the ON position to switch it on.
3. Connect the temperature probe to the connection provided on the right-hand side of the appliance.

The digital display on the left shows the current temperature in the food and the preset alarm temperature on the right.

### 4. Use in temperature mode

- Press the MIN or SEC buttons to adjust the alarm temperature upwards or downwards.

If the current temperature exceeds the set alarm temperature, the appliance emits an alarm tone.

Press any button to switch off the alarm.

- Press the °C / °F buttons to switch between Celsius and Fahrenheit display.

## 5. Use in Timer mode

- Switch the button on the back to the TIMER position to activate TIMER mode;

00 (MIN): 00 (SEC) appears on the screen,

- press the MIN button to set the minute value,
- press the SEC button to set the seconds value,
- press the MIN and SEC buttons simultaneously to delete the value,
- press the S/S button to start the countdown.

Once the set time has been reached, the device emits an alarm tone.

Press any button to switch off the alarm.

## 6. Use in COOK mode

- switch the button on the back to the COOK position to activate COOK mode,
- press the MIN button in COOK mode to increase the alarm temperature,
- press the MIN button in COOK mode to lower the alarm temperature.

7. Slide the ON/OFF switch on the back of the appliance to the OFF position to switch it off.

EN

## Changing the battery

1. Replace the battery when the display becomes weaker.
2. Remove the battery compartment cover from the battery compartment.
3. Remove the empty Battery from the battery compartment.
4. Insert a new AAA 1.5V Battery.
5. Then insert the battery compartment cover into the battery compartment.

## Cleaning

1. Clean the Thermometer thoroughly after each use.

### **ATTENTION!**

**The Thermometer is not waterproof.**

Do not immerse the Thermometer in water.

2. Only clean the Core temperature sensor with a damp cloth. Use a mild cleaning agent for heavy soiling.
3. Wipe with a clean cloth to remove any cleaning agent residue.
4. Wipe the Core temperature sensor regularly with a disinfectant suitable for the food sector.
5. Wipe the housing with a soft, damp cloth.
6. Then dry the Thermometer or allow it to air dry.