

IF-50



300370

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 2.0

Date of preparation: 2026-05-29

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions	3
1.3	Intended Use	5
1.4	Unintended Use	5
2	General information	6
2.1	Liability and Warranty	6
2.2	Copyright Protection	6
2.3	Declaration of Conformity	6
3	Transport, Packaging and Storage	7
3.1	Delivery Check	7
3.2	Packaging	7
3.3	Storage	7
4	Technical Data	8
4.1	Technical Specifications	8
4.2	Functions of the Appliance	8
4.3	List of Components of the Appliance	9
5	Installation and operation	11
5.1	Installation	11
5.2	Operation	13
6	Cleaning	15
6.1	Safety Instructions for Cleaning	15
6.2	Cleaning	15
7	Disposal	16



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

EN

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- Ensure that no liquids come into contact with the device's connectors or the mains plug. Moisture can lead to electrical hazards or damage to the device.
- Always disconnect the device from the mains supply before carrying out any installation or dismantling work, cleaning, maintenance, or if the device is not going to be used for an extended period. To do this, pull the mains plug fully out of the socket.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.

- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

Operating personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- For use in living areas, restaurants, hotels and offices.

EN

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Using outdoors, in barns, stables and similar buildings.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Insect trap IF-50
Art. No.:	300370
Material:	Aluminium, brushed
Effective radius, approx., in m:	5
Light output:	1 x 7 W
Connected load:	0,007 kW 220-240 V 50/60 Hz
Adhesive film dimensions (W x D), in mm:	240 x 265
Dimensions (W x D x H), in mm:	235 x 115 x 305
Weight, in kg:	0,72

We reserve the right to implement technical modifications.

EN


Version / Characteristics

- Version:
 - standing appliance
 - wall mounting
- Colour: silver
- Insect killing method: adhesive film
- UV-A fluorescent lamp, 7 W
- The set includes: 1 adhesive film

4.2 Functions of the Appliance

The stainless steel insect trap may be used depending on needs as a standing appliance or wall-mounted appliance. The interaction of the UV-A fluorescent lamp and adhesive film makes it possible to eliminate insects quietly, economically and effectively.

4.3 List of Components of the Appliance

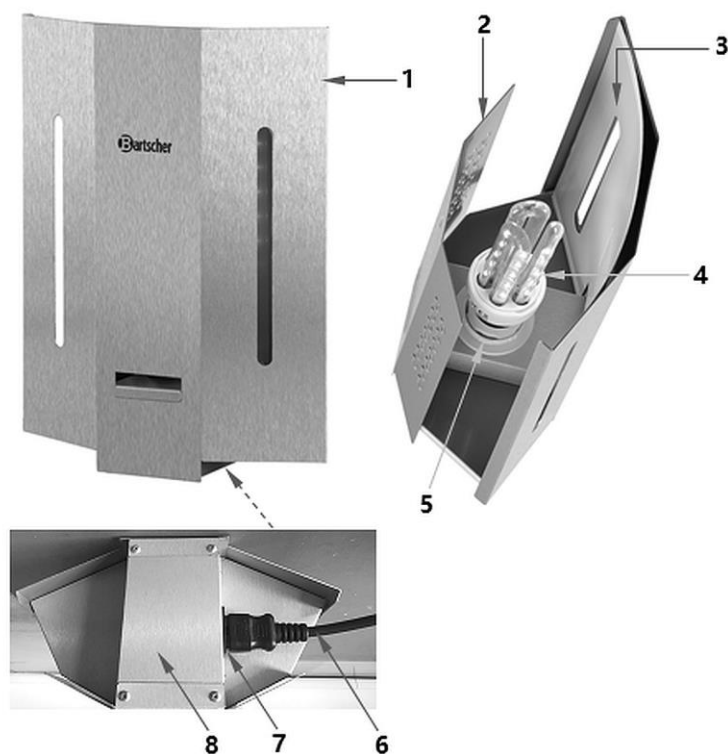

EN

Fig. 1

- | | |
|--------------------------------|--------------------------|
| 1. UV-A fluorescent lamp cover | 2. Wall-mounting plate |
| 3. Adhesive film | 4. UV-A fluorescent lamp |
| 5. Lamp fitting | 6. Power cord |
| 7. Appliance socket | 8. Base |

Accessories (not included in the scope of delivery)



Adhesive film IF-50

Compatible with insect trap IF-50

- Order unit: 1 box (5 adhesive films)
- Dimensions: W 240 x D 265 x H 1 mm
- Weight: 0.024 kg

Art. No.: 300372



EN

UV-A fluorescent lamp, 7 W

Compatible with insect trap IF-50

- Light output: 1 x 7 W / UV-A
- Dimensions: W 52 x D 170 x H 52 mm
- Weight: 0.08 kg

Art. No.: 300371

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Install the appliance as far as possible from zones, where people are present.
- Do not place any easily flammable liquids, gases or any other flammable objects near the appliance.
- In a room, place or hang the appliance in an area, where insects converge, but not in places, where draughts or wind may be present (windows, doors).
- If possible, place the appliance at the height of 1.5–2 meters, in a semi-shaded area.

Wall Mounting

1. Mount the appliance in a suitable area of a wall. Use suitable mounting materials (studs, screws).

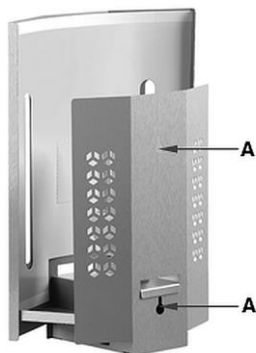


Fig. 2

2. Use eyes (A) in the wall-mounting plate and mark 2 boring points on a wall at the chosen height.
3. Bore 2 holes in the wall in marked points.
4. Insert suitable studs and screws in the bored holes.
5. Hang the appliance on the screws.

EN

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.

5.2 Operation

Indications and Tips

- Do not use the appliance in bright light, as it deteriorates its efficiency.
- Before switching on other sources of light in a room, first switch the insect trap for 10–20 minutes.
- We recommend using it for 24 hours. Repeated switching the appliance on and off shortens the life of fluorescent lamps.

Before Use

1. Before use, clean the appliance observing instructions in section **6 'Cleaning'**.
2. Then dry the appliance thoroughly.

Appliance Connection

1. First, connect the power cord to the appliance socket.
2. Then, insert the plug into a suitable single mains socket.

The UV-A fluorescent lamp will light up in blue.

Insects are lured by UV light and stick to the adhesive film located behind the cover.



DANGER!

Electric shock hazard!

Disconnect the appliance from the power supply (pull the plug out) before you start replacing the UV-A fluorescent lamp and adhesive film.

UV-A Fluorescent Lamp Replacement

When the UV-A fluorescent lamp of the insect trap is damaged, it may be easily replaced with a new UV-A fluorescent lamp (**Bartscher Art. No. 300371**).

When replacing, follow the instructions:

- undo the UV-A fluorescent lamp from the fitting,
- insert a new UV-A fluorescent lamp in the lamp fitting,
- re-connect the appliance into a single mains socket.

Adhesive Film Replacement

NOTE!

Due to hygienic reasons, replace the adhesive film in regular intervals (monthly). If the adhesive film is covered with insects entirely, replace it immediately.

When replacing, follow the instructions:



- remove the used adhesive film from front cover guides,
- remove protective film from a new adhesive film,
- place the new adhesive film on front cover guides,
- switch the appliance on as usual.

Fig. 3

Switching the Appliance OFF

1. If the appliance is not to be used any more, disconnect it from mains socket (pull the plug out).
2. Disconnect the power cord from the appliance socket.

Storing the Appliance

1. If the appliance is to remain unused for a prolonged period of time, remove the used adhesive film from the appliance.
2. Clean the appliance observing indications in Section 6 'Cleaning'.
3. Store the appliance in a dry, clean place, not subject to frost nor direct sunlight, and away from the reach of children. Do not place any heavy objects on the appliance.

6 Cleaning

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

EN

6.2 Cleaning

1. During the period of using the appliance, it must be cleaned daily.
2. Wipe the appliance housing with a soft, damp cloth.
3. Dry all cleaned surfaces thoroughly.
4. Clean the UV-A fluorescent lamp regularly with a soft, dry cloth, as even a thin layer of dust weakens the light beam power.

7 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.

Fluorescent lamps (energy-saving lamps)

Fluorescent lamps (energy-saving lamps) must be disposed of separately. Please refer to local recycling centre.