

300



370205

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 1.0

Date of preparation: 2026-05-06

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions	3
1.3	Intended Use	6
1.4	Unintended Use	6
2	General information	7
2.1	Liability and Warranty	7
2.2	Copyright Protection	7
2.3	Declaration of Conformity	7
3	Transport, Packaging and Storage	8
3.1	Delivery Check	8
3.2	Packaging	8
3.3	Storage	8
4	Technical Data	9
4.1	Technical Specifications	9
4.2	Functions of the Appliance	10
4.3	List of Components of the Appliance	11
5	Installation and operation	12
5.1	Installation	12
5.2	Operation	14
6	Cleaning and Maintenance	16
6.1	Safety Instructions for Cleaning	16
6.2	Cleaning	17
6.3	Maintenance	18
7	Disposal	18



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

EN

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- Ensure that no liquids come into contact with the device's connectors or the mains plug. Moisture can lead to electrical hazards or damage to the device.
- Always disconnect the device from the mains supply before carrying out any installation or dismantling work, cleaning, maintenance, or if the device is not going to be used for an extended period. To do this, pull the mains plug fully out of the socket.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.

- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

Hot Surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

EN

Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

Improper use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used in a technically flawless condition, providing for safe use.
- The appliance may only be used with connections in a technically flawless condition, providing for safe use.
- The appliance may only be used clean.

- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not attempt to modify nor alter the appliance.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- roasting of meat, fish and vegetables
- thermal processing of food (e.g., stew, ragout).

1.4 Unintended Use

EN

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- preparation of unsuitable food.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Multi-fryer 300
Article number:	370205
Material:	stainless steel
Volume, in l:	10,6
Basin material:	steel
Basin dimensions (W x D x H), in mm:	325 x 535 x 60
Plate thickness, in mm:	10
Number of heating zones:	1
Temperature range, min.–max., in °C:	50 - 300
Protection class:	IP24
Connected load:	3 kW 230 V 50-60 Hz
Dimensions (W x D x H), in mm:	330 x 580 x 300
Weight, in kg:	23,8

We reserve the right to implement technical modifications.

Model / Properties

- Type: Tabletop unit
- Operating mode: Electric
- Equipment connection: ready to plug in
- Grease release tap: yes
- Grease collection tank: no
- Control lamps:
 - Heating
 - In operation
- Properties:
 - Drain cock with bayonet lock
 - Splash protection welded all round
- Including:
 - 1 sealing plug

EN


4.2 Functions of the Appliance

The multi-roaster is designed for food preparation directly on the cooking surface.

With a volume of 10.6 litres in a compact design, the Multibräter 300 delivers maximum output even in limited space. Goulash or ragouts, fried potatoes, fish, meat or vegetables can be perfectly prepared in the pan at the desired temperature within the range of 50 °C to 300 °C.

The permanently welded splash protection protects staff and the surrounding area from heat and grease splashes, whilst the integrated drain cock with bayonet lock makes cleaning easier.

4.3 List of Components of the Appliance

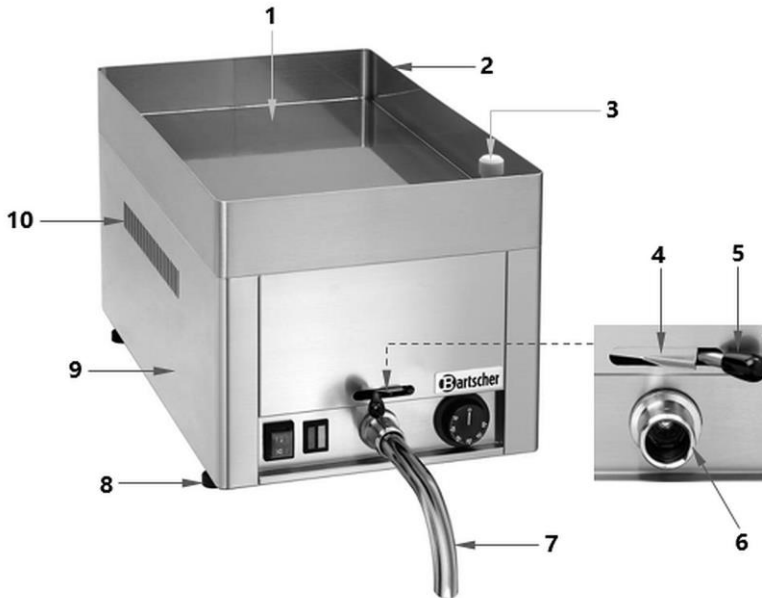

EN

Fig. 1

- | | |
|-------------------------------|--|
| 1. Crucible | 2. Splash protection |
| 3. Sealing plug Drain hole | 4. Locking mechanism Grease drain device |
| 5. Lever, grease drain device | 6. Pipe connection |
| 7. Grease drain pipe | 8. Height-adjustable feet (4x) |
| 9. Housing | 10. Ventilation openings |

5 Installation and operation

5.1 Installation



CAUTION!

Incorrect installation, positioning, operation, maintenance or misuse of the appliance may lead to personal injury or property damage.

Positioning and installation, as well as repairs may be performed by authorised technical service only and in compliance with the applicable national law.

NOTE!

The manufacturer disclaims all liability and provides no warranty for damages, which may be attributed to non-observance of regulations or incorrect installation.

EN

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.

Installation and operation

- Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- The installation area must be easily accessible and sufficiently large. Maintain a minimum clearance of 10 cm at the rear and sides, and 50 cm at the top and front, to allow unobstructed operation of the unit and to ensure good air circulation.
- If it is not possible to maintain the specified minimum clearance, protective measures (e.g. sheets made of heat resistant material) must be installed to ensure that the wall temperature remains within the specified safety limits (up to 90 °C).

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.

5.2 Operation



WARNING!

Risk of burns!

The housing and crucible become very hot during operation and remain hot for some time after switching off.

Do not touch the unit.

Operate the appliance only using the controls provided.

Only use suitable accessories for placing food in and removing it from the appliance.

Risk of fire!

Never place kitchen utensils, cloths, paper or similar items on the cooking surface during operation.

Never place plastic or other containers on the cooking surface.

CAUTION!

Operating the appliance at the highest power setting without food inside can cause the pan to overheat and lead to wear and tear or damage to parts of the appliance.

Never operate the appliance without food inside.

EN

Preparing the appliance

1. Clean the appliance and accessories before first use in accordance with the instructions in Section 6 **“Cleaning”**.
2. Dry the device and accessories thoroughly.
3. Before use, insert the plug into the drain hole in the base of the crucible.
4. Before starting the appliance, ensure that the drain valve is closed. Push the lock (4, Fig. 1) upwards and move the lever (5) to the right.

Controls / Control lamps

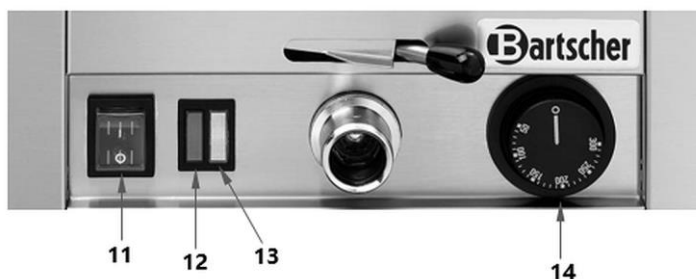


Fig. 2

- 11. ON/OFF switch
- 12. Operating control lamp (green)
- 13. Heating control lamp (orange)
- 14. Temperature control

Commissioning the unit

1. Connect the unit to a suitable single socket.
Switch the appliance on using the ON/OFF switch (11, Fig. 2).
The green control lamp (12) illuminates, indicating that the appliance has voltage.
2. Turn the temperature control (14) clockwise to the desired temperature setting.
The green power control lamp (12) and the orange heating control lamp (13) will illuminate during the heating phase.
When the heating control lamp (13) goes out, this indicates that the base of the crucible has reached the desired temperature.

Food preparation

1. Prepare the ingredients for the desired dishes.
2. Cook the desired dishes in the pot.
3. Keep an eye on the food whilst it is cooking.
4. If necessary, select a lower temperature setting by turning the temperature control (14) anti-clockwise.
5. Remove the cooked food from the pan.

NOTE!

Use suitable spatulas, tongs, ladles, etc. to remove the cooked food.

Switching off

1. Once the cooking/frying process is complete and the appliance is no longer in use, turn the temperature control to the "0" setting.
2. Disconnect the appliance from the mains by unplugging the mains plug from the socket.

6 Cleaning and Maintenance

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

EN

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Clean the cooled-down appliance after each use.
2. Remove the food from the pot.

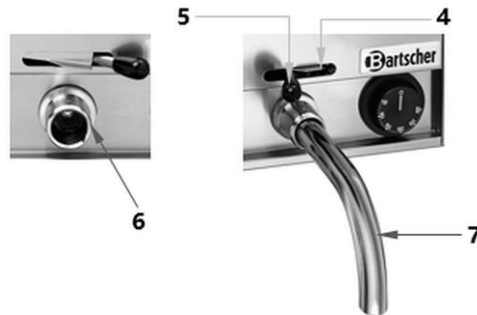


Fig. 3

3. Before draining the cooking residues, attach the grease drain pipe (7, Fig. 3) to the pipe connection (6) using the bayonet lock.
4. First place a suitable collection tray under the appliance's grease drain pipe.
5. Open the grease drain by pushing the latch (4) upwards and, with your other hand, moving the lever (5) to the left.
5. Pull the plug out of the drain opening.
6. Use a suitable scraper or spatula to push the food residues from the cooking surface towards the drain opening so that they are collected via the grease drain mechanism into the Containers placed underneath.
7. Dispose of the collected cooking residues in an environmentally friendly manner.
8. Then carefully clean the pan and the splash protection with warm water, a soft cloth or sponge, and a cleaning agent suitable for use in food preparation areas.
9. Rinse the pan with clean water and allow the water to drain out through the drain hole.
10. Wipe with a clean cloth to remove any remaining cleaning product.
11. Clean the plug with warm water, a mild detergent and a soft cloth or sponge.
12. Rinse it with clean water and insert it into the drain hole in the crucible.
13. Wipe the housing and the control panel of the appliance regularly with a soft, damp cloth.
14. Then dry all cleaned surfaces thoroughly.
15. To ensure a long service life, apply a thin layer of vegetable oil to the cooking surface after each cleaning.

6.3 Maintenance

We recommend you to have the appliance serviced at least once a year; if needed, we recommend entering into a service agreement.

7 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.