

700 GN211 - 1400 GN211



700705 - 700706

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 2.0

Date of preparation: 2026-06-16

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions	3
1.3	Intended Use	7
1.4	Unintended Use	7
2	General information	8
2.1	Liability and Warranty	8
2.2	Copyright Protection	8
2.3	Declaration of Conformity	8
3	Transport, Packaging and Storage	9
3.1	Delivery Check	9
3.2	Packaging	9
3.3	Storage	9
4	Technical Data	10
4.1	Technical Specifications	10
4.2	List of Components of the Appliance	13
4.3	Functions of the Appliance	14
5	Installation and operation	15
5.1	Installation	15
5.2	Operation	17
6	Cleaning and Maintenance	23
6.1	Safety Instructions for Cleaning	23
6.2	Cleaning	23
6.3	Maintenance	24
7	Possible Malfunctions	25
8	Disposal	28



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

EN

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- Ensure that no liquids come into contact with the device's connectors or the mains plug. Moisture can lead to electrical hazards or damage to the device.
- Always disconnect the device from the mains supply before carrying out any installation or dismantling work, cleaning, maintenance, or if the device is not going to be used for an extended period. To do this, pull the mains plug fully out of the socket.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.

- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Fire hazard / flammable materials hazard / explosion hazard!

- Do not use any electric devices in the appliance.
- Do not store nor use petrol or other flammable liquids and gases in the vicinity of this or any other appliance. Those gases may cause fire or explosion hazard.
- Do not put into the appliance any explosive materials, like sprays filled with flammable propellants. Contents of containers filled with flammable gases and liquids may leak in low temperatures, and the contents may catch fire from sparks generated by an electric appliance. Explosion hazard!
- In the case of coolant leakage, pull the plug from the socket. Remove all sources of ignition in the vicinity, ventilate room and contact technical service. Avoid coolant getting in contact with eyes, as it may cause serious eye damage.
- Never use any flammable liquids for cleaning the appliance or its parts. Gases released may cause fire or explosion hazard.
- In the case of fire, disconnect the appliance from the power supply before attempting adequate fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.
- Defrosting process may not be sped up with mechanical means or heat energy sources (candles or heaters) nor with any other means. Vapour produced may cause short-circuit and too high temperatures may damage the appliance.
- All ventilation slots should not be obstructed during operation.
- Never attempt to damage cooling installation of the appliance.

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention,

Safety

environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.
- Do not drill hole in the appliance nor install any objects on it.
- Do not place any heavy objects on the appliance.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Freezing and storage of deep-frozen food products.

This appliance is intended for use in ambient temperatures up to 30 °C.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Storing flammable or explosive objects and liquids, such as ether, petroleum or adhesives;
- Storing explosive materials, like sprays filled with flammable propellants;
- Storing pharmaceutical products or preserved blood.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

EN

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Version / Characteristics

- Type of cooling device: commercial deep freezer
- Design: vertical
- Cooling: circulating air
- Insulation: polyurethane, 60 mm
- Temperature control: thermostatic
- Control: button
- Automatic defrost function
- Evaporation of condensed water
- Digital display
- Thermostat
- ON/OFF switch
- Indicator lights: ON/OFF
- Door type: leaf door
- Door hinge: right (right/left), no possibility of changing
- Type of shelves: grille
- Height-adjustable shelves
- Appliance locked with a key
- Height-adjustable: 2,040 mm to 2,115 mm

EN

More information on the appliance is available in our website www.bartscher.com or, pursuant to the Regulation (EU) 2015/1094, in our product data base at <https://energy-label.ec.europa.eu/>. Enter article number for a model.

Name:	Deep freezer 700 GN211
Art. No.:	700705
Material:	CNS 18/10
Inner material:	Stainless steel
Volume, in l:	700
Nutzhalt in l:	461
Temperature range, min.–max., in °C:	-18 – -22
Ambient temperature, max., in °C:	30
Amount of coolant, in kg:	R290 / 0,102
Climate class:	4
EEL:	62.4
Energy efficiency class:	D (EU Nr. 2015 / 1094)
Energy consumption, in kWh/24 h:	6.4
Energy consumption, in kWh/year:	2336
GWP index:	3
Number of doors:	1
Number of shelves:	3
Shelves dimensions (W x D), in mm:	530 x 650
Load-bearing capacity of each shelf in kg:	40
Power supply:	0,69 kW 230 V 50/60 Hz
Dimensions (W x D x H) in mm:	655 x 855 x 2050
Weight in kg:	110,4


We reserve the right to implement technical modifications!

Name:	Deep freezer 1400 GN211
Art. No.:	700706
Material:	CNS 18/10
Inner material:	Stainless steel
Volume, in l:	1400
Temperature range, min.–max., in °C:	-18 – -22
Ambient temperature, max., in °C:	32
Amount of coolant, in kg:	R290 / 0,138
Climate class:	4
EEI:	76.14
Energy efficiency class:	E (EU Nr. 2015 / 1094)
Energy consumption, in kWh/24 h:	12.55
Energy consumption, in kWh/year:	4580
GWP index:	3
Number of doors:	2
Number of shelves:	6
Shelves dimensions (W x D), in mm:	530 x 650
Load-bearing capacity of each shelf in kg:	40
Power supply:	1,012 kW 230 V 50 Hz
Dimensions (W x D x H) in mm:	1320 x 855 x 2050
Weight in kg:	191,0

We reserve the right to implement technical modifications!

4.2 List of Components of the Appliance


Deep freezer 700705

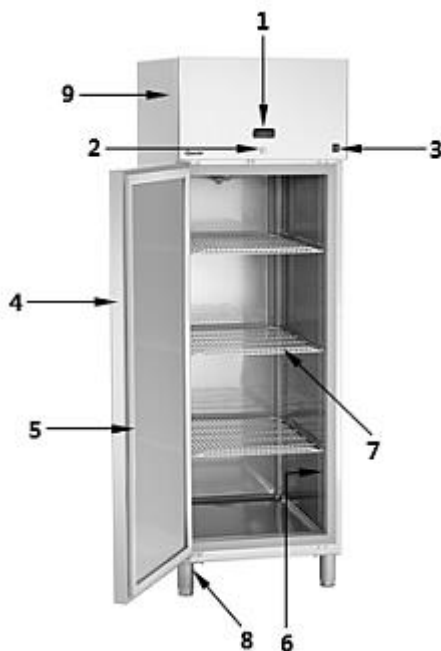

EN

- | | |
|--|--------------------------------|
| 1. Digital temperature regulator | 2. Lock |
| 3. ON/OFF switch with integrated operation indicator light | 4. Door |
| 5. Door seal | 6. Shelf guides (4x) |
| 7. Shelves (3x) | 8. Height-adjustable feet (4x) |
| 9. Housing | |

Deep freezer 700706

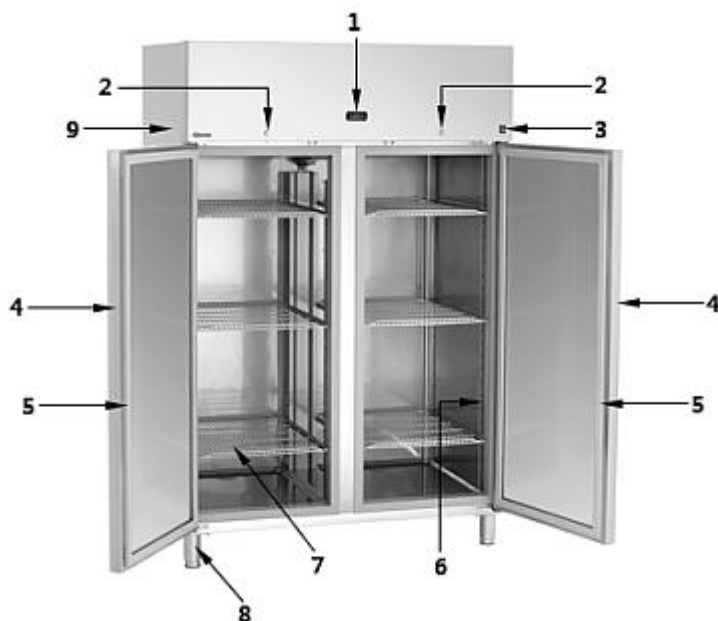

EN

- | | |
|--|--------------------------------|
| 1. Digital temperature regulator | 2. Lock (2x) |
| 3. ON/OFF switch with integrated power indicator light | 4. Door (2x.) |
| 5. Door seal (2x) | 6. Shelf guides (8x) |
| 7. Shelves (6x) | 8. Height-adjustable feet (4x) |
| 9. Housing | |

4.3 Functions of the Appliance

The appliance is designed for freezing and long-term storage of deep-frozen food products.

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Do not place the appliance in direct sunlight or in the vicinity of heat sources (cooker, radiator, heating devices, etc.). Heat sources may negatively affect power consumption, and restrict functions of the appliance, too.
- Place the appliance so that sufficient air circulation is ensured. Do not block nor cover ventilation openings in the rear wall of the appliance.
- Leave at least 10 cm clearance from walls and other objects.

- In order to avoid damage to the compressor, do not tilt the appliance more than 45° when positioning or transporting it.
- Do not position the appliance in high humidity locations. Air relative humidity in the place of installation should not exceed 60%. Excessive humidity may cause rust and negatively influence the refrigerating efficiency of the device.
- The appliance should be installed only in rooms, where ambient temperature does not exceed 32°C.
- To install the appliance, perform the following steps:
 - Remove the packaging of the appliance, except for the pallet.
 - Lift the appliance with the lift truck and move it to the planned installation location. Be careful not to damage the appliance. Control the stability in order not to lose the balance of the appliance.
 - Do not drag nor push the appliance, as it may fall down. This may also cause the damage to external elements or feet.
 - As soon as the appliance is in the planned installation location, remove the pallet.
 - Level the appliance by screwing in or out the height-adjustable feet.
 - Remove the protective film from the appliance at the end.

EN

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- Prior to first use, the appliance should be installed and left standing upright for at least 12 hours, before it is connected to power supply.
- After a power failure or when the plug is removed from the socket, do not reconnect the appliance to power supply for at least 15 minutes.

5.2 Operation

Freezing of food products in the deep freezer

- Deep-freeze only food products that are suitable to this end and withstand low temperatures well.
- Deep-freeze only fresh food products.
- A suitable packaging should be selected for each food product and the product should be packed well. The packaging must be air-tight and impervious to water, as this could cause the frozen product to dry. Plastic films and bags should be soft and smooth, so that they stick to the contents well.
- Never freeze again any thawed or partially thawed products. Such products should be processed and consumed within a maximum of 24 hours.
- Observe proper indications of the manufacturers as to the freezing of given food products.
- It is best to freeze products in small portions and thaw them one by one. This caters for fast and uniform freezing and thawing. Frozen product should be described with its name and the date of freezing.
- When freezing larger amounts of fresh food products, the temperature in the appliance may rise temporarily. This does not affect the already stored food products.
- Do not place bottles filled with liquids in the appliance. Freezing liquids increase their volumes and may cause bottles to crack.
- Avoid opening of doors during the freezing process.

Storage of deep-frozen food products in the deep freezer

- Observe instructions for storage of food products indicated on their packages. If there are no indications, a food product should not remain in a frozen state for more than 3 months from the purchase date.
- The packages of food products frozen in the process of their manufacturing feature storage deadlines and temperatures. It is recommended to follow manufacturer's indications for storage and usage.
- Select only properly packed food products, provided with full data and store them in deep freezers in the temperature of -18 °C or below.
- When buying deep-frozen food products, transport them in suitable containers to avoid thawing and refreezing. As soon as possible, place such products in a deep freezer.
- Do not buy icy products, as icing denotes that they have already been partially thawed a couple of times.
- Protect food products against thawing and refreezing, as temperature rise shortens their storage period and deteriorates their quality.
- Partially or fully thawed food products should be immediately used. Low temperature preserves food products, but it does not eradicate micro-organisms. They reactivate at an accelerated pace and food products turn rapidly. Partial thawing reduces the nutritional value of food products, especially the nutritional value of fruits and vegetables, as well as ready-made meals.
- If the package is damaged or unnaturally bulged, it is likely that the food product has been stored improperly and that it is spoiled.

Preparation of the appliance

1. Prior to first operation, clean the appliance and its equipment according to instructions in section 6 **“Cleaning”**.
2. To end with, dry the appliance and accessories thoroughly.
3. Introduce the shelves into the appliance at the selected height.
4. Close the appliance door.
5. Plug the appliance into a suitable single socket.
6. Press the ON/OFF switch to **“I”** position, to switch the appliance on.
The red operation indicator light in the ON/OFF switch comes on.
7. Place the prepared beverages and food products only after the appropriate cooling capacity has been reached.
The temperature will be shown in the digital display.


Functions of operating elements and displays

The basic temperature setting is factory default and it equals the appliance operating temperature in the range of -18°C – -22°C .

With normal operation, the set value of the temperature sensor is displayed in the digital display.

The LEDs in the digital display indicate the status of function activation (Table 1), and with 3 buttons some functions may be activated/deactivated (Table 2).


Messages

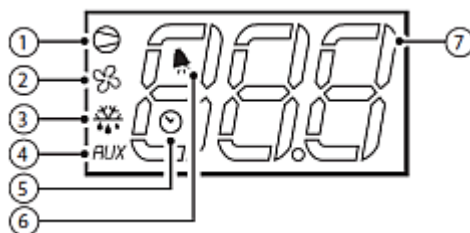

	Assigned Function	Normal Operation			Start-up
		ON	OFF	Flashes	
1	Compressor	ON	OFF	Required	ON
2	Fan	ON	OFF	Required	ON
3	Defrosting	ON	OFF	OFF	ON
4	Auxiliary output	Active output	Inactive output	-	ON
5	RTC clock	RTC available, activated (tEN=1) and at least 1 programmed time cycle	RTC unavailable / deactivated (tEN=0) and no programmed time cycle	-	ON
6	Alarm	Active alarm	No active alarm	-	ON
7	Digits display	Consists of 3 displayed positions with a point and -199...999 interval. See /4, /5, /6 parameters for the sensor measurement value display, values in °C/°F and a point			

Table 1

Functions of Buttons

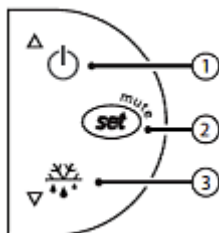

Button		Normal Operation		Start-up	
		Single press of the button	Combo press of buttons		
1	UP ON/OFF	For more than 3 sec.: interchangeable display of the ON/OFF status	Pressed concurrently: Activation/deactivation of continuous operation	-	
3	DOWN Defrost	For more than 3 sec.: Activation/deactivation of defrosting		Pressed concurrently: Activation of parameter RESET procedure	Pressed for more than 1 sec.: Display of software version Pressed for more than 1 sec.: EASY RESET
2	Set Mute	1 sec.: Display/setting of the set value - For more than 3 sec.: Access to parameter configuration (input password 22) - Switching off the sound alarm (buzzer)	-		

Table 2

Setting the set temperature

1. To introduce the setting or to change the set value, perform the following steps:
 - press the  button and hold it for one seconds — the set value starts to blink;
 - press the  or  button to increase or decrease the value;
 - use the  button to confirm the new value.

Automatic defrosting

The appliance is defrosted automatically.

Manual defrosting

Additionally, aside of the automatic defrosting, manual defrosting may be activated.

1. Press the  button and hold for at least 3 seconds.

The manual defrosting is initiated.

EN

NOTE!

If introduction of additional settings or modifications of parameter are necessary, contact technical service.

Switching the appliance off

1. If the appliance is not to be used for a longer period of time, set the ON/OFF switch to the “O” (OFF) position.
2. Disconnect the appliance from the socket (pull the plug out).

6 Cleaning and Maintenance

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

EN

6.2 Cleaning

1. Clean the appliance regularly.
2. Remove all objects from the appliance and store them temporarily in a cool room.
3. Remove all shelves from the appliance.
4. Clean the shelves with mild washing agent and soft cloth or sponge in warm water.
5. Rinse the shelves with clean water and dry thoroughly with soft cloth.

NOTE!

Never use hot water to clean the appliance.

6. Wipe the internal and external surfaces of the appliance with a soft, damp cloth. Use mild cleaning agent if required.
7. Wipe the washed surfaces with a cloth moistened in clean water.
8. Finally, dry thoroughly all washed surfaces.
9. The interior of the appliance should be wiped regularly (once a month) with a food-grade disinfectant.
10. Clean the door and the door seal of the appliance with a soft, damp cloth and mild cleaning agent. To end with, dry the door and door seal thoroughly.
11. After cleaning, leave the door open for the appliance to dry completely.
12. If the appliance is not to be used for a longer period of time, clean it according to the instructions above. Leave the appliance open to prevent generation of unpleasant odours inside.

6.3 Maintenance

The following operations should be regularly performed by a qualified specialist:

- cleaning the condenser with suitable tools (vacuum cleaner or soft brush);
- checking of electrical connections;
- checking of the thermostat and the sensor;
- checking of door and door seal.

7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. The works may only be performed by suitably qualified technical personnel.

When malfunction cannot be removed, contact the technical service. In such a case, provide article number, model and serial number. You will find this information on the rating plate.

Error	Possible Cause	Solution
No functions available	Plug improperly inserted into a socket.	Remove the plug and insert it properly in the socket
	Electric power supply safety fuse damaged	Check the fuse, connect the appliance to another socket
	No power supply	Check the electric power supply
Temperature inside the appliance is too high / too low	Condenser obstructed with dust	Contact the service company
	Icy evaporator	Defrost the appliance
	Direct sunlight or heat sources in immediate vicinity	Move the appliance away from heat sources
	Poor air circulation around the appliance	Keep sufficient clearance from walls or other objects
	Ambient temperature too high	Place the appliance in the right place
	Door is not closed properly or it has been opened for too long	Close the door tightly; limit the door opening time to minimum
	Damaged or deformed door seal	Contact the service company

Error	Possible Cause	Solution
Temperature inside the appliance is too high / too low	Too little clearance between objects inside the appliance	Provide for sufficient clearance between objects inside the appliance
	Appliance is overloaded	Reduce the number of stored objects
	Incorrectly set temperature controller	Set the temperature control correctly
Noise level of the appliance rises	Appliance is not placed on an even surface	Place the appliance on an even surface
	Loose nuts/screws	Tighten nuts/screws
	Appliance touches walls or other objects	Keep sufficient clearance from walls or other objects
	Objects in the appliance in contact with each other	Provide for sufficient clearance between objects

EN

Alarms and prompts

In the case of the alarm, the proper prompt flashes on the digital display, interchangeably with the temperature value; also, the buzzer and the alarm replay (if available) may be activated.

All alarms go off automatically (i.e. alarm prompt is stopped, when the cause for the alarm is eliminated; only the 'CHT' alarm must be confirmed manually through

switching off and on again of the appliance with the use of  button or disconnection from the mains supply).

When pressed, the  button switches off the buzzer; but the displayed alarm code and the alarm relay are deactivated only when the cause of the alarm is eliminated. The available alarm codes are listed in Table 3 below.

Alarm Code	Buzzer and Alarm Relay	LED	Description	RESET
E0	Active	ON	Sensor 1 error = regulation	Automatically
E1	Inactive	ON	Sensor 2 error = defrosting	Automatically
E2	Inactive	ON	Sensor 3 error = condenser / product	Automatically

Possible Malfunctions

IA	Active	ON	External alarm	Automatically
dOr	Active	ON	Open door alarm	Automatically
LO	Active	ON	Low temperature alarm	Automatically
HI	Active	ON	High temperature alarm	Automatically
EE	Inactive	ON	Appliance parameters error	Impossible
EF	Inactive	ON	Operation parameters error	Manually
Ed	Inactive	ON	Defrosting due to exceeded time limit	With the first, correctly completed defrosting
dF	Inactive	ON	Defrosting in progress	Automatically
cht	Inactive	ON	Initial alarm of the soiled condenser	Automatically
CHt	Active	ON	Alarm of the soiled condenser	Manually
EtC	Inactive	ON	Alarm of timers	Through the setting of a timer

Table 3

8 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.

Coolant

The propellant used in the appliance is flammable. It should be utilised pursuant to national regulations in force.