

1600S - 1600SR



850041 - 850042

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com



Version: 3.0

Date of preparation: 2025-11-12

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions	3
1.3	Intended Use	5
1.4	Unintended Use	5
2	General information	6
2.1	Liability and Warranty	6
2.2	Copyright Protection	6
2.3	Declaration of Conformity	6
3	Transport, Packaging and Storage	7
3.1	Delivery Check	7
3.2	Packaging	7
3.3	Storage	7
4	Technical Data	8
4.1	Technical Specifications	8
4.2	Functions of the Appliance	9
4.3	List of Components of the Appliance	10
5	Installation and operation	11
5.1	Installation	11
5.2	Operation	13
6	Cleaning	14
6.1	Safety Instructions for Cleaning	14
6.2	Cleaning	14
7	Possible Malfunctions	15
8	Disposal	16



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

EN

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.

- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Safety when using hotel hairdryers – air outlet

- The air outlet must never be covered or blocked during operation. Heat build-up can lead to material deformation, smoke development or device shutdown.
- Regularly clean the intake and outlet areas of lint, dust and debris.
- Do not use in close proximity to textiles, paper or light fibre materials that could be sucked in.
- If smoke is visible or there is an unusual smell, switch off the device immediately and allow it to cool down.
- Continuous operation only with free air circulation. Do not operate in confined spaces or on soft/covering surfaces.

EN

Operating Personnel

- The device can be used by children of 8 years old and older, as well as by people with reduced physical, sensory or mental abilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on safe use of the device and possible risks. Children should not play with the device.
- Cleaning and user maintenance may not be performed by children.

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Drying and styling natural human hair.

EN

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

- Drying and styling synthetic hair.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Hotel hairdryer 1600S
Art. No.:	850041
Material:	Plastic
Number of air flow regulation levels:	3
Degree of protection:	2
Cord length, in m:	1 - 2,5
Connected load:	1,6 kW 220-240 V 50/60 Hz
Dimensions (W x D x H), in mm:	245 x 185 x 110
Weight, in kg:	0,7

We reserve the right to implement technical modifications.

EN

Name:	Hotel hairdryer 1600SR
Art. No.:	850042
Material:	Plastic
Number of air flow regulation levels:	3
Degree of protection:	2
Cord length, in m:	1 - 2,5
Connected load:	1,6 kW 220-240 V 50/60 Hz
Dimensions (W x D x H), in mm:	265 x 205 x 105
Weight, in kg:	1,2

We reserve the right to implement technical modifications.

Version / Characteristics

- Version: wall-mounting
- Temperature control: Can be regulated via air flow
- Cold air
- Cord type: Spiral
- ON/OFF push-button: On handle
- Main switch: On wall holder
- The set includes:
 - Wall holder
 - Fixing material
- Shaver socket (only with 850042)
 - 110 V and 230 V

4.2 Functions of the Appliance

Whether in a hotel room, guest house, youth hostel, or ship's cabin — with its elegant black design, this hotel hair-dryer enhances any interior. The integrated shaver socket and long spiral cord offer a high level of flexibility.

4.3 List of Components of the Appliance



1. Air flow regulation switch
2. ON/OFF push-button
3. Cord
4. Shaver socket
5. Holder
6. Filter

5 Installation and operation

5.1 Installation

Unpacking / Fixing

- Unpack the appliance and remove all external and internal packaging elements.




CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a manner making the connections easily accessible, so that they may be quickly disconnected if such a need arises.

Wall Mounting

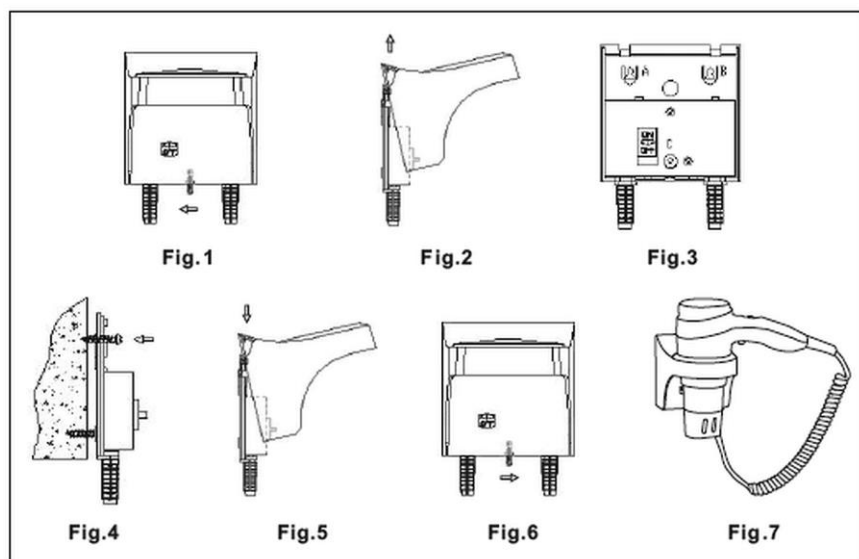

EN

1. Carefully take the hotel hair dryer from the package and check whether mounting materials are included.
2. Unscrew and remove the screw (Fig. 1).
3. Tilt the cover upwards and remove it (Fig. 2).
4. To mark the holes **A B C**, hold the wall holder at the spot where it is to be mounted (Fig. 3).
5. Drill holes in the wall at the marked spots.
6. Install the wall holder with the enclosed screws, in the three drilled holes (Fig. 4).
7. Hang the cover on the hook and press it downwards (Fig. 5).
8. Fix the cover with a screw (Fig. 6).
9. Insert the appliance in the wall holder (Fig. 7).

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.

5.2 Operation



CAUTION!

This appliance may not be installed in bathrooms.

Distance to a bathroom must be at least 1.5 m.

- Do not use the appliance near a bathtub, shower, wash-basin or any other water tank or container.
- After each use, pull the plug from the socket.
- Do not insert any metal objects in the air inlet and outlet openings, as this may lead to electric shock.

EN

Before use

1. Before use, clean the appliance observing instructions in section **6 'Cleaning'**.
2. Plug the device into a suitable single socket.

Starting-up/Adjustment

1. Switch the appliance on with the ON/OFF switch.
2. Select the desired air flow regulation level.

The following air flow settings are available:

Level 1: low – 30°C

Level 2: low – 50°C

Level 3 : high– 60°C

3. Dry your hair.

CAUTION!

Make sure you do not hold the hair dryer too close to your hair.

4. Switch the hair dryer off after use.

Shaver Socket

The 850042 appliance is equipped with a shaver socket.

1. Insert a shaver into the socket.
2. Do not use the hotel hair dryer if a shaver is connected to it.

6 Cleaning

6.1 Safety Instructions for Cleaning

EN

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Wipe the appliance housing with a soft, damp cloth.
2. Dry the housing with a soft cloth.
3. Clean the filter regularly.

7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. The works may only be performed by suitably qualified technical personnel.

When malfunction cannot be removed, contact the technical service. In such a case, provide article number, model and serial number. You will find this information on the rating plate.

Error	Possible Cause	Solution
No functions available	Plug is not inserted	Insert mains plug.
Heating level switches off during operation	The appliance is overheated	Wait for the appliance to cool down.

8 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.