

**Swing**



**860017**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0  
Fax: +49 5258 971-120  
**Service hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)

Version: 2.0

Date of preparation: 2025-05-21

**Original instruction manual**

## Technical data

|                                                  |                          |
|--------------------------------------------------|--------------------------|
| <b>Name:</b>                                     | <b>Rubbish bin Swing</b> |
| Art. No.:                                        | <b>860017</b>            |
| Material:                                        | stainless steel          |
| Inner container material:                        | Galvanised steel plate   |
| Volume, in L:                                    | 52                       |
| Diameter of the opening of the swing lid, in mm: | 290                      |
| Diameter of the inner container, in mm:          | 345                      |
| Height of the inner container, in mm:            | 588                      |
| Dimensions (W x D x H), in mm:                   | 390 x 390 x 735          |
| Weight, in kg:                                   | 8,83                     |

We reserve the right to implement technical modifications.

## Version / features

- Lid features:
  - swing lid
- Separate inner container with handle
- Removable inner container
- Castors: no

## User guidance

With the large capacity of 52 litres and practical swing lid, this waste container allows quick waste removal.

The waste container consists of an outer container, inner container, and a swing lid. The swing lid consists of two elements. The outer ring is placed upon the external container. Inside there is an integrated swing lid with 290 mm in diameter. The swing lid is easily removable from the outer container.

The removable inner container makes the waste disposal exceptionally quick and hygienic. If required, you can place a waste bag inside the waste container. Finally, the inner container is placed back into the outer container and the swing lid is put on the outer container. A curved, round iron element under the swing lid ensures that it always returns to its original position after throwing in the waste.

Please remember to regularly replace the waste bag inside the inner container.



## Cleaning

### **NOTE!**

**Scrubbing agents, washing agents with solvents or caustic substances may damage the surface of the waste container.**

For cleaning, use only agents suitable for stainless steel surfaces.

1. Remove the swing lid from the outer container of the waste bin.
2. Use the handle to take out the inner container.
3. Empty the inner container.
4. Regularly clean the inner container, outer container, and the swing lid with warm water and soft, moist cloth. Use an appropriate cleaning agent, if required.
5. Wipe the cleaned surfaces with clean water and a soft cloth.
6. Dry the waste container with a soft cloth.
7. Afterwards, insert the inner container into the outer container.
8. Put the swing lid on the outer container.