



A120408

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 7.0

Date of preparation: 2026-05-07

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions	3
1.3	Intended Use	6
1.4	Unintended Use	6
2	General information	7
2.1	Liability and Warranty	7
2.2	Copyright Protection	7
2.3	Declaration of Conformity	7
3	Transport, Packaging and Storage	8
3.1	Delivery Check	8
3.2	Packaging	8
3.3	Storage	8
4	Technical Data	9
4.1	Technical Specifications	9
4.2	List of Components of the Appliance	10
4.3	Functions of the Appliance	11
5	Installation and operation	11
5.1	Installation	11
5.2	Operation	13
6	Cleaning and Descaling	16
6.1	Safety Instructions for Cleaning	16
6.2	Cleaning	17
6.3	Descaling	18
7	Possible Malfunctions	18
8	Disposal	20



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- Ensure that no liquids come into contact with the device's connectors or the mains plug. Moisture can lead to electrical hazards or damage to the device.
- Always disconnect the device from the mains supply before carrying out any installation or dismantling work, cleaning, maintenance, or if the device is not going to be used for an extended period. To do this, pull the mains plug fully out of the socket.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.

- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

Hot Surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

EN

Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

Operating personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

Improper use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used in a technically flawless condition, providing for safe use.
- The appliance may only be used with connections in a technically flawless condition, providing for safe use.
- The appliance may only be used clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not attempt to modify nor alter the appliance.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- heating-up sausages
- heating-up hot-dog buns.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- heating-up unsuitable food products.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Hot-dog machine, 4 toast sticks
Art. No.:	A120408
Material:	stainless steel glass
Material water tank:	stainless steel
Capacity water tank in l:	1,25
Glass cylinder diameter, in mm:	200
Glass cylinder height, in mm:	240
Number of toasting rods:	4
Temperature range, min.–max., in °C:	40 - 100
Connected load:	0,96 kW 230 V 50 Hz
Dimensions (W x D x H), in mm:	500 x 285 x 390
Weight, in kg:	7,6

EN

We reserve the right to implement technical modifications.

Version / Characteristics

- Temperature control: stepless
- ON/OFF switch with power indicator light for sausage heater
- ON/OFF switch with power indicator light for toasting rods
- Indicator lights:
 - heating-up
 - ON/OFF
- 4 toasting rods

4.2 List of Components of the Appliance

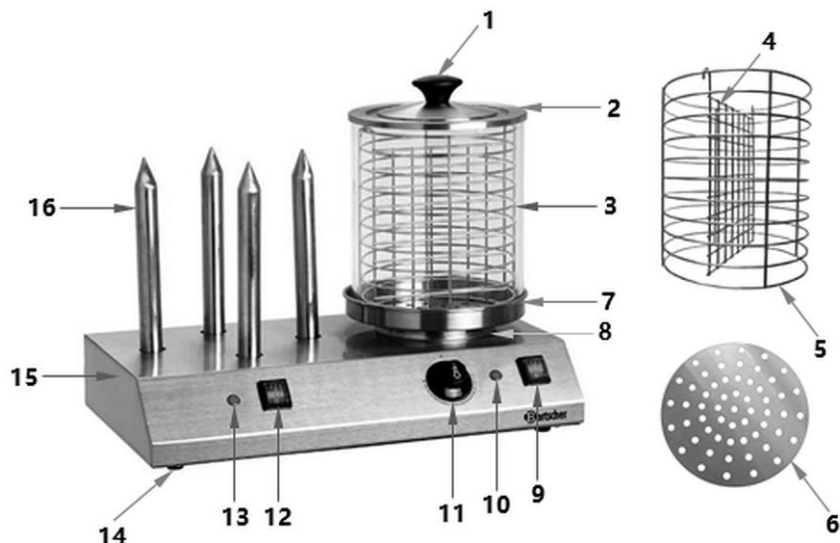


Fig. 1

- | | |
|---|---|
| 1. Lid handle | 2. Lid |
| 3. Glass cylinder | 4. Separating mesh |
| 5. Basket | 6. Perforated sheet |
| 7. Water pan | 8. Heating plate |
| 9. Sausage heater ON/OFF switch with integrated operation indicator light (red) | 10. Sausage heater heating-up indicator light (green) |
| 11. Temperature controller | 12. Toasting rods ON/OFF switch with integrated operation indicator light (red) |
| 13. Toasting rods heating-up indicator light (green) | 14. Feet (4 pcs) |
| 15. Housing | 16. Toasting rods (4 pcs) |

Equipment (Available Optionally)



Fig. 2

Glass hot dog cylinder protector 200

Material: silicone

Designed for: Glass hot dog cylinders
Ø 200 mm

Dimensions: W 200 x D 200 x H 14 mm

Weight: 0.028 kg

Art. No. A120430

4.3 Functions of the Appliance

Suitable hot-dog sausages are kept warm in the glass cylinder, heated up to 100°C for the required period of time.

The toasting rods serve the purpose of heating up hot-dog buns.

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.

- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Leave at least 10 cm clearance from flammable walls and items.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- Do not use the appliance with an external timer or remote control.

5.2 Operation



WARNING

Risk of burning!

The housing, glass cylinder, basket, separating mesh, toasting rods and lid heat up considerably during operation.

Do not touch the appliance.

Use protective mitts to operate the appliance.

Risk of scalding!

A hot steam may escape when the lid is removed from the glass cylinder.

Carefully remove the lid from the glass cylinder.

Use protective mitts.

Before First Use

1. Before first use, wash the appliance according to instructions in section 6 '**Cleaning and Descaling**'.
2. Thoroughly dry all cleaned surfaces and elements.

EN

Appliance Start-up

1. Insert the water pan and fill it with cold potable water up to approx. 3/4 of its volume.
2. Then insert the glass cylinder onto the water pan.
3. To end with, fit the lid on the glass cylinder.
4. Plug the appliance into a suitable single socket.
5. Switch the sausage heater ON/OFF switch to 'I' position.
The red operation indicator light in the ON/OFF switch comes on.

6. Rotate the temperature controller to the highest 'MAX' position.
The green heating-up indicator light to the right of the controller will be lit and will remain on until the set temperature is reached.

7. With this setting, heat up water shortly.
8. Then set the temperature controller to '0' position.
9. Switch the appliance off with the sausage heater ON/OFF switch.
10. Wait for the appliance to cool down.

11. When it has cooled down, remove the lid and then the glass cylinder.
12. Empty the water pan.
13. To end with, rinse the water pan and glass cylinder thoroughly with fresh water.

Heating-up Sausages

1. Re-insert the water pan and re-fill it with cold potable water up to approx. 3/4 of its volume.

WARNING!

Check the water level in the water pan regularly. Never use the appliance without water! Do not overfill the water pan.

2. Place the perforated sheet on the water pan.
3. Insert the glass cylinder onto the water pan.
4. Now, place the basket in the glass cylinder.
5. To end with, fit the separating mesh on the basket.
6. Place the prepared sausages in the basket (Fig. 3).

EN

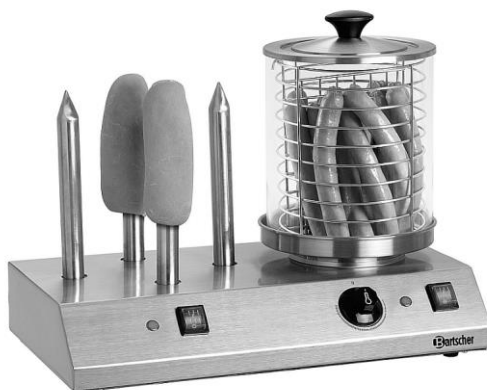


Fig. 3

7. Fit the lid on the glass cylinder.
8. Set the temperature controller to the highest 'MAX' position to heat up water in the water pan.

The green heating-up indicator light to the right of the temperature controller is lit during the heating-up phase, and it goes off, when the set temperature is reached.

9. Next, take a moment and rotate the temperature controller counter-clockwise, setting it to the desired temperature.

ATTENTION!

If the switch over is performed too late, the remaining heat generated by the heating plate may cause too long a boiling.

Sausages will be kept warm at the desired temperature.

10. Remove sausages from the basket as needed.
11. Carefully remove the lid from the glass cylinder. Lift the lid with the provided handle only.
12. Use suitable kitchen utensils to this end, such as tongs, forks, etc.

Toasting Hot-Dog Buns

1. Switch the toasting rods ON/OFF switch to 'I' position to heat up the rods.

NOTE!

Always heat up toasting rods first, before you put hot-dog buns on.

The green operation indicator light in the toasting rods ON/OFF switch lights up. When the green heating-up indicator light goes off, the temperature is reached.

2. During operation be careful not to hook your clothing with the special toasting rods.
3. Carefully put suitable hot-dog buns on the heated-up toasting rods (Fig. 3).

WARNING!

Risk of burning!

The toasting buns get very hot during operation.

Pay particular caution when putting on hot-dog buns.

4. When hot-dog buns are hot, remove them from toasting rods.

Hot-Dog Preparation

1. Fill the hot-dog buns as desired:
 - slice the bun lengthwise,
 - take a hot sausage out of the basket,
 - put the sausage in the hot-dog bun,
 - top with, e.g., herb mayonnaise, mustard, ketchup, pickles and roasted onion,
 - serve the hot-dog.

Switching the Appliance OFF

1. If the appliance is not in use any more, rotate the temperature controller counter-clockwise to the initial setting.
2. Switch the sausage heater ON/OFF switch to 'O' position.
3. Switch the toasting rods ON/OFF switch to 'O' position.
4. Disconnect the appliance from the mains socket (pull the plug out).

EN

6 Cleaning and Descaling

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.

Cleaning and Descaling

- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Clean the appliance regularly after the end of each working day, or more frequently if needed.
2. Remove individual elements from the appliance (lid, glass cylinder, basket, separating mesh, perforated sheet and water pan).

ATTENTION!

Due to hygienic reasons, clean the water pan at least 2 times a day!

3. Wash removed parts thoroughly with warm water, a soft cloth or a sponge and a mild cleaning agent.
4. Rinse thoroughly with clean water to remove all traces of the cleaning agent.
5. To end with, dry all washed parts with a soft dish-cloth.
6. Wipe toasting bars and the housing with a soft cloth or a sponge, using a mild washing agent.
7. Wipe with a clean cloth.
8. Wipe the control panel and power cord only with a slightly damp cloth. Make sure water does not enter the control elements.
9. Dry washed surfaces thoroughly with a soft cloth.

6.3 Descaling

ATTENTION!

Lack of regular descaling of the hot-dog appliance, as set forth in the instruction manual, may constitute a ground for rejecting warranty claims. Such claims are not covered by the warranty!

Unfavourable characteristics of water, as well as salts, fats, spices coming out of sausages favour creating of aggressive water solutions that may even enter into reaction with metal.

1. Due the reasons outlined, descale the water pan daily; otherwise, pittings may emerge in the pan.
2. Use commercially available descaling agents (observe manufacturer's indications!) or a water and vinegar solution (in 3:1 ratio).
3. To end with, clean the appliance observing indications in section '**Cleaning**'.

7 Possible Malfunctions

EN

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. The works may only be performed by suitably qualified technical personnel.

When malfunction cannot be removed, contact the technical service. In such a case, provide article number, model and serial number. You will find this information on the rating plate.

Error	Possible Cause	Solution
Appliance is off, temperature controller is set but the red operation indicator light in the switch does not light up, and the heating plate remains cold	Incorrectly connected plug	Insert the plug correctly
	Electric power safety fuse tripped	Check the fuse, and check the appliance after connecting it to another socket
	Damaged power cable	Contact the service company

Possible Malfunctions

Error	Possible Cause	Solution
Appliance is off, temperature controller is set but the red operation indicator light does not light up, although the heating plate heats up	Damaged operation indicator light	Contact the service company
Appliance is off, temperature controller is set but the red operation indicator light lights up, but the heating plate do not heat up	Damaged heating element	Contact the service company
Toasting rods ON/OFF switch is on, but the toasting rods do not heat up	Damaged toasting rods thermostat	Contact the service company

8 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.