



A151300 - A151600

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 5.0

Date of preparation: 2025-04-07

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words.....	2
1.2	Safety instructions.....	3
1.3	Intended Use	7
1.4	Unintended Use	7
2	General information	8
2.1	Liability and Warranty	8
2.2	Copyright Protection	8
2.3	Declaration of Conformity	8
3	Transport, Packaging and Storage	9
3.1	Delivery Check.....	9
3.2	Packaging	9
3.3	Storage	9
4	Technical Data.....	10
4.1	Technical Specifications	10
4.2	Functions of the Appliance.....	11
4.3	List of Components of the Appliance	12
5	Installation and operation	13
5.1	Installation.....	13
5.2	Operation	14
6	Cleaning	16
6.1	Safety Instructions for Cleaning	17
6.2	Cleaning.....	17
7	Disposal.....	18



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.

- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
 - To avoid fire hazard, clean the appliance regularly.
 - Do not cover the appliance with, e.g., aluminium foil or cloths.
 - Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
 - Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
 - In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
 - Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.
-
- The bread may burn. That is why the toaster should not be used near or under flammable materials, like curtains.

Hot Surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

Health Hazard Due to Burnt Food Products

- Acrylamides that are present in burnt food products are hazardous to health and may cause cancer.
- Remove the burnt pieces.
- Do not brown bread excessively.

Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Toasting bread slices,
- Defrosting frozen meals,
- Re-heating (pizzas, quiches, baguettes, hamburgers, etc.),
- Cooking au gratin.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Quartz tube toaster, single
Art. No.:	A151300
Material:	stainless steel
Number of levels:	1
Internal dimensions (W x D x H) of each level, in mm:	355 x 240
Time setting, up to, in min.:	15
Number of crumb drawers:	1
Connected load:	1,7 kW 220-240 V 50/60 Hz
Dimensions (W x D x H), in mm:	440 x 270 x 290
Weight, in kg:	7,8

EN

We reserve the right to implement technical modifications.

Name:	Quartz tube toaster, double
Art. No.:	A151600
Material:	stainless steel
Number of levels:	2
Internal dimensions (W x D x H) of each level, in mm:	355 x 240
Time setting, up to, in min.:	15
Number of crumb drawers:	1
Connected load:	3,0 kW 220-240 V 50/60 Hz
Dimensions (W x D x H), in mm:	440 x 270 x 405
Weight, in kg:	10,3

We reserve the right to implement technical modifications.

Technical Data

Version / Characteristics

- Version: bread toaster
- Heat source: quartz tube radiant heater
- Functions: toasting bread
- Timer: yes
- Control:
 - electronic
 - rotary controller
- The set includes: 1 pair of toast tongs

4.2 Functions of the Appliance

The quartz tube toaster is designed for quick toasting, defrosting frozen food, re-heating (pizzas, quiches, baguettes, hamburgers, etc.) and cooking au gratin without pre-heating. The adjustable time of up to 15 minutes and the adjustable top/bottom heaters allow you to prepare the right food quickly.

The removable crumb drawer facilitates cleaning of the appliance.

4.3 List of Components of the Appliance

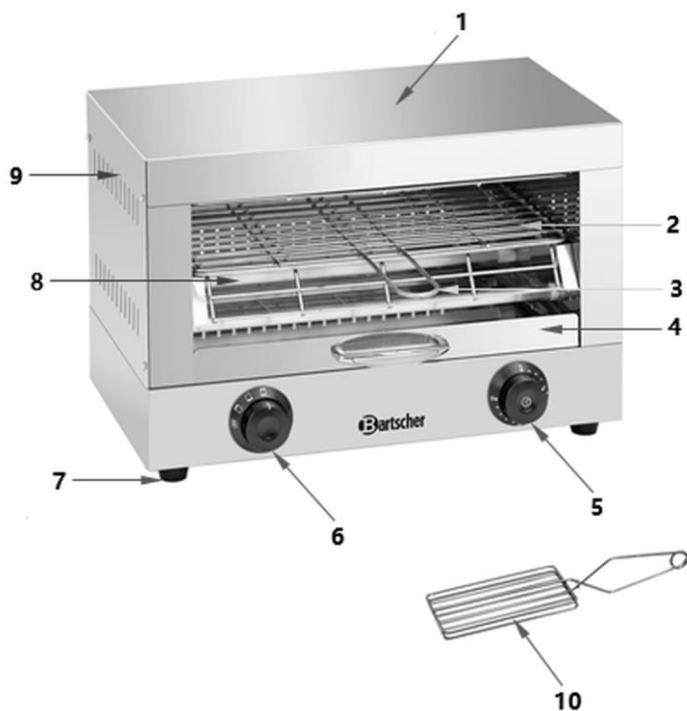


Fig. 1

- | | |
|-------------------------|--|
| 1. Housing | 2. Protective grille |
| 3. Grill grate | 4. Crumb drawer, removable |
| 5. Timer | 6. Rotary controller for top/bottom heater |
| 7. Feet (4 pcs) | 8. Quartz radiant heater |
| 9. Ventilation openings | 10. Toast tongs |

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.

- Never place the appliance directly underneath a hanging cupboard as hot air moves upwards.
- To ensure comfortable operation of the appliance and proper air circulation leave at least 10 cm clearance at the sides and 30 cm clearance in the front and back of the appliance. A clearance of at least 30 cm must also be left above the appliance; e.g., for wall cupboards.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- Do not use the appliance with an external timer or remote control.

EN

5.2 Operation

Warning Indications



WARNING!

Risk of burning/scalding!

The appliance surface and the grill grate holder heat up considerably during operation.

Do not touch any surfaces and elements of the appliance, nor insert hands into the appliance.

Use protective gloves when putting food into the appliance and taking it out.

Use suitable tongs for toasts.

The crumb tray and the holder heat up considerably during operation.

Before removing the crumb tray, wait until the appliance cools down.

Before First Use

1. Before you start using the appliance, make sure that there are no packaging materials nor other objects inside the appliance.
2. Prior to first use, clean the appliance and all removable components, observing instructions in section 6 “**Cleaning**”.
3. To end with, dry all washed elements and surfaces thoroughly.

ATTENTION!

Using the appliance without the crumb drawer may lead to the damage of the appliance or to soiling.

Always use the appliance with the correctly inserted crumb drawer.

4. Push the crumb tray as far as it goes into the designated compartment at the front of the appliance.
5. Plug the appliance into a suitable single socket.
6. Prior to first use, switch the appliance on for approx. 10 minutes without food to remove manufacturing residues.

The thermal insulation may cause smoke and unpleasant odours during initial operation, but these will no longer occur during further use of the appliance.

EN

Food Preparation

The appliance is equipped with top and bottom quartz radiant heaters. The quartz radiant heaters can be switched on together or separately. The double toaster is additionally equipped with middle quartz radiant heaters. The double toaster allows you to use both levels and prepare more food at the same time.

1. Use the rotary controller for the top and bottom heaters to set the required toasting method and use the timer to set the required time (0–15 min.).
2. Place the required food in the toaster.
3. Place food directly on protective grates or use the included grill grate. The grill grate handle makes it easier to remove the food.
4. Prepare food.

An acoustic signal is heard when the set time elapses. The appliance will switch automatically off.

NOTE!

The grilling process can be ended prematurely at any time by rotating the rotary timer to '0' position and the top/bottom heater rotary controller to 'OFF' position.

5. Using toasting tongs or the grill rack, carefully remove prepared food.
6. Wear heat-resistant gloves when removing food.
7. Wait until the appliance cools down.
8. Empty the crumb drawer regularly. It is located under the control panel.
9. Using the handle, pull the crumb tray out and empty it.
10. If necessary, clean the crumb tray with a soft, damp cloth and dry it afterwards.

Switching Appliance OFF

1. When the appliance is not in use, rotate the timer to '0' position and the top/bottom heater rotary controller to 'OFF' position.
2. Disconnect the appliance from the socket (pull the plug out).

6 Cleaning

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Clean the appliance every day once it has cooled down completely.
2. Remove the crumb tray from the appliance.
3. Remove crumbs.
4. Remove the grill grate from the appliance.
5. Wash the accessories (grill grate, toasting tongs and crumb tray) with a mild detergent and a soft cloth or sponge.
6. Thoroughly rinse the cleaned parts with fresh water.
7. To end with, dry them.
8. Clean the protective grille thoroughly with a soft, damp cloth.
9. Wipe with a clean cloth.
10. Then dry the protective grille with a soft cloth.
11. Wipe the housing with a damp, soft cloth. Use mild cleaning agent if required.
12. Dry the housing thoroughly with a soft cloth.
13. Leave the appliance to dry completely before next use.
14. Insert the crumb tray into the provided slot underneath the appliance.

7 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.