

MDI SNACK III Plus - MDI SNACK IV Plus



A162828 - A162829

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 2.0

Date of preparation: 2025-09-16

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions	3
1.3	Intended Use	6
1.4	Unintended Use	6
2	General information	7
2.1	Liability and Warranty	7
2.2	Copyright Protection	7
2.3	Declaration of Conformity	7
3	Transport, Packaging and Storage	8
3.1	Delivery Check	8
3.2	Packaging	8
3.3	Storage	8
4	Technical Data	9
4.1	Technical Specifications	9
4.2	List of Components of the Appliance	11
4.3	Functions of the Appliance	13
5	Installation and operation	13
5.1	Installation	13
5.2	Operation	14
6	Cleaning	21
6.1	Safety Instructions for Cleaning	21
6.2	Cleaning	22
7	Possible Malfunctions	23
8	Disposal	24



Read these instruction manual before using the appliance and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

EN

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.

- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

Safety during deep fat frying

- Never leave the operating appliance without supervision. Possible malfunctions may lead to overheating and ignition of frying oil / fat in cubes (blocks).
- If due to overheating, the frying oil / fat in cubes (blocks) catches fire, put the lid on and disconnect the appliance from the power supply.
- Spatters or outbursts of hot oil/fat may cause scalding of hands, arms and face. Use protective kitchen mitts.
- Do not use wet nor humid products. Dry them before use. Remove excess of ice from deep frozen products prior to frying them.

Safety

- Do not hang frozen food in the basket over the tank filled with hot frying oil / fat in cubes (blocks). When deep frying in fat, even the smallest drop of water may cause spatters of hot oil or even small outbursts.

Hot Surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

Health hazard due to burnt food products

- Acrylamides that are present in burnt food products are hazardous to health and may cause cancer. In order to avoid or reduce acrylamide content, products should always be fried to the point, when their colour is golden–yellowish, and not dim and dark nor brown.
- Burnt left-overs and scrubs should be regularly removed from frying oil.
- Products containing starch — cereals and potato products in particular — should be fried in a maximum temperature of 180 °C.

EN

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.

- Children should be supervised to ensure that they are not playing with or switching on the appliance.

1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Deep fat frying of adequate food products.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

EN

The following is an unintended use:

- Deep fat frying of inadequate food products.
- Deep fat frying of wet or humid food products.
- Do not hang frozen food in the fryer's basket over the hot frying oil/fat.

2 General information

2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Version / Characteristics A162828 / A162829

- Type: table-top appliance
- Type of power supply: electric
- Appliance connection: ready to plug in
- Heating element:
 - stainless steel
 - can be pivoted out
- Temperature control:
 - electronic
 - in 1°C increments
- Oil temperature check:
 - current temperature can be displayed at all times
 - indicator lamp for the set oil temperature reached
- Fat drain tap
- Digital display
- Cold zone
- Safety thermostat
- Control: knob
- ON/OFF switch
- Indicator lights: heating, ON/OFF, ready/set temperature reached
- Important indication:
 - intended for use with frying oil and fat in cubes (blocks)
 - for A162829 deep-fat dryer there are 2 separate mains sockets required

Name:	Deep fat fryer MDI SNACK III Plus
Article number:	A162828
Material:	Stainless steel
Number of basins:	1
Basin volume, in litres:	9
Basin dimensions (W x D x H), in mm:	240 x 300 x 200
Number of baskets:	1
Basket volume, in l:	5,5
Basket dimensions (W x D x H), in mm:	210 x 220 x 120
Temperature range, min.–max., in °C:	50 - 190
Connected load:	3,3 kW 220-240 V 50/60 Hz
Dimensions (W x D x H), in mm:	285 x 640 x 410
Weight, in kg:	6,4

The set includes:

EN

- 1 basket
- 1 lid

Name:	Deep fat fryer MDI SNACK IV Plus
Article number:	A162829
Material:	Stainless steel
Number of basins:	2
Basin volume, in litres:	2 x 9
Basin dimensions (W x D x H), in mm:	240 x 300 x 200
Number of baskets:	2
Basket volume, in l:	5,5
Basket dimensions (W x D x H), in mm:	210 x 220 x 120
Temperature range, min.–max., in °C:	50 - 190
Connected load:	2 x 3,3 kW 220-240 V 50/60 Hz
Dimensions (W x D x H), in mm:	570 x 640 x 410
Weight, in kg:	11,7

We reserve the right to implement technical modifications.


Technical Data

The set includes:

- 2 baskets
- 2 lids

4.2 List of Components of the Appliance

A162828

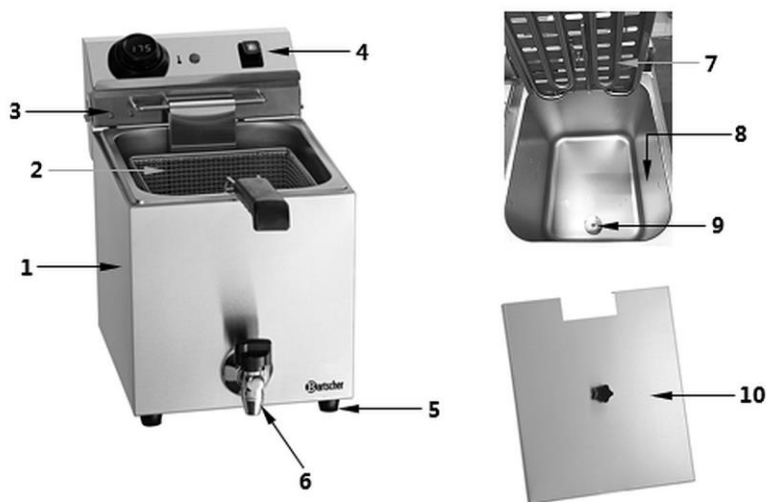


EN

Fig. 1

- | | |
|-------------------------------|-----------------------|
| 1. Main appliance | 2. Basket with handle |
| 3. Control box | 4. Control panel |
| 5. Feet (4 pcs) | 6. Fat drain tap |
| 7. Heating element with cover | 8. Basin |
| 9. Oil drain opening | 10. Lid with handle |

A162829

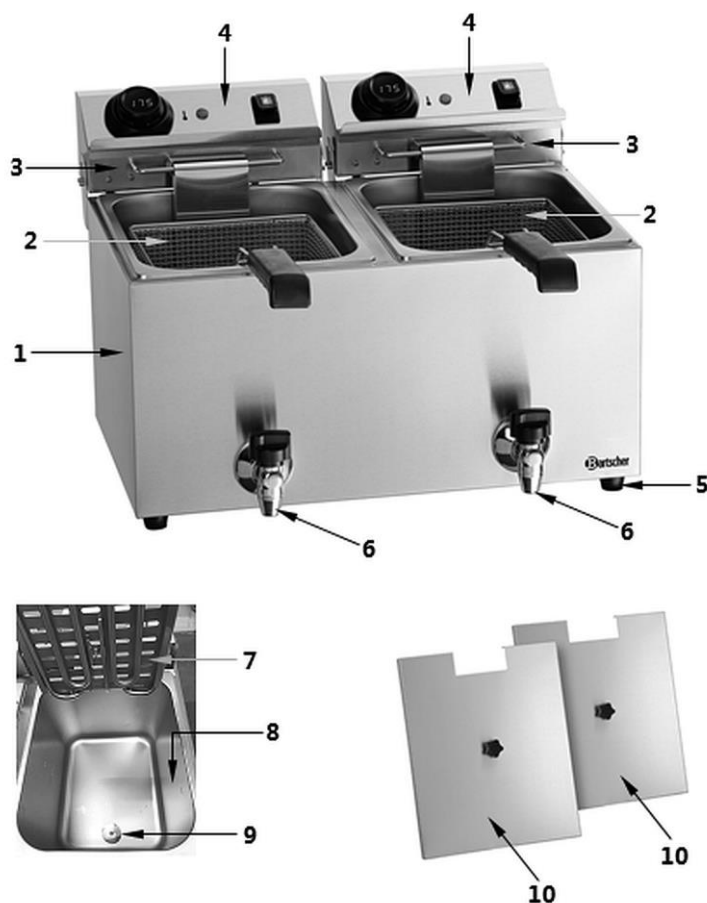

EN

Fig. 2

- | | |
|------------------------------------|----------------------------|
| 1. Main appliance | 2. Basket with handle (2x) |
| 3. Control box (2x) | 4. Control panel (2x) |
| 5. Feet (4 pcs) | 6. Fat drain tap (2x) |
| 7. Heating element with cover (2x) | 8. Basin (2x) |
| 9. Oil drain opening (2x) | 10. Lid with handle (2x) |

4.3 Functions of the Appliance

Correct frying in a simple way: Thanks to digital control knob, MDI Bartscher, you may set the temperature with accuracy down to one degree. Plus, current oil temperature check is possible at all times.

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

EN

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
 - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
 - Make sure that the designated escape routes are clear.
 - Ensure a stable position.
 - Allow sufficient space for work, maintenance and cleaning.
 - Leave the supply and exhaust air vents, if any, free.
 - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.

- Leave at least 20 cm clearance from flammable walls and items.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- In order to connect the twin fryer, 2 separate sockets are necessary.
- Do not use the appliance with an external timer or remote control.

5.2 Operation

Warning Indications

EN



WARNING!

Fire hazard!

Operation of the appliance with the oil level below MIN mark may lead to overheating of frying oil and cause oil to catch fire.

The oil level should be between MIN and MAX marks on the side wall of the basin.

If overheated during operation, the frying oil or fat in cubes (blocks) may catch fire.

The appliance should not remain in use for extended periods of time. If there is a break between subsequent frying processes, set lower temperature.

Never place the lid on during or immediately after the frying process.

The lid serves only the purpose of covering against dust and to maintain the oil temperature.



CAUTION!

Risk of burns!

Due to lower flashpoint, old oil that had already been used for frying, exhibits a tendency for self-ignition and favours frothing.

Do not use old oil for frying.

Regularly change frying oil.

When the oil level is above the MAX mark during operation of the appliance, hot oil may spill out.

The oil level should be between MIN and MAX marks on the side wall of the basin.

If the basket is overfilled with products for frying, the frying oil or fat in cubes (blocks) may boil over.

Observe the maximum allowable level of filling the basket (3 kg) with products for frying.

If water enters hot frying oil, it may cause spatters of oil and scalding.

Use only dry products for frying.

When draining hot frying oil / fat in cubes (blocks) be aware of the risk of burns due to spatters of oil.

The frying oil / fat in cubes (blocks) should be cooled down a bit and drain very carefully.

EN

Preparation of the Appliance

1. Take out the equipment (lid, basket(s)) from the appliance.
2. Place the basket handle in the right position, spreading it upwards and pulling by the fastening grip and snapping in place.

3. Remove the control box with heating element and permanently fixed cover from the appliance by pulling it out of fastening element and upwards.



Fig. 2

4. Prior to first use, thoroughly clean the appliance and equipment according to instructions in section **6 'Cleaning'**.

NOTE!

For safety reasons, the appliance operates only when the control box is properly mounted on the housing, so that the micro-switch below the control box sets the appliance ready for operation.

5. After cleaning, mount the control box with heating element on the fastening element of the appliance.

Fat drain tap is equipped with a safeguard, preventing its accidental opening. First, the tap must be pressed in — only then may it be rotated.

6. Prior to filling the basin with frying oil / fat in cubes (blocks) close the fat drain tap.



Fig. 3

EN

Instructions for Using Frying Oil or Fat in Cubes (Blocks)

- Always use oil suitable for frying (e.g. vegetable oil, sunflower oil, peanut oil, etc.) or fat in cubes/blocks only.

ATTENTION!

Fat in cubes (blocks) should never be melted in high temperatures; this may cause the temperature sensor to get damaged.

Fat in cubes/blocks should be melted in the deep-fat fryer, with melting point position selected.

Observe indications in section '**Indications for Melting Fat in Cubes (Blocks)**'.

- Use only oils and fats that are suitable for frying in high temperatures.
- Never mix different types of oil or fat as their boiling points may vary.

Indications for Melting Fat in Cubes (Blocks)

in the Deep-Fat Fryer

1. Remove the basket from the basin.
2. Place the fat in cube (block) directly on the cover of the heating element, so that it is covered.
3. Connect the appliance to a single grounded socket.

The green power indicator light in the ON/OFF switch lights up.

The digital display in the push rotary control knob shows **'OIL'**, to check the condition of oil in the basin.

4. Rotate the push rotary control knob, until **'ooo'** is shown in the digital display.

This is the **melting point position**.

5. To start the melting process, briefly press the push rotary control knob.
6. Wait for the fat in cube (block) to melt.
7. When the heating element is covered with liquid fat, the push rotary control knob may be rotated and set to maximum temperature setting.
8. Place subsequent blocks of fat for melting in the basin, until the right filling level is reached.
9. Then rotate the controller to set the temperature.

ATTENTION!

Fat in cubes (blocks) that has coagulated in the deep-fat fryer may be heated up and melted only with the melting point function of the appliance.

In the Separate Basin

1. To get the fat in cubes (blocks) faster in liquid form, there is a possibility of melting it in a separate container (e.g., a pot) on a hob.
2. Then, pour the melted fat into the deep-fryer's basin.

Filling the Basin with Frying Oil or Fat in Cubes (Blocks)

CAUTION!

Prior to filling with the frying oil or fat in cubes (blocks), the basin must be clean and dry.

1. Make sure the fat drain tap is closed and locked.
2. Prior to switching on, the basin must be filled with the required amount of liquid frying oil or fat in cubes (blocks).
3. During operation observe the level of oil in the basin and, if needed, top up with frying oil or fat in cubes (blocks).

CAUTION!

Never use the appliance if there is no oil for frying or fat in cubes (blocks) in the basin.

Control Elements / Displayed Messages

EN



Fig. 4

1. Push rotary control knob
2. Digital display
3. Indicator light
4. Ready/set temperature reached indicator light (green)
5. ON/OFF switch with integrated power indicator light (green)

Switching on

1. Connect the appliance to a single grounded socket.

The green power indicator light in the ON/OFF switch lights up.

The digital display in the push rotary control knob shows 'OIL', to check the condition of oil in the basin.

2. Operate the push rotary control knob by briefly pressing it.

3. Then rotate the controller to set the temperature.

The temperature may be set within the range of 50°C – 190°C.

The temperature is controlled with 1°C increments.

A red indicator light is lit in the push rotary control knob during the heating phase.

To check the current temperature, press the push rotary control knob. The digital display will display the current temperature. The red indicator light blinks.

NOTE!

When you check the current temperature, you may change temperature setting.

4. Press the push rotary control knob again to return to the previous message.

When the set temperature is reached, the ready/set temperature reached green indicator light will light up.

When the temperature in the basin drops, the appliance heats up again, and the red information indicator light lights up again.

5. For best results, wait until the appliance reaches the desired temperature and the suitable indicator light lights up, and then place suitable food products in the fryer.

NOTE!

Do not use frying oil nor fat in cube (block) for an extended period of time in too low a temperature, as they cease to be suitable for use.

Frying of Food

1. Place products for frying in the basket.
2. Using the handle slowly lower the basket into the basin with frying oil or fat in cube (block).
3. Place the basket on the cover of the heating element.

4. Fry the food.
5. After frying, carefully remove the basket using the handle and use the hook to hang the basket on the fixture for hanging on the control box.
6. Wait for the excess of fat to drip off of the fried products.



Fig. 5

7. When the frying process and operation of the appliance are completed, rotate the push rotary control knob to '0' position, and switch the ON/OFF switch to 'O' position.

Draining off and Removal of Frying Oil / Liquid Fat in Cube (Block)

ATTENTION!

The used frying oil / fat in cube (block) should be disposed of according to provisions of law on environment protection and local regulations in force.

EN

1. The frying oil / liquid fat in cube (block) should be replaced when it no longer fulfils legal requirements.

NOTE!

If the fat from cubes (blocks) hardens in the fryer, it may only be melted with the melting point function; then, the fat should be drained through the fat drain tap.

2. After cooling, the frying oil or fat in cube (block) should be drained from the basin via fat drain tap into a suitable container. Make sure that the container is placed stably.

Overheating Protection System

If the fryer is accidentally switched on without frying oil / fat in cube (block), or if the basin is filled with fat to the level below required minimum, the overheating protection system automatically switches off the appliance. This function serves the purpose of protecting the appliance against possible damages.

1. Disconnect the appliance from mains power supply.
2. Perform the following steps:
 - leave the appliance to cool down completely;
 - screw off plastic cover over the RESET button on the rear wall of the control box, rotating it counter-clockwise;
 - press the button;
 - screw the plastic cover anew, rotating it clockwise;
 - switch the appliance on as usual.



Fig. 6

6 Cleaning

EN

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. At the end of a working day clean the appliance thoroughly.
2. Remove the basket from the basin.
3. Raise the heating element and leave it to drip off.
4. Drain the cooled frying oil from the basin.

NOTE!

Observe instructions in section 'Exchange and Removal of Frying Oil / Liquid Fat in Cubes (Blocks)'.

ATTENTION!

Moisture may enter electric installation or control box and cause electric shock during switching on.

The main appliance nor the power cord may never be cleaned wet, nor under running water or any other liquid.

EN

5. Remove the control box with the heating element and its cover from the appliance. This allows for easy washing of the heating element and the basin.
6. Clean the control box and the heating element with its cover using a damp, soft cloth and mild cleaning agent. Wipe with a clean cloth.
7. The control panel may be wiped only with lightly damp cloth.
8. Clean the basket (baskets) and the lid (lids) in hot water with mild cleaning agent. If necessary, heavily soiled elements may be drenched for some time.
9. Wash the basin with warm water and mild cleaning agent. Use soft cloth or sponge.
10. Drain the water after washing to a suitable container using the fat drain tap. Then rinse the basin with fresh water and drain it using the fat drain tap again.
11. Wipe the surface of the appliance and power cord only with a slightly damp cloth.

7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. The works may only be performed by suitably qualified technical personnel.

Error	Possible Cause	Solution
The appliance is connected to the power supply, switched on, but the digital displays of push rotary control knobs do not show any values	Interrupted power supply	Check the power supply and the cord for damage or faults
	Safety fuse tripped	Check the fuse, connect the appliance to another socket
	No power supply	Check the electric power supply
Appliance is connected to the power supply, switched on temperature set, but the appliance does not heat up	At least one of the heating elements is damaged	Contact the service company
Appliance stops heating after some time	Overheating protection tripped: Too high a temperature in the basin (approx. 230°C)	Leave the appliance to cool down and re-start, observing indication in section 'Overheating Protection System'

8 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.

Used frying oil

Dispose of the used frying oil according to provisions of natural environment protection law in force.