

## **900 E400 G - 900 E800 G - 900 E800 GR**



**299001 - 299510 - 299511**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0  
Fax: +49 5258 971-120  
**Service hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)



Version: 1.0

Date of preparation: 2026-01-12

## Original instruction manual

|     |                                           |    |
|-----|-------------------------------------------|----|
| 1   | Safety .....                              | 2  |
| 1.1 | Explanation of Signal Words .....         | 2  |
| 1.2 | Safety instructions .....                 | 4  |
| 1.3 | Residual Risks .....                      | 7  |
| 1.4 | Personal Protective Equipment .....       | 9  |
| 1.5 | Intended Use .....                        | 10 |
| 1.6 | Unintended Use .....                      | 10 |
| 2   | General information .....                 | 11 |
| 2.1 | Liability and Warranty .....              | 11 |
| 2.2 | Copyright Protection .....                | 11 |
| 2.3 | Declaration of Conformity .....           | 11 |
| 3   | Transport, Packaging and Storage .....    | 12 |
| 3.1 | Delivery Check .....                      | 12 |
| 3.2 | Packaging .....                           | 12 |
| 3.3 | Storage .....                             | 12 |
| 4   | Technical Data .....                      | 13 |
| 4.1 | Technical Specifications .....            | 13 |
| 4.2 | List of Components of the Appliance ..... | 15 |
| 4.3 | Functions of the Appliance .....          | 16 |
| 5   | Installation Instructions .....           | 16 |
| 5.1 | Installation .....                        | 16 |
| 6   | Operating Instruction .....               | 20 |
| 6.1 | Operation .....                           | 21 |
| 7   | Cleaning and Maintenance .....            | 24 |
| 7.1 | Safety Instructions for Cleaning .....    | 24 |
| 7.2 | Cleaning .....                            | 25 |
| 7.3 | Maintenance .....                         | 25 |
| 8   | Disposal .....                            | 26 |



**Read these instruction manual before using the appliance and keep it available at all times!**

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

## 1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

### 1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



**DANGER!**

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



**WARNING!**

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



**CAUTION!**

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

***IMPORTANT!***

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

**NOTE!**

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

## 1.2 Safety instructions

### Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

EN

### Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.

## Safety

---

- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

## Hot Surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

## Operator's responsibility

The operator is responsible for complying with the currently applicable laws, regulations, ordinances and existing national regulations on accident prevention, environmental protection, as well as the internal operation, operating and safety instructions that apply at the respective installation site.

Obligations of the operator:

- Operate the appliance and its components only in a technical condition that does not raise any objections, with functional protective and safety elements.
- Prepare risk assessment at work positions.
- Provide instruction and regular staff training. Pay special attention to and observe the section concerning safety and any safety hints.
- Provide suitable personal protective equipment (PPE)
- Observe the intervals of maintenance and cleaning.
- Document training/instructions, replacement of components.

### Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

### Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

### Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

### 1.3 Residual Risks

| Residual risks                     | Hazardous situation                                                                                                                                                                                                                                                             | Warning                                                                                                                                                              |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Slipping and falling hazard        | The user may slip on the floor due to the presence of water or dirt.                                                                                                                                                                                                            | Wear non-slip protective footwear when using the appliance.                                                                                                          |
| Burns and scalding                 | The operator intentionally touches the appliance.                                                                                                                                                                                                                               |                                                                                                                                                                      |
|                                    | Operator intentionally comes in contact with hot substances (oil, water, steam, etc.).                                                                                                                                                                                          |                                                                                                                                                                      |
| Electrical injury (Electric shock) | Touching electrically conductive parts of the equipment during maintenance without first disconnecting the electrical supply. The operator carries out operations (using a power tool or without interrupting the electrical supply to the machine) while lying on a wet floor. | Maintenance of the machine must only be carried out by qualified personnel, equipped with personal protective equipment providing protection against electric shock. |
|                                    | Electric shock caused by a faulty earthing system or faulty electrical protective equipment.                                                                                                                                                                                    | Protective devices in accordance with relevant standards must be installed upstream of the appliance.                                                                |
| Falling hazard                     | The operator performs activities on the upper part of the appliance using inappropriate aids (such as a ladder with rungs, or climbing onto the appliance).                                                                                                                     | Do not carry out any work on the upper part of the appliance using unsuitable aids (such as ladders with rungs or climbing on the machine).                          |
| Tipping over hazard                | Carrying the appliance or appliance parts without suitable aids.                                                                                                                                                                                                                | When moving the appliance or its packaging, it is necessary to use suitable aids or lifting equipment.                                                               |

| Residual risks     | Hazardous situation                                                                                     | Warning                                                                                                                                                                                      |
|--------------------|---------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Chemical materials | The operator is handling chemicals (e.g.: cleaning agents, descaling agents, etc.).                     | Take appropriate precautions. Always follow the instructions on the safety data sheets and labels of the products used. Use personal protective equipment recommended in safety data sheets. |
| Injury hazard      | There is an injury hazard during maintenance work if internal parts of the appliance frame are touched. | Maintenance work may only be carried out by qualified personnel equipped with suitable protective equipment (cut-resistant gloves, forearm protectors).                                      |
| Crushing hazard    | Personnel are at risk of crushing fingers or hands when handling moving parts.                          | Maintenance work may only be carried out by qualified personnel equipped with protective equipment (safety gloves).                                                                          |
| Ergonomics         | The operator works on the appliance without wearing the required personal protective equipment.         | The operator must wear personal protective equipment when working on the appliance.                                                                                                          |

### 1.4 Personal Protective Equipment

| Phase             | Safety clothing                                                                   | Safety footwear                                                                   | Gloves                                                                            | Eye protection                                                                    | Hearing protection                                                                | Respiratory tract protection                                                      | Head protection                                                                    |
|-------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
|                   |  |  |  |  |  |  |  |
| Transport         |                                                                                   | X                                                                                 |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                    |
| Moving            |                                                                                   | X                                                                                 |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                    |
| Unpacking         |                                                                                   | X                                                                                 |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                    |
| Assembly          |                                                                                   | X                                                                                 |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                    |
| Standard usage    | X                                                                                 | X                                                                                 | X (*)                                                                             |                                                                                   |                                                                                   |                                                                                   |                                                                                    |
| Settings          |                                                                                   | X                                                                                 |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                    |
| Standard cleaning |                                                                                   | X                                                                                 |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                    |
| Special cleaning  |                                                                                   | X                                                                                 | X                                                                                 |                                                                                   |                                                                                   |                                                                                   |                                                                                    |
| Maintenance       |                                                                                   | X                                                                                 | X (*)                                                                             |                                                                                   |                                                                                   |                                                                                   |                                                                                    |
| Dismantling       |                                                                                   | X                                                                                 |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                    |
| Disposal          |                                                                                   | X                                                                                 |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                    |

|   |                                                                        |
|---|------------------------------------------------------------------------|
| X | Personal protective equipment provided                                 |
|   | Personal protective equipment is available or must be used if required |
|   | Personal protective equipment not provided                             |

\* Gloves intended for standard usage and maintenance works must be resistant to high temperatures to protect operator's hands when the operator touches hot elements of the appliance or hot substances (oil, water, steam, etc.).

## 1.5 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Grilling of meat, fish and vegetables.

## 1.6 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Grilling of unsuitable food products.

## **2 General information**

### **2.1 Liability and Warranty**

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

**EN**

### **2.2 Copyright Protection**

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

### **2.3 Declaration of Conformity**

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

## 3 Transport, Packaging and Storage

### 3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

### 3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

### 3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

## 4 Technical Data

### 4.1 Technical Specifications

#### Model / Properties

- Series: 900
- Type: Free-standing unit
- Operating mode: Electric
- Equipment connection: 3 NAC
- Safety thermostat
- Base type: open
- Height-adjustable feet: yes
- Height-adjustable from 855 mm to 900 mm
- Control lamps: On/Off | Heating
- Protection class: IPX4
- Including: 1 x Grease collection tank 1/3 GN

**Subject to technical changes!**

**EN**

|                                           |                                 |
|-------------------------------------------|---------------------------------|
| <b>Designation:</b>                       | <b>Griddle plate 900 E400 G</b> |
| Item number:                              | <b>299001</b>                   |
| Material:                                 | CNS 18/10                       |
| Material roasting surface:                | hard chrome-plated steel        |
| Roasting surface design:                  | smooth                          |
| Cooking surface dimensions (W x D) in mm: | 340 x 640                       |
| Number of heating zones:                  | 1                               |
| Temperature range from - to in °C:        | 80 - 290                        |
| Power:                                    | 8 kW   400 V   50-60 Hz         |
| Dimensions (W x D x H) in mm:             | 400 x 900 x 900                 |
| Weight in kg:                             | 64,8                            |

|                                           |                                 |
|-------------------------------------------|---------------------------------|
| <b>Designation:</b>                       | <b>Griddle plate 900 E800 G</b> |
| Item number:                              | <b>299510</b>                   |
| Material:                                 | CNS 18/10                       |
| Material roasting surface:                | hard chrome-plated steel        |
| Roasting surface design:                  | smooth                          |
| Cooking surface dimensions (W x D) in mm: | 720 x 640                       |
| Number of heating zones:                  | 2                               |
| Temperature range from - to in °C:        | 80 - 290                        |
| Power:                                    | 16 kW   400 V   50-60 Hz        |
| Dimensions (W x D x H) in mm:             | 800 x 900 x 900                 |
| Weight in kg:                             | 117,4                           |

**EN**

|                                           |                                  |
|-------------------------------------------|----------------------------------|
| <b>Designation:</b>                       | <b>Griddle plate 900 E800 GR</b> |
| Item number:                              | <b>299511</b>                    |
| Material:                                 | CNS 18/10                        |
| Material roasting surface:                | hard chrome-plated steel         |
| Roasting surface design:                  | 2/3 smooth, 1/3 grooved          |
| Cooking surface dimensions (W x D) in mm: | 720 x 640                        |
| Number of heating zones:                  | 2                                |
| Temperature range from - to in °C:        | 80 - 290                         |
| Power:                                    | 16 kW   400 V   50-60 Hz         |
| Dimensions (W x D x H) in mm:             | 800 x 900 x 900                  |
| Weight in kg:                             | 117,4                            |

## 4.2 List of Components of the Appliance

299510 / 299511



299001



- 1. Frying surface
- 2. Control panel
- 3. Base unit
- 4. Grease collection tank
- 5. Feet (4x)
- 6. Ventilation chimney

EN

### 4.3 Functions of the Appliance

Griddle plate 900 series is designed especially for use in professional commercial kitchens, offering large capacities and maximum robustness.

The high-quality griddle plate with smooth or grooved surface and open base offers plenty of space for comfortable and efficient working thanks to its generous working depth.

## 5 Installation Instructions

### 5.1 Installation



#### CAUTION!

**Incorrect installation, positioning, operation, maintenance or misuse of the appliance may lead to personal injury or property damage.**

Positioning and installation, as well as repairs may be performed by authorised technical service only and in compliance with the applicable national law.

EN

#### NOTE!

**The manufacturer disclaims all liability and provides no warranty for damages, which may be attributed to non-observance of regulations or incorrect installation.**

## Installation Instructions

### Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



#### CAUTION!

##### Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
  - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
  - Make sure that the designated escape routes are clear.
  - Ensure a stable position.
  - Allow sufficient space for work, maintenance and cleaning.
  - Leave the supply and exhaust air vents, if any, free.
  - Comply with applicable technical and building regulations.
- The appliance is designed to be installed in closed rooms and may not be used in open air nor subject to any weather conditions.
- The appliance must be installed in a location where there is no risk of accidental contact with water.

EN

- The appliance must be transported in its packaging on the enclosed wooden pallet to the installation site using lifting equipment.
- During transport, all precautions must be observed to prevent the appliance from tipping over.
- Never place the appliance directly next to walls, furniture, or other objects made of flammable materials.
- Keep a distance of at least 200 mm from the surrounding walls and other objects.
- If keeping the minimum distance is not possible, the walls should be isolated with non-combustible, thermal insulation materials (e.g., films made of heat resistant materials, which may sustain wall temperature within the permissible safety limits (up to 60°C)). Take into account the applicable fire protection regulations.

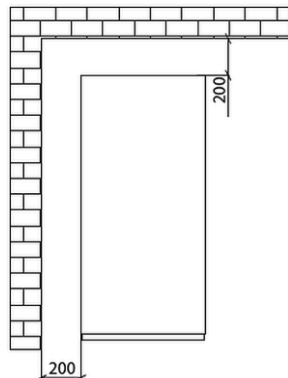


Fig. 1

EN

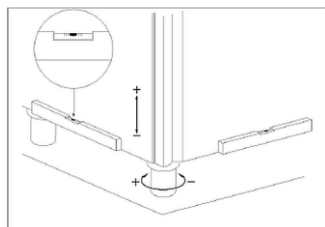


Fig. 2

- Unconditionally, the appliance must be level.
- Compensate for smaller unevennesses of flooring in the place of installation through screwing in and out of the height-adjustable feet.
- Use a spirit level as shown in Fig. 2.

### Connection — Electrical Power

- The electrical installation must be equipped with an efficient earthing system pursuant to the recommendations and specifications set forth in applicable standards. The electrical safety of the appliance can only be guaranteed if a standardised electrical installation is in place.
- In the case of direct connection to the mains supply, a device must be installed between the appliance and the mains supply, which is dimensioned as per the load and ensures separation.
- The contacts of such a device must feature a breaker path that allows complete disconnection under category III overvoltage conditions, pursuant to the installation rules. This device must also be installed in a location and in a manner that allows an operator to easily activate it, at any time.
- The main switch to which the power cord plug must be connected to should be set to 0 (zero) position. Have a qualified personnel check if the socket cord's section is suitable for the power consumed by the appliance.
- The power cord must be at least of H05 RN F type and have a cross-section suitable for the appliance.
- The connection terminal strip is located on the right-hand side, inside the base door.
- Feed the cable through the cable gland and screw connector, connect the plug connectors to appropriate terminals on the terminal strip and secure them.

#### **ATTENTION!**

**The grounding wire must be longer than the others so that, in the event of damage to the cable terminal, the grounding wire is disconnected after live wires.**

**The supply voltage of the operating appliance must not deviate from the nominal voltage by more than  $\pm 10\%$ .**

- Do not use the appliance with an external timer or remote control.

### Potential Equalization System

- The appliance must be integrated into an equipotential bonding system; the performance of the system must be checked pursuant to the requirements of applicable regulations.
- A terminal is available for connection; it is located at the bottom of the frame and marked with  symbol (attached to the side). A cord with a minimum cross-section of 10 mm<sup>2</sup> must be connected to this terminal.

## 6 Operating Instruction

### Indications for User

- Read carefully this instruction manual. It contains important indications for installation, usage and maintenance of the appliance.
- Before operating the appliance, make sure that its condition is flawless and that it is located in a well ventilated room.
- Always strictly observe the following safety precautions:
  - Check if there are no objects near or under the appliance that may restrict the amount of air necessary for burning.
  - Never cover ventilation and discharge openings in the appliance.
  - Any manipulation with the appliance, assembly or maintenance work may be performed exclusively by the authorized service personnel.
  - The user is authorized to perform only everyday routine cleaning to maintain the device in a good condition.
  - The appliance should be used solely for grilling of suitable food products; do not use it for any other purposed. The use against the intended purpose may lead to severe injury or damage caused by, for example, high temperatures and fire, etc.
  - Never leave the operating appliance without supervision.

### ATTENTION!

**Never use the grill grate for heating up food in pots, pans nor GN containers!**

- Proceed particularly carefully with the chrome-plated working surface. Remove all food residues after each preparation.
- Rotate products grilled on the smooth working surface with a suitable smooth cleaning scraper only, and on the ribbed surface — with a toothed cleaning scraper only.

## 6.1 Operation



### WARNING!

#### **Risk of burns!**

**The housing and cooking surface become very hot during operation and remain hot for some time after switching off.**

Do not touch the appliance.

Only operate the appliance using the controls provided.

Use suitable barbecue utensils to place and remove food from the grill.

**The grease collection tank and its content become very hot.**

Only empty the grease collection tank once it has cooled down.

#### **Fire hazard!**

Never place kitchen utensils, cloths, paper or similar items on the cooking surface during operation. Never place plastic or other containers on the cooking surface.

EN

### Preparing the appliance

1. Clean the appliance before using it for the first time according to the instructions in the "**Cleaning**" Section.
2. Dry the appliance thoroughly.
3. Before using the appliance, insert the grease collection tank into the opening provided under the frying surface in the base unit.


### Commissioning the device

Devices **299510** and **299511**, each with 2 heating zones, and device **299001** with one heating zone are equipped with separate controls so that the heating zones can be used and adjusted separately.

The following description applies to one heating zone at a time.

Set the temperature according to the following instructions.

### Controls

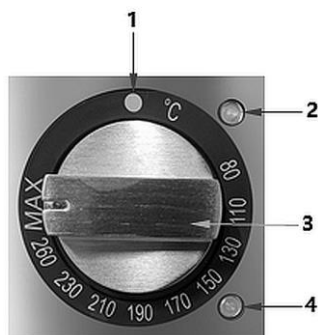

- 1 Off position (O)
- 2 Operating control lamp (green)
- 3 Temperature control
- 4 Heating control lamp (red)

EN

Fig. 3

1. Connect the device to the power supply.
2. Switch on the circuit breaker.
3. Turn the temperature control (3, Fig. 3) to the desired temperature in the range 80 °C to 260 °C - MAX.

The green control lamp (2) illuminates and the device switches on.

The red control lamp (4) lights up when the heating elements start to heat up and goes out when the set temperature is reached or the heating elements switch off.

### NOTE!

**We recommend preheating the cooking surface to a temperature approximately 30 °C - 40 °C above the cooking temperature and then setting the desired temperature at the start of the grilling process.**

### Food preparation

1. Preheat the cooking surface to the desired temperature for the selected food.
2. Prepare the food to be grilled.
3. Place the food on the cooking surface of the appliance little by little.
4. During grilling, fat and cooking residues flow through the fat drain opening into the Grease collection tank.

#### **CAUTION!**

**Check the grease collection tank regularly.**

**Empty the grease collection tank after use and once the appliance has cooled down.**

5. Keep an eye on the food while barbecuing.
6. Turn the food occasionally if necessary.
7. Remove the cooked food from the grill using suitable barbecue utensils (barbecue tongs, barbecue fork, etc.).
8. Serve the finished food.

### Switch off the device

1. When you have finished grilling and are no longer using the appliance, turn the temperature control knob to the OFF position (1, Fig. 3) to switch it off.

The control lamps will go out.

2. Disconnect the appliance from the power supply.

### Safety thermostat

If the frying surface reaches a temperature that exceeds the preset safety limit, the **Safety thermostat** automatically cuts off the power supply to the Heating elements to prevent damage to the appliance and ensure the safety of the operator and the working environment.

In this case, contact customer service.

## 7 Cleaning and Maintenance

The operator must ensure that the device and its safety components are kept in good condition. Control and safety systems should be checked for their effectiveness.

Maintenance, cleaning and repairs must only be carried out by suitably trained and specialised personnel.

If the safety devices need to be removed for maintenance, cleaning and repair, they should be reinstalled immediately after completion and their function should be checked.

All maintenance and cleaning work must be carried out in accordance with the operating instructions at the specified intervals.

### 7.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.
- Do not use scrubbing sponges nor abrasive agents.
- Do not use products containing chloride to clean the appliance.

### 7.2 Cleaning

#### **WARNING!**

**Never put ice cubes on a hot work surface to clean the device.**

1. When the grilling process is finished and the appliance has cooled down, clean the appliance thoroughly.
2. Using an appropriate cleaning scraper to this end, move grilling left-overs from the roasting surface over the grease drain opening and down to the grease collection tank.
3. To end with, clean the roasting surface with a soft cloth and a neutral cleaning agent.
4. Rinse a few times with fresh water to remove all traces of the cleaning agent.
5. Remove the grease collection tank from the base and empty it.
6. Clean the grease collection tank with warm water, a mild cleaning agent and a soft cloth or sponge.
7. Rinse in fresh water.
8. Wipe the housing, ventilation chimney, and control elements of the appliance with a soft cloth soaked in warm water and a mild cleaning agent.
9. Finally, thoroughly dry all cleaned surfaces and detachable elements of the appliance.
10. Refit the removed elements back in the appliance.
11. Use food oil to apply a thin protective layer onto the roasting surfaces.

EN

### 7.3 Maintenance

We recommend you to have the appliance serviced at least once a year; if needed, we recommend entering into a service agreement.

## 8 Disposal

### Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.