

15GN1/1



300194

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com

Version: 1.0

Date of preparation: 2025-08-21

Original instruction manual

Technical Data

Name:	Shelf trolley 15GN1/1
Art. No.:	300194
Material:	stainless steel
Designed for:	1/1 GN 1/2 GN 1/3 GN 2/3 GN
Number of guide rail pairs:	15
Distance between guide rail pairs, in mm:	80
Max. GN container depth, in mm:	65
Load-bearing capacity per guide pair, max. in kg.:	10
Total load-bearing capacity, max. in kg:	150
Number of swivel casters:	4
Locking swivel casters:	2
Diameter of casters in mm:	125
Number of caster dampers:	4
Material of caster dampers:	plastic
Dimensions (W x D x H), in mm:	440 x 680 x 1735
Weight, in kg:	19,2

EN

We reserve the right to implement technical modifications.

Version / Characteristics

- Delivery state: kit, simple assembly
- Area of application: clearing away
- Model: GN guides
- May be loaded from both sides: yes
- Worktop surface: no
- With handles: no
- Not included in delivery:
 - GN containers
 - sheets
 - grates

- Features:
 - one container lock each on the front and rear
 - frame made of square tubing 26 x 26 mm

Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.


The following is an intended purpose:

- Clearing away and transporting food in suitable containers.

Scope of Delivery / Part Name

- Unpack the Gastronorm trolley and remove the packing material pursuant to environmental regulations.
- Check completeness of delivery according to the list below:

EN

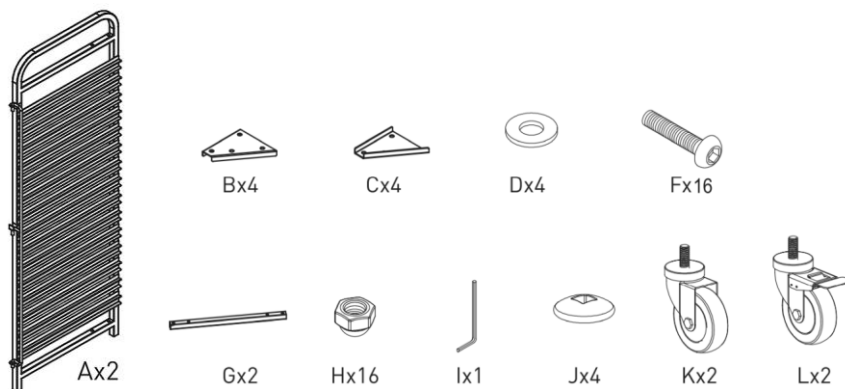

Component	Name	Component	Name
A	Lateral sections with 15 pre-installed guides and 1 container lock	G	Connecting strut
B	Top bracket	H	Dome nut
C	Bottom bracket	I	Allen wrench
D	Washer	J	Swivel caster dampers
F	Screw	K	Non-locking swivel caster
		L	Locking swivel caster

Assembly

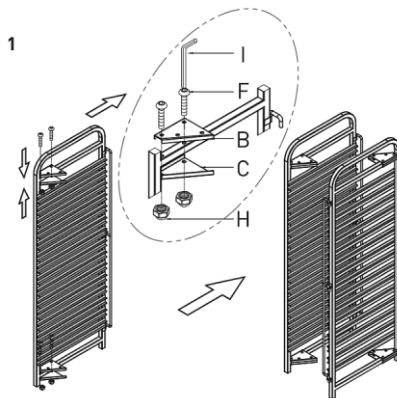


Fig. 1

1. First, fix 1 bracket each, (**B**) and (**C**), at the top and bottom of both lateral sections, using 2 screws each (**F**) and 2 dome nuts each (**H**). Do not tighten the pan head screws yet.

NOTE!

Fix brackets to square tubing of lateral sections, without container locking.

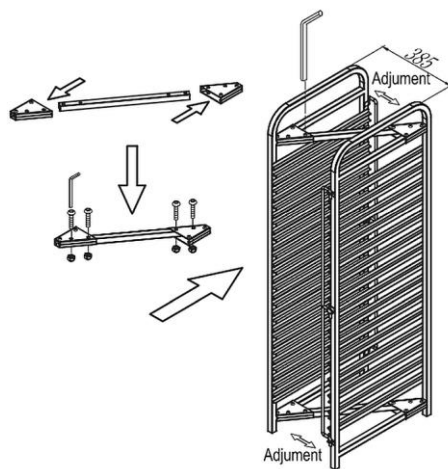


Fig. 2

EN

- Slide the connecting strut (**G**) between the brackets (**B**) and (**C**) in the upper area of the two side parts (**A**). Secure the connecting strut (**G**) to the mounted brackets using 4 pan head screws (**F**) and 4 cap nuts (**H**) with the Allen key (**I**). Use the same method to attach the connecting strut (**G**) to the lower section of the side panels (**A**).

Once both connecting struts are connected to the brackets, all 16 pan head screws can be tightened securely using the Allen key.

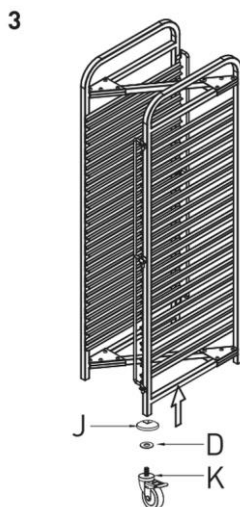


Fig. 3

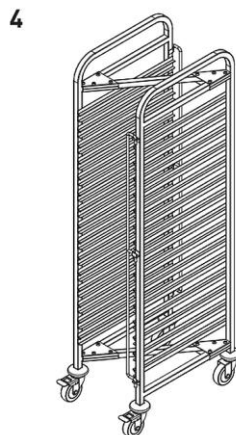


Fig. 4

3. Lay the shelf trolley on its side.

Slide a wheel buffer (**J**) over each square tube at the bottom.

Secure the four swivel castors (**K**) and (**L**) to the bottom of the side panels.

Place a washer (**D**) on each swivel castor and screw them into the square tubes of the side panels (Fig. 3).

Make sure that two identical swivel castors (with or without locking brakes) are attached at the front and rear (Fig. 4).

EN

Setting up

1. Place the shelf trolley on the swivel castors and check that it is stable.
2. You can level the shelf trolley using the swivel castors by turning them in or out.
3. Once you have positioned the shelf trolley in the desired location, secure the 2 swivel castors with the locks to prevent the shelf trolley from being accidentally moved or tipped over.

Filling shelf trolleys / Securing containers



Fig. 5

1. Place the appropriate GN containers in the inserts as required.
2. Secure the GN containers at the front and rear with the container locks by pulling them up slightly and folding them in front of the GN containers (fig. left).

Cleaning

ATTENTION!

Scrubbing agents, washing agents with solvents or caustic substances may damage the surface.

For cleaning, use only agents suitable for stainless steel.

EN

1. Clean the shelf trolley regularly with warm water and a soft, damp cloth. Use a mild cleaning agent if necessary.
2. Dry the shelf trolley with a soft cloth.