

16KN



300199

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com

Version: 1.0

Date of preparation: 2025-09-04

Original instruction manual

Technical Specification

Name:	Tray trolley 16KN
Art. No.:	300199
Material:	stainless steel
Number of guide rail pairs:	16
Distance between guide rails pairs, in mm:	145
Max. container depth, in mm:	65
Load-bearing capacity per guide rail pair, max. in kg:	8
Dimensions of work surface (W x D), in mm:	775 x 530
Railing height, in mm:	150
Load-bearing capacity of work surface, max. in kg:	10
Total load-bearing capacity, max. in kg:	48
Number of swivel castors:	4
Lockable swivel castors:	2
Diameter of castors, in mm:	125
Number of castor buffers:	4
Material of castor buffers:	plastic
Dimensions (W x D x H), in mm:	965 x 625 x 1695
Weight, in kg:	37,4

EN

We reserve the right to implement technical modifications.

Version / features

- Delivery form: Self-assembly kit, simple assembly
- Area of application: Clearing away, transport
- Version: Tray handles
- Designed for: Standard canteen trays (443 x 343 mm)
- May be loaded from both sides: Yes
- Worktop: Yes, with railing
- With handle(s): Yes
- The kit does not include:
 - containers
 - sheets
 - grates
 - trays

Intended Use

EN

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Clearing away and transport of GN containers, sheets, grates, trays.

Scope of Delivery / Part Name

1. Unpack the tray trolley and dispose of the packing material pursuant to environmental regulations.
2. Check the delivery for completeness, according to the list below:

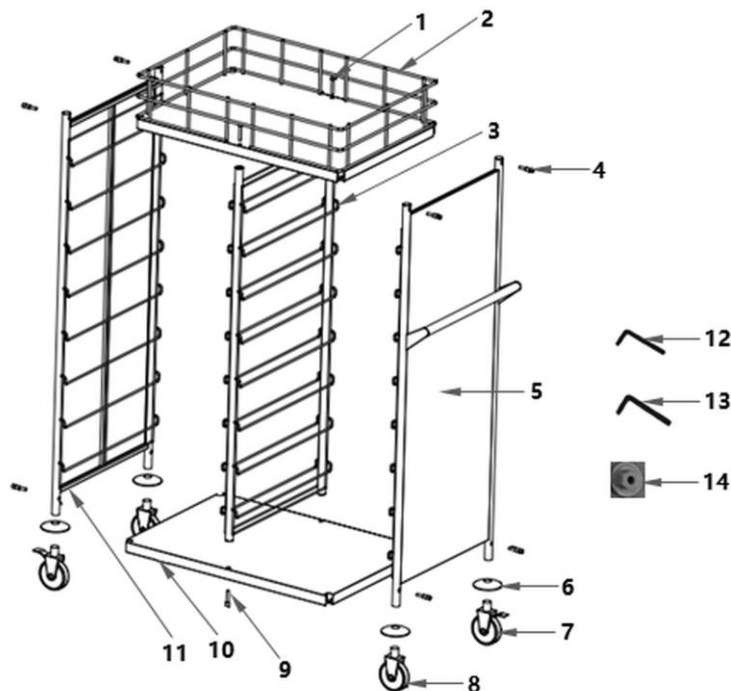




Fig. 1

Element	Quantity	Name
1	2	Round pointed screw M8x60
2	1	Top shelf with railing
3	1	Partition mesh with pre-installed tray guide rails at both sides
4	8	Cylindrical head screw M8x40
5	1	Lateral section with a handle and pre-installed tray guide rails
6	4	Buffers for castors


7	2	Swivel castor with lock
8	2	Swivel castor without lock
9	2	Cylindrical head screw M8x40
10	1	Lower shelf
11	1	Lateral section with pre-installed tray guide rails
12	1	5 mm hex key
13	1	6 mm hex key
14	8	M8x40 screw caps

Assembly


EN

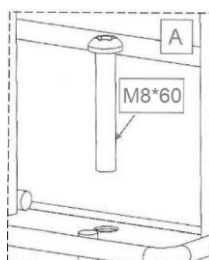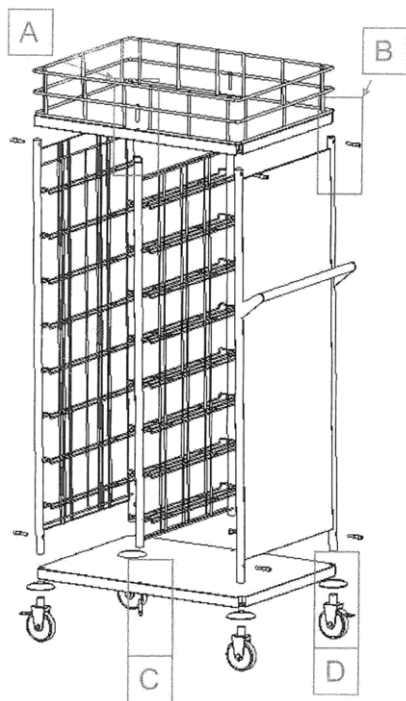


1. Start the assembly by fixing the top shelf with railing to the partition mesh. Put the shelf with railing on the side, and fix it to the partition mesh with the use of 2 M8x60 round pointed screws (Fig. A)

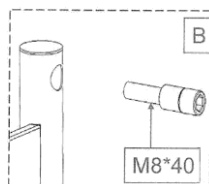

2. Insert the side sections through the corner recesses in the shelf with railing.
3. Then, fix lateral sections to the top shelf with railing with the use of M8x40 cylindrical head screws (Fig. B).

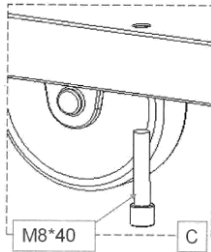

4. Insert the side sections through the corner recesses in the bottom shelf.
5. Screw the bottom shelf, first to the partition mesh, and then to the lateral sections. Use the included M8x40 cylindrical head screws (Fig. C).

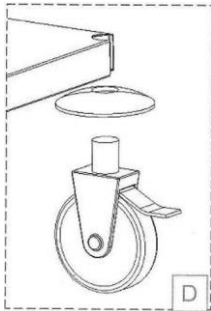

6. Place castor buffers onto the swivel castors.

HINT!

Lockable swivel castors should be attached to the lateral section with handle.

7. Fix the castors to the side elements by screwing them into the frame corner posts (Fig. D).

EN

Putting the Tray Trolley in upright position

1. Place the tray trolley on the castors and check its stability.
2. Level the tray trolley by screwing in or out the swivel castors.
3. After setting the tray trolley in a designated place, lock 2 swivel castors with locks to prevent accidental relocation or overturn of the tray trolley.

Tray Trolley Loading / Movement



Fig. 2

The tray trolley can be loaded from both sides.

1. Insert the required number of suitable trays in guides.
2. Put cups, glasses, etc. on the top shelf.

The shelf railings prevent tableware from falling down.

3. To move the tray trolley, use the handle on the lateral section.

Cleaning

EN

ATTENTION!

Scrubbing agents, cleaning agents with solvents or caustic substances may damage the surface.

For cleaning, use only agents suitable for stainless steel.

1. Clean the tray trolley regularly with warm water and a soft, damp cloth. Use a mild cleaning agent if required.
2. Wipe dry the tray trolley with a soft cloth.