

**18GN1/1**



**300195**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0  
Fax: +49 5258 971-120  
**Service hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)

Version: 1.0

Date of preparation: 2025-08-26

**Original instruction manual**

## Technical Specification

|                                                         |                                   |
|---------------------------------------------------------|-----------------------------------|
| <b>Name:</b>                                            | <b>Shelf trolley 18GN1/1</b>      |
| Art. No.:                                               | <b>300195</b>                     |
| Material:                                               | stainless steel                   |
| Designed for:                                           | 1/1 GN   1/2 GN   1/3 GN   2/3 GN |
| Number of guide rails pairs:                            | 18                                |
| Distance between guide rails pairs, in mm:              | 80                                |
| Max. container depth, in mm:                            | 65                                |
| Load-bearing capacity per guide rails pair, max. in kg: | 10                                |
| Total load-bearing capacity, max. in kg:                | 80                                |
| Number of swivel castors:                               | 4                                 |
| Lockable swivel castors:                                | 2                                 |
| Diameter of castors, in mm:                             | 125                               |
| Number of castor buffers:                               | 4                                 |
| Material of castor buffers:                             | plastic                           |
| Dimensions (W x D x H), in mm:                          | 450 x 670 x 1895                  |
| Weight, in kg:                                          | 23,0                              |

We reserve the right to implement technical modifications.

## Version / features

- Delivery form: Self-assembly kit, simple assembly
- Area of application: Clearing away
- Version: GN guide rails
- May be loaded from both sides: yes
- Worktop: no
- With handles: no
- Not included in delivery:
  - GN containers
  - sheets
  - grates
- Features:
  - one container lock per front and rear of the trolley
  - frame made of square tube 26 x 26 mm

## Intended Use

EN

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Clearing away and transporting food in suitable containers.

## Scope of Delivery / Part Name

1. Unpack the shelf trolley and remove the packing material pursuant to environmental regulations.
2. Check the delivery for completeness, according to the list below:

| Element                                                                             | Quantity | Name                                                                         |
|-------------------------------------------------------------------------------------|----------|------------------------------------------------------------------------------|
|    | 2        | Side section with 18 pre-installed guide rails and 1 container lock per each |
|    | 2        | Connecting strut                                                             |
|   | 2        | Swivel castor without lock                                                   |
|  | 2        | Swivel castor with lock                                                      |
|  | 4        | Swivel castor buffer                                                         |
|  | 12       | Round pointed screw M8x15                                                    |
|  | 12       | Cap nut M8                                                                   |
|  | 1        | Allen wrench                                                                 |

## Assembly


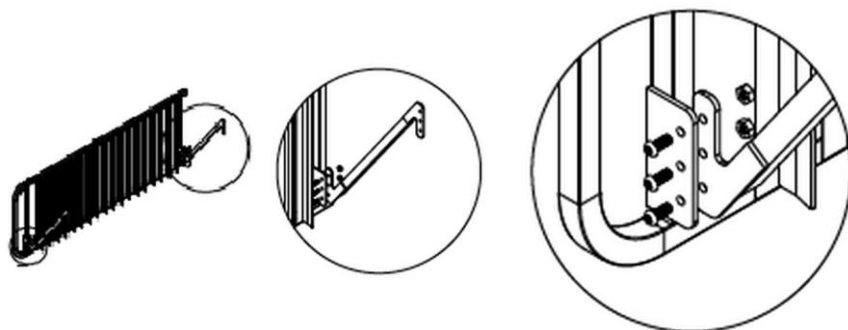


Fig. 1

1. First, mount the two connecting struts on one of the pre-assembled side panels of the shelf trolley.
2. Screw the parts together with 3 M8x15 round pointed screws and 3 M8 cap nuts each with the use of the Allen key (Fig. 1).
3. Attach the connecting struts to the other side part of the shelf trolley as described above.

EN

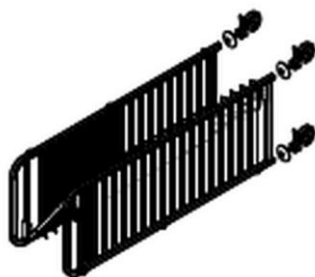

4. Slide a castor buffer over each square tube of the side panels.
5. Screw 4 castors into the side parts (Fig. 2).

Make sure that 2 identical swivel castors are attached at the front and at the rear (with or without lock).

Fig. 2

## Setting up

1. Place the shelf trolley on the swivel castors and check that it is stable.
2. You can level the shelf trolley using the swivel castors by turning them in or out.
3. Once you have positioned the shelf trolley in the desired location, secure the 2 swivel castors with the locks to prevent the shelf trolley from being accidentally moved or tipped over.

## Loading shelf trolleys / securing containers

1. Place the appropriate containers in the guide rails of the shelf trolley.
2. Secure containers at front and rear with container locks, lifting them slightly up and closing before the containers (see figure to the right).



*Fig. 3*

EN

## Cleaning

### ***ATTENTION!***

**Scrubbing agents, washing agents with solvents or caustic substances may damage the surface.**

For cleaning, use only agents suitable for stainless steel.

1. Clean the shelf trolley regularly with warm water and a soft, damp cloth. Use a mild cleaning agent if necessary.
2. Dry the shelf trolley with a soft cloth.