

18GN2/1



300196

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com

Version: 1.0

Date of preparation: 2025-08-28

Original instruction manual

Technical Specification

Name:	Shelf trolley 18GN2/1
Art. No.:	300196
Material:	stainless steel
Designed for:	2/1 GN 1/1 GN
Number of guide rail pairs:	18
Distance between guide rail pairs, in mm:	80
Max. container depth, in mm:	65
Load-bearing capacity per guide rail pair, max. in kg:	10
Dimensions of work surface (W x D), in mm:	765 x 785
Load-bearing capacity of work surface, max. in kg:	10
Total load-bearing capacity, max. in kg:	80
Number of swivel castors:	4
Lockable swivel castors:	2
Diameter of castors, in mm:	125
Number of castor buffers:	4
Material of castor buffers:	plastic
Dimensions (W x D x H), in mm:	655 x 835 x 1745
Weight, in kg:	27,4

EN

We reserve the right to implement technical modifications.

Version / features

- Delivery form: self-assembly kit, simple assembly
- Area of application: Clearing away
- Version: GN guide rails
- May be loaded from both sides: Yes
- Worktop: Yes
- With handles: No
- The set does not include:
 - GN containers
 - sheets
 - grates
- Features:
 - one container lock per front and rear of the trolley
 - square tubing frame, 26 x 26 mm section

Intended Use

EN

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Clearing away and transporting food in suitable containers.

Scope of Delivery / Part Name

1. Unpack the shelf trolley and remove the packing material pursuant to environmental regulations.
2. Check the delivery for completeness, according to the list below:

Components	Quantity	Name
	2	Side section with 18 pre-installed guide rails and 1 container lock per each
	1	Worktop
	6	Strut
	2	Swivel castor with lock
	2	Swivel castor without lock
	4	Swivel castor buffer
	1	Allen wrench
	16	Square washer
	12	Round pointed screw M8x55

Assembly

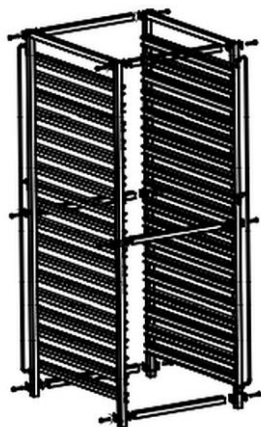


Fig. 1

1. Place one lateral section on the ground.
2. Mount two shorter struts on top of the lateral section of the shelf trolley, using 2 round pointed screws on each. Manually tighten the round pointed screws.
3. Next, mount four struts in the middle section and at the bottom. Remember to put one square washer between the lateral section and each round pointed screw.



4. Manually tighten the round pointed screws.

EN

5. Mount six struts on the second lateral section, using square washers and round pointed screws, as described above (Fig. 1).

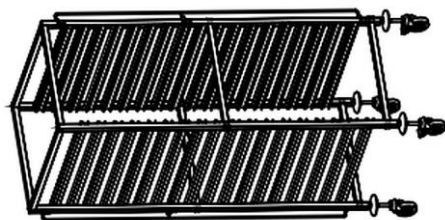


Fig. 2

6. Place the shelf trolley on its side.
7. Slide a castor buffer over each square tube of the lateral sections.
5. Screw 4 swivel castors into the lateral sections.

Make sure that 2 identical swivel castors are attached at the front and at the rear (with or without lock) (Fig. 4).

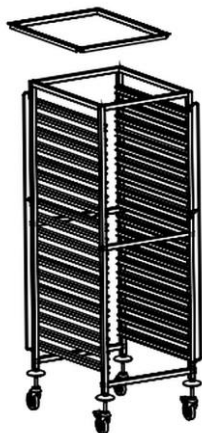


Fig. 3

8. Place the shelf trolley on the swivel castors.
9. Put the worktop on top of the shelf trolley frame.
10. Finally, tighten all round pointed screws with the Allen wrench.

Setting up

1. Place the shelf trolley on the swivel castors and check that it is stable.
2. You can level the shelf trolley using the swivel castors by turning them in or out.
3. Once you have positioned the shelf trolley in the desired location, secure the 2 swivel castors with the locks to prevent the shelf trolley from being accidentally moved or tipped over.

EN

Loading shelf trolleys / securing containers

1. Place the required number of suitable containers in the rail guides.
2. Secure containers at front and rear with container locks, lifting them slightly up and closing before the containers (see figure to the right).



Fig. 4

Cleaning

ATTENTION!

Scrubbing agents, washing agents with solvents or caustic substances may damage the surface.

For cleaning, use only agents suitable for stainless steel.

1. Clean the shelf trolley regularly with warm water and a soft, damp cloth. Use a mild cleaning agent if necessary.
2. Dry the shelf trolley with a soft cloth.