


20GN1/1

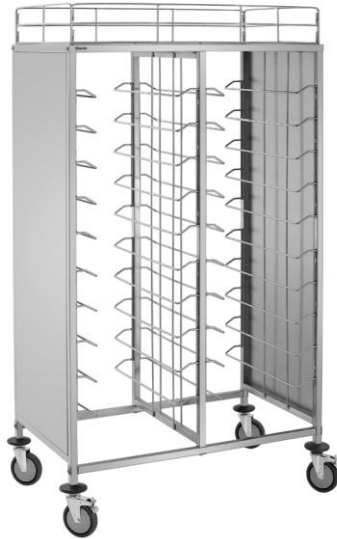

300210

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com

Version: 1.0

Date of preparation: 2025-09-02

Original instruction manual

Technical Specification

Name:	Shelf trolley 20GN1/1
Art. No.:	300210
Material:	stainless steel
Designed for:	1/1 GN 1/2 GN 1/3 GN 2/3 GN
Number of guide rail pairs:	20
Distance between guide rail pairs, in mm:	120
Max. container depth, in mm:	100
Load-bearing capacity per guide rail pair, max. in kg:	10
Dimensions of work surface (W x D), in mm:	950 x 540
Railing height, in mm:	160
Load-bearing capacity of work surface, max. in kg:	10
Total load-bearing capacity, max. in kg:	80
Number of swivel castors:	4
Locking swivel castors:	2
Diameter of castors, in mm:	125
Number of castor buffers:	4
Material of castor buffers:	plastic
Dimensions (W x D x H), in mm:	1065 x 695 x 1815
Weight, in kg:	43,2

We reserve the right to implement technical modifications.

Version / features

- Delivery form: self-assembly kit, simple assembly
- Area of application: Clearing away
- Version: GN guide rails
- May be loaded from both sides: Yes
- Worktop: Yes, with railing
- With handles: No
- The kit does not include:
 - GN containers
 - sheets
 - grates

Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.



Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Clearing away and transporting food in suitable containers.

Scope of Delivery / Part Name

1. Unpack the shelf trolley and remove the packing material pursuant to environmental regulations.
2. Check the delivery for completeness, according to the list below:

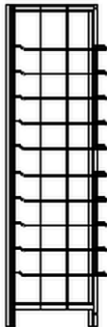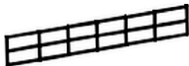Components	Quantity	Name
	2	Lateral section with 10 pre-installed guide rails for GN containers and a lateral wall
	1	Middle section with 10 pre-installed guide rails for GN containers on both sides
	1	Railing shelf
	2	Front railing
	2	Lateral railing
	4	Strut

	1	Allen wrench
	12	Round pointed screw M8x55
	12	Square washer
	4	Swivel castor buffer
	2	Swivel castor with lock
	2	Swivel castor without lock
	4	M5 nut

Assembly

EN

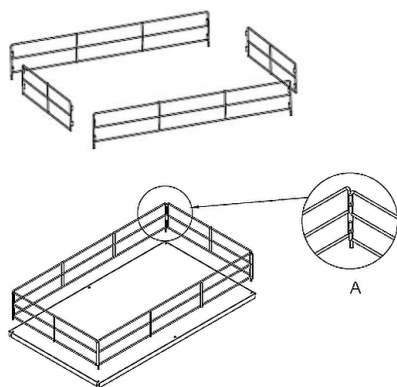


Fig. 1

1. First, assemble the railings for the top shelf. Connect the front and side parts of the railing with the use of mounting screws (Fig. 1, A).
2. Put the assembled railings on the shelf. Fix the railing to the shelf using M5 nuts.

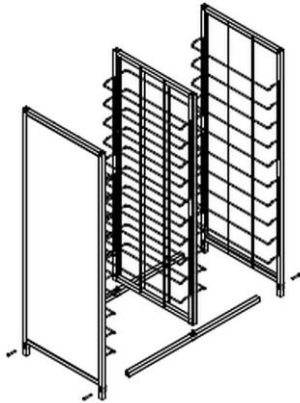


Fig. 2


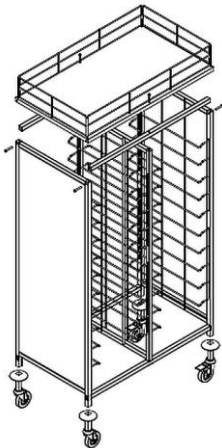


Fig. 3

3. Fix 2 struts (at the bottom) to the lateral section of the shelf trolley.
4. Place a square washer between the lower strut and the lateral section, and between the lateral section and each round pointed screw.

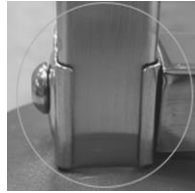

5. Manually tighten the round pointed screws.
6. Connect 2 struts (at the bottom) with the middle section and the second lateral section, using washers and round pointed screws, as described above.
7. Slide one swivel castor buffer onto each square tubing of the lateral sections.
8. Finally, screw the swivel castors into square tubing of the lateral sections.
Make sure that 2 identical swivel castors are attached at the front and at the rear (with or without lock).
9. Place the shelf trolley on the swivel castors.
10. Place the shelves assembled with a railing (point 1–2) on the shelf trolley frame.
11. Screw the shelf with railing to the trolley frame.
12. Tighten the round pointed screws with the Allen wrench.

Setting up

1. Place the shelf trolley on the swivel castors and check that it is stable.
2. You can level the shelf trolley using the swivel castors by turning them in or out.
3. Once you have positioned the shelf trolley in the desired location, secure the 2 swivel castors with the locks to prevent the shelf trolley from being accidentally moved or tipped over.

Shelf Trolley Loading

The shelf trolley can be loaded from both sides.

1. Place the required number of suitable containers in the rail guides.
2. Put cups, glasses, etc. on the top shelf.

The shelf railings prevent tableware from falling down.



Fig. 4

EN

Cleaning

ATTENTION!

Scrubbing agents, washing agents with solvents or caustic substances may damage the surface.

For cleaning, use only agents suitable for stainless steel.

1. Clean the shelf trolley regularly with warm water and a soft, damp cloth. Use a mild cleaning agent if necessary.
2. Dry the shelf trolley with a soft cloth.